

# Operating Instructions

## 70079 Praetor B

### 1 Important Instructions

- The locking mechanism works smoothly. No force should be applied. This should be particularly avoided when inserting the key in the lock.
- Opening the lock with a damaged key can result in damage to the lock.
- If damaged or heavily worn out keys are used, the function of the lock cannot be secured. We recommend checking the condition of the keys before using them. Do not use damaged or heavily worn out keys but change them.
- The lock must not be lubricated.
- The lock is designed for use in non condensing humidity.
- The lock may only be installed by specialist personnel and only opened by the manufacturers. Unauthorised opening will lead to invalidation of any warranty claims.
- Only original dormakaba keys are to be used should additional keys be required, as otherwise no warranty claims may be raised.
- The key has to be removed after closing the lock and to be stored in a safe place where unauthorized persons have no access.
- After key loss you have to change the lock immediately.

### 2 Opening

- Insert the key in the keyhole as specified in the table below. Turn the key in the appropriate direction until the stop position is reached (approx. 150°).
- The key cannot be removed when the lock is open.

Lock Installation Position	Key Insertion Position	Direction of Turn
Bolt left, keyhole horizontal	Long bit left	Clockwise
Bolt down, keyhole vertical	Long bit down	Clockwise
Bolt right, keyhole horizontal*	Long bit right	Anti-clockwise
Bolt up, keyhole vertical	Long bit up	Clockwise

\* NB: Lock installation position "bolt right, keyhole horizontal" is only possible in connection with option "left hand lock, opening anti-clockwise" (SLG)!

### 3 Locking

- Turn back the key to its original position.
- Remove the key and keep it in a safe place where it is not accessible to unauthorised persons.