INSTALLATION

9512/9513


Bridge Current Transfer



- 1. Determine the location of the transfer case on the door marking the pocket length and the mounting hole centers.
- 2. Create a 7/8" wide x 5/8" deep pocket for the transfer case in the door.
- 3. Position the transfer case in the pocket to determine the location of the wire hole on the frame.

9512 Instructions

- 4. Drill a 1/2" diameter (maximum) wire hole in the frame as marked and also in the door as shown below.
- 5. Run wire cable through the flexible coil.
- 6. Secure the transfer case to the door with the #8 x 1" wood/sheet metal screws provided.
- 7. Secure the flexible coil to the frame using the #8 x 1" wood/sheet metal screws provided.

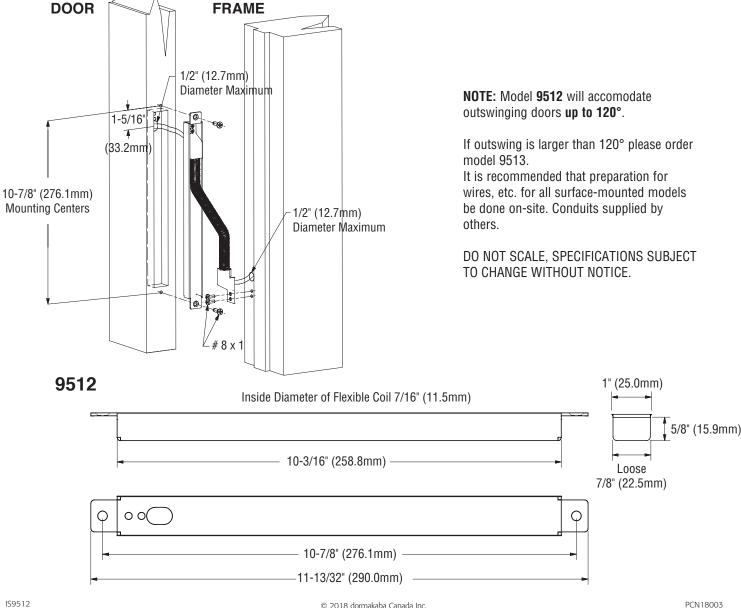

www.rutherfordcontrols.com • Phone: 1.800.265.6630 • Fax: 1.800.482.9795 • Email: sales RCI@dormakaba.com

INSTALLATION

9512/9513

Bridge Current Transfer




1. Determine location of bridge transfer for installation on the door.

- 2. Cut out preparation ON DOOR per diagram (18-7/8" L x 7/8"W x 5/8"D).
- 3. Drill holes for the wire in frame and door as shown (1/2" diameter maximum).
- 4. Run wire cable through the flexible coil.

9513 Instructions

- 5. Insert the transfer case into the pocket cut into door.
- Fasten the transfer case to the door using the two #8 x 1" wood/sheet metal screws provided.
- 7. Fasten upper end of flexible coil into transfer case using two M4x4mm screws provided.
- 8. Fasten the end of the flexible coil to the frame as shown, using 2-#8 x 1" wood/sheet metal screws provided.

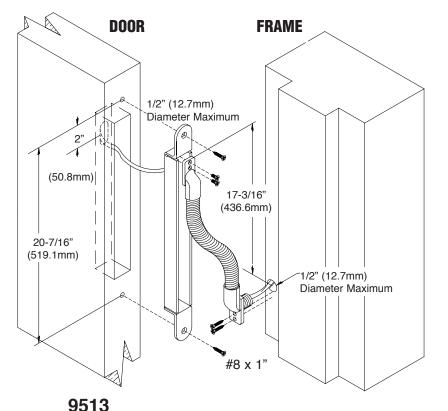

NOTE: Model **9513** will accomodate outswinging doors with a **swing of 120° or greater**.

If swing is smaller than 120° please order model 9512. It is recommended that preparation for wires, etc. for all surfacemounted models be done on-site. Conduits supplied by others.

DO NOT SCALE, SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.

