3590 Multi-Lock Connector

for use with External Reader Antennas or an External Power Supply

RCI).

dormakaba Group

This versatile connector kit, 3590-CKT is required when an external reader antenna is used with multiple locks or an external reader.

The Multi-Lock connector allows the use of the external power supply along with external reader antennas. When using external power supply, remove battery from all locks.

With the connector, multiple locks can be connected together allowing all locks to be unlocked at the same time. The Group feature of the locks must be enabled from the factory.


3590ER-SCKT

 
Surface-mount

External

Reader Antenna



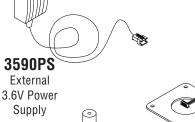






3590ER-RCKT

Thru-mount External Reader Antenna

IS3590ACC

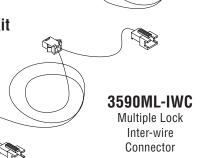

PCN18003 R04-18TG IS3590ACC

INSTALLATION

3590 Multi-Lock Connector


for use with External Reader Antennas or an External Power Supply



This versatile connector kit, 3590-CKT is required when an external reader antenna is used with multiple locks or an external reader.

The Multi-Lock connector allows the use of the external power supply along with external reader antennas. When using external power supply, remove battery from all locks.

With the connector, multiple locks can be connected together allowing all locks to be unlocked at the same time. The Group feature of the locks must be enabled from the factory.

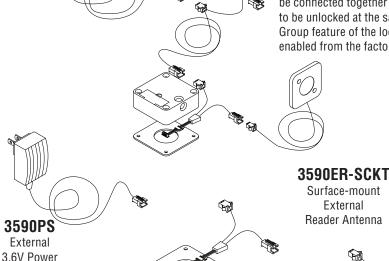


6V Power Supply

3590-CKT Connector Kit
must be used with
these external readers,
Multiple Locks or
external power supply

3590ER-RCKT

 Thru-mount External Reader Antenna



3590ML-IWC Multiple Lock

Inter-wire Connector

> PCN18003 R04-18TG