
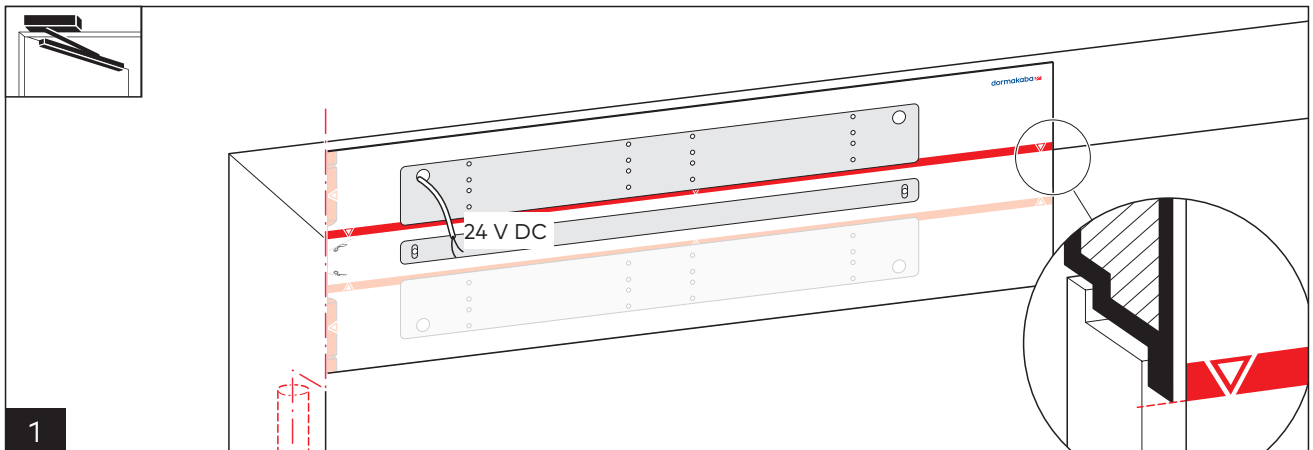
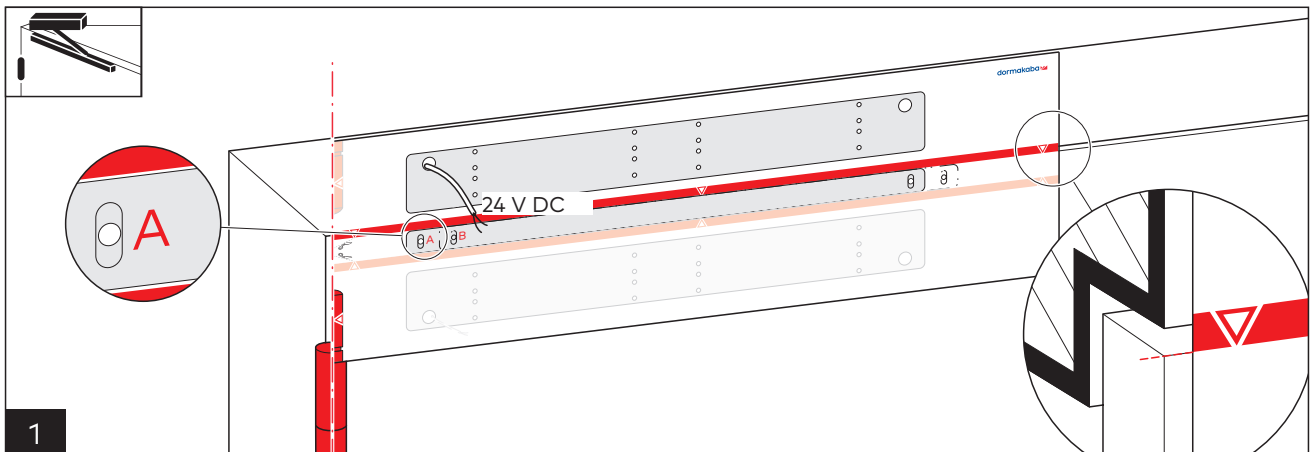
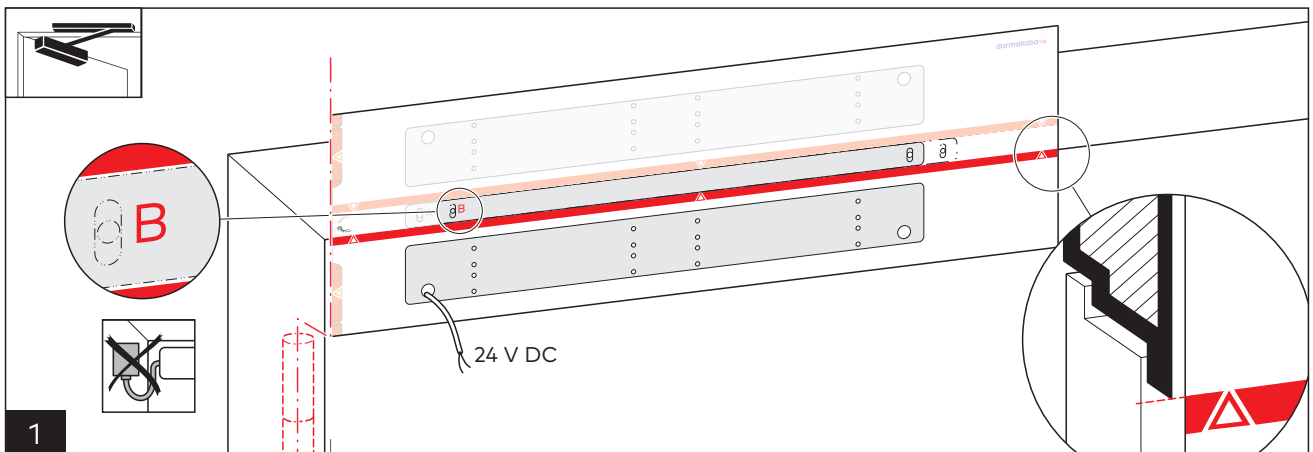






TS 97 FL XEA




Montageanleitung



WN 059772 45532/14774

2019-12


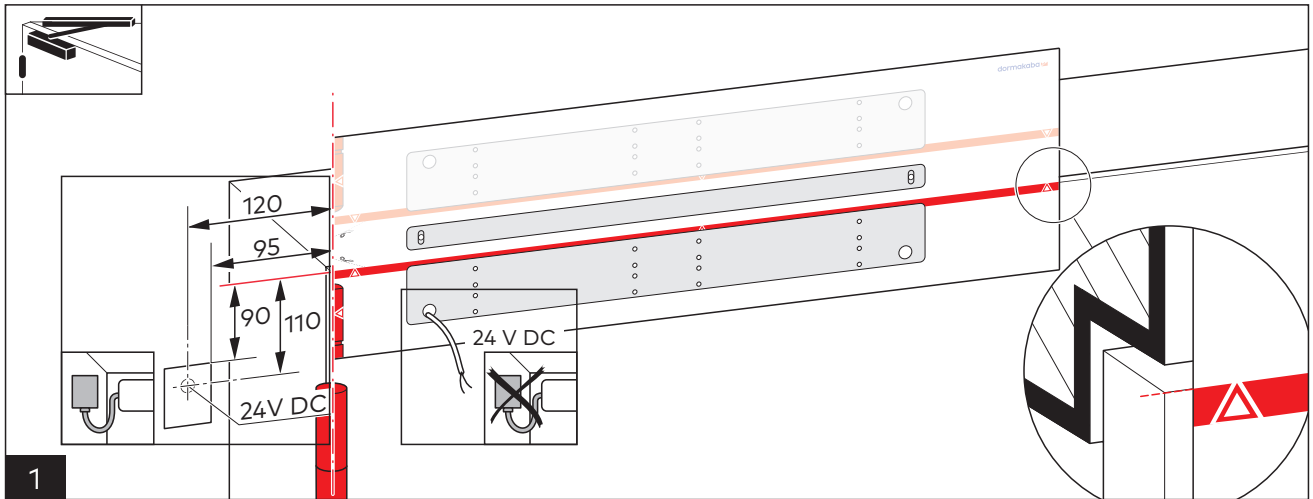


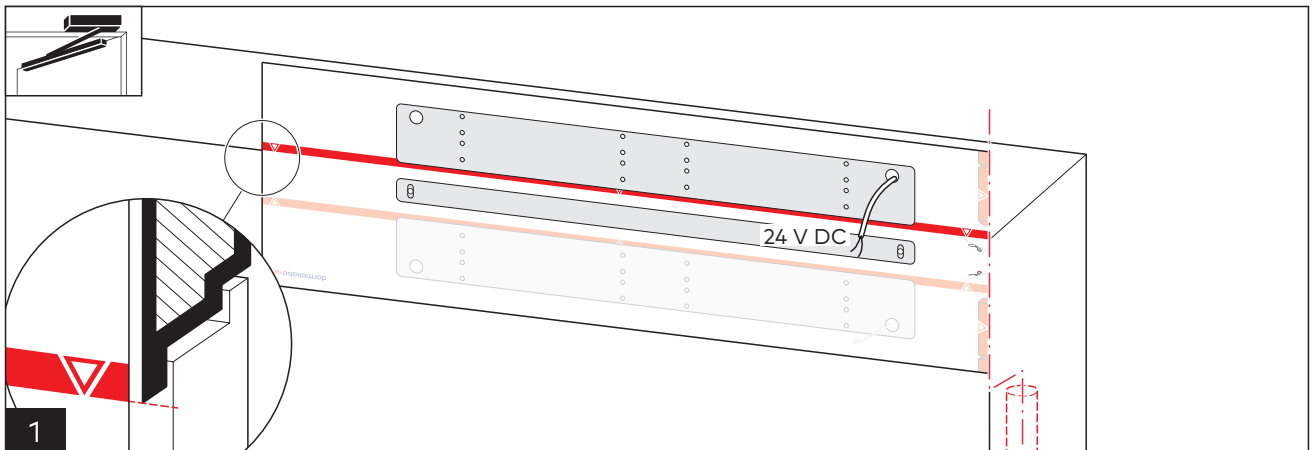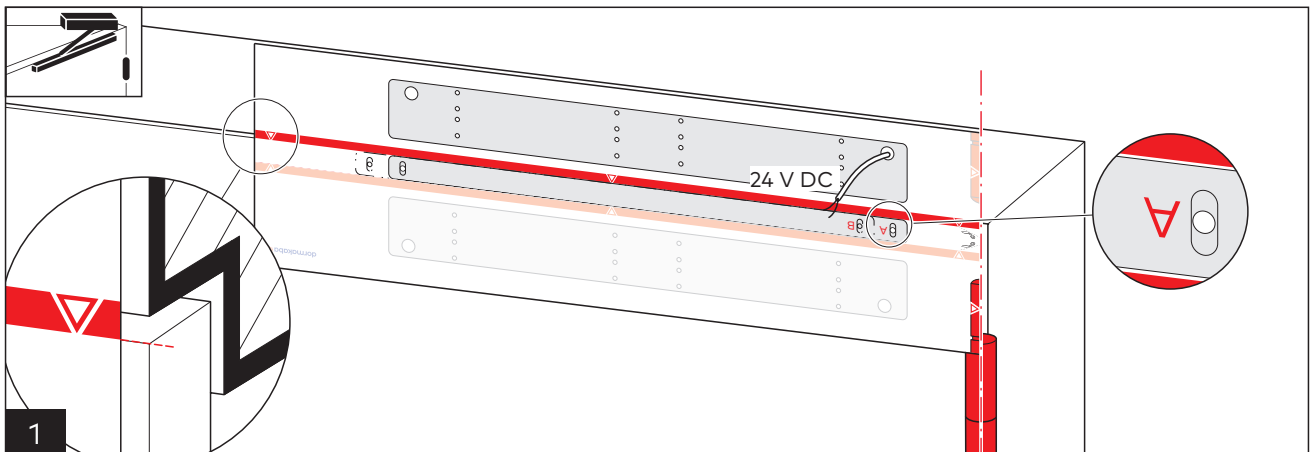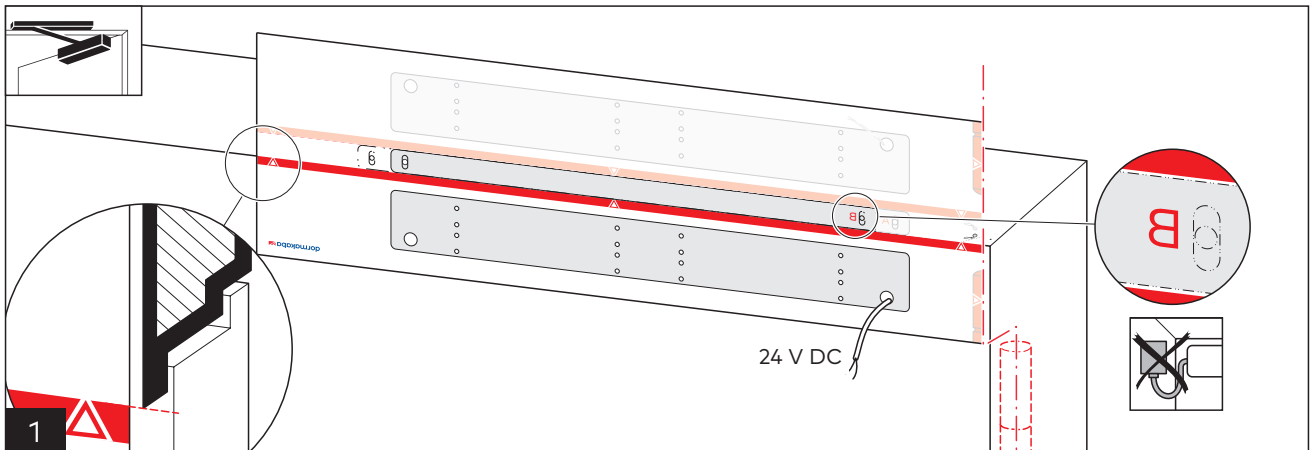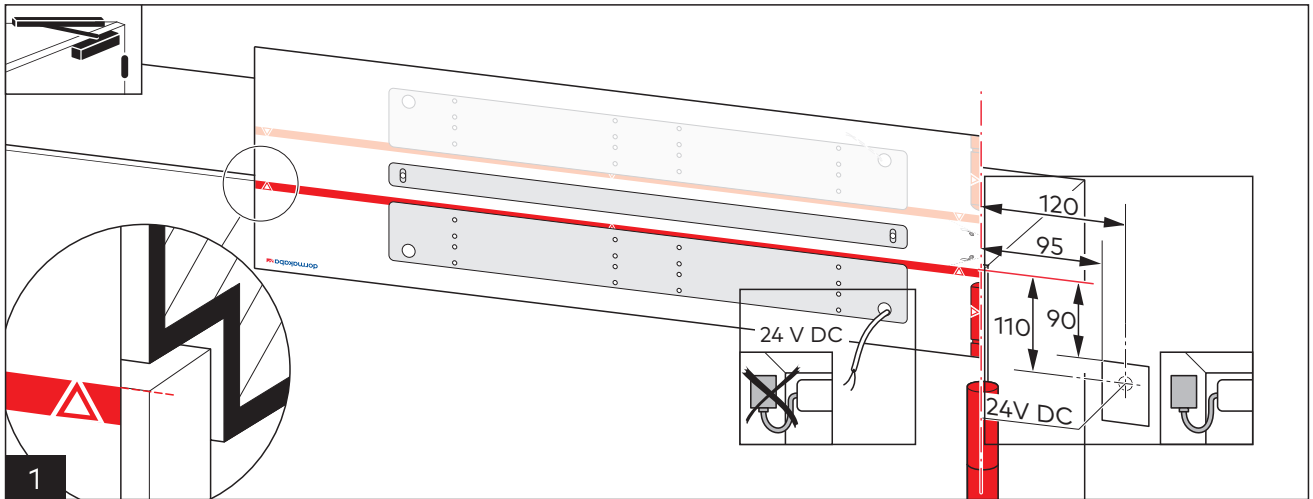

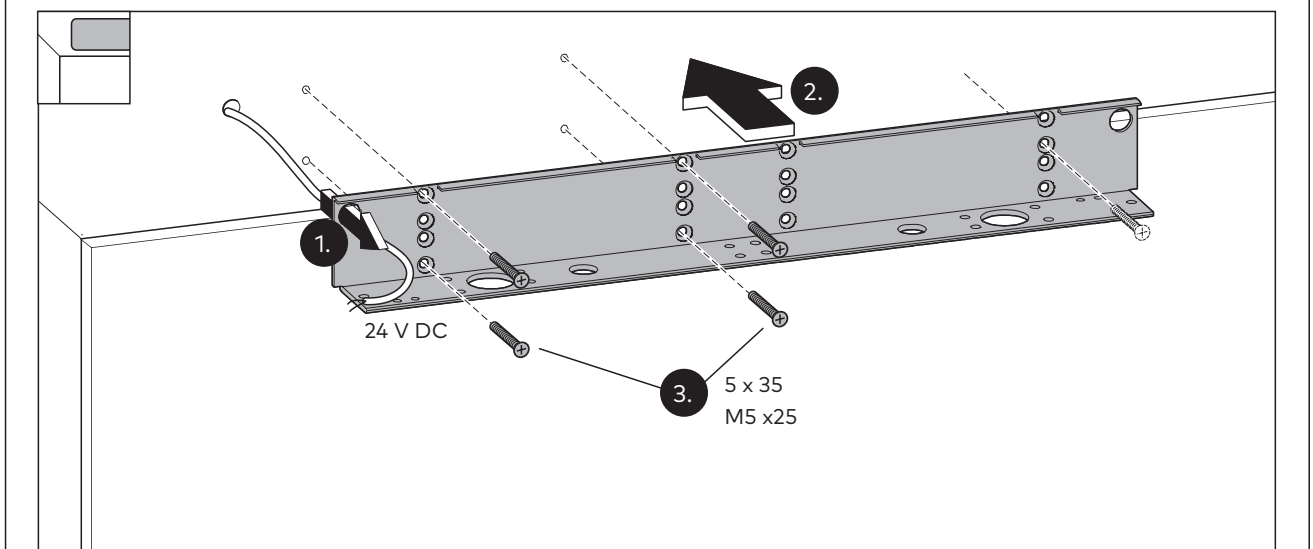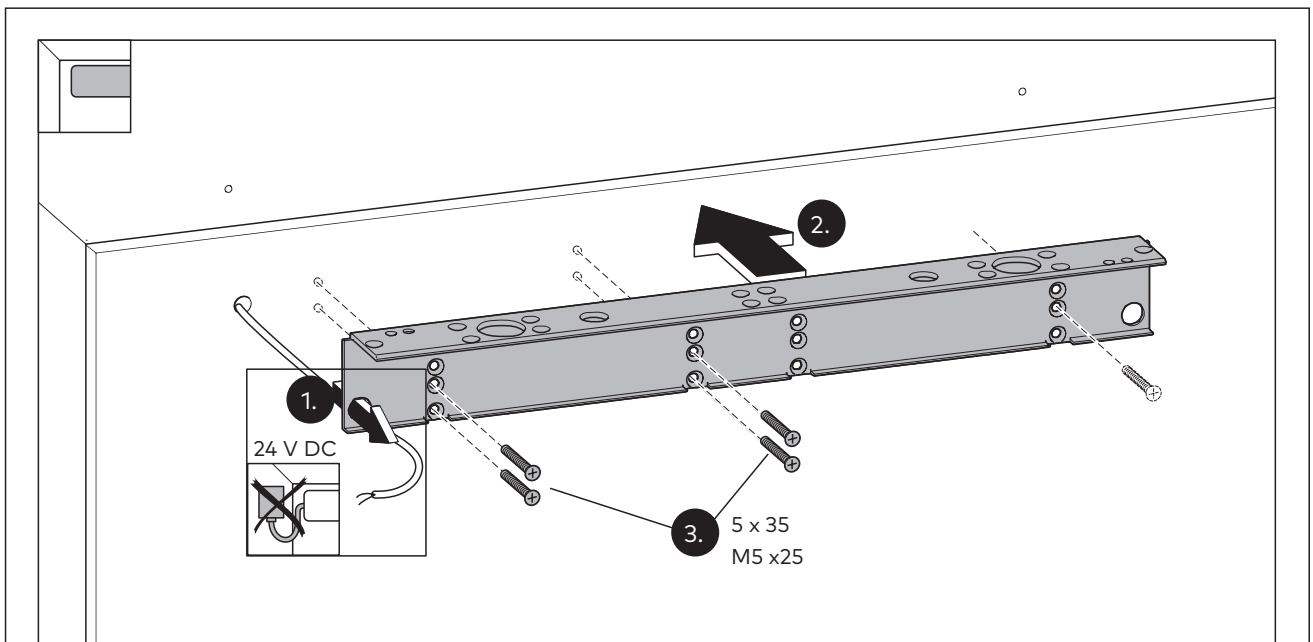
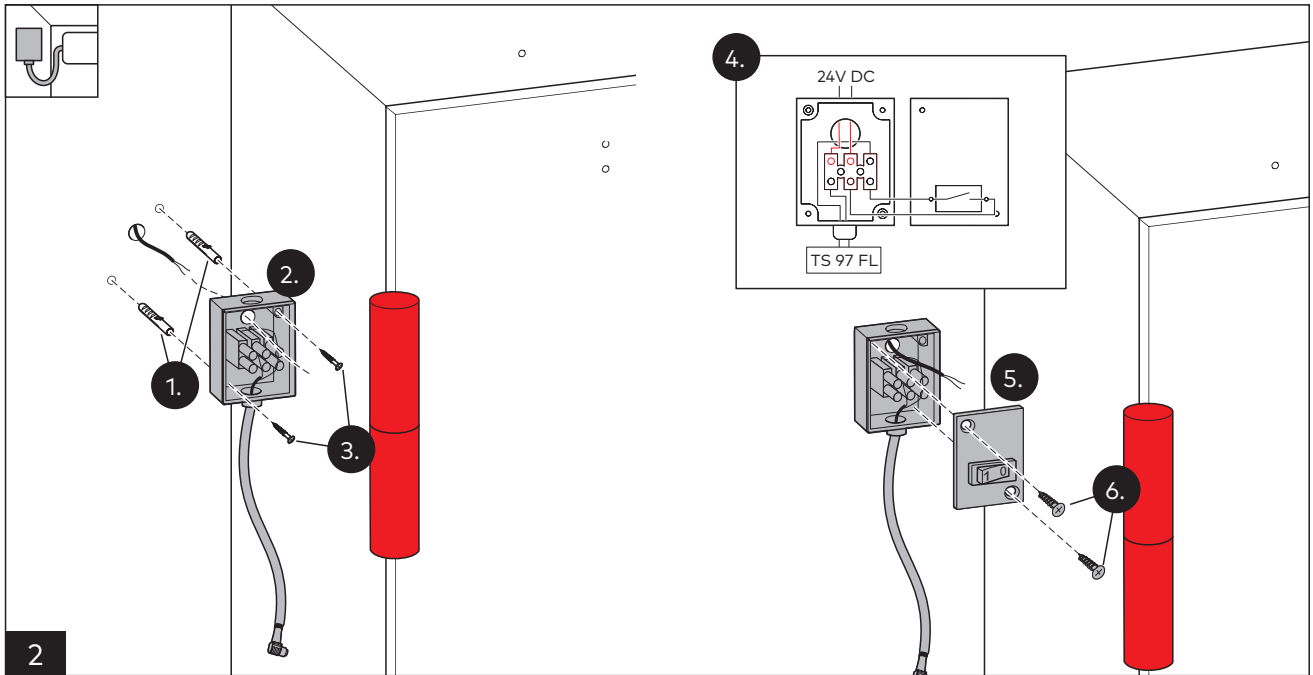


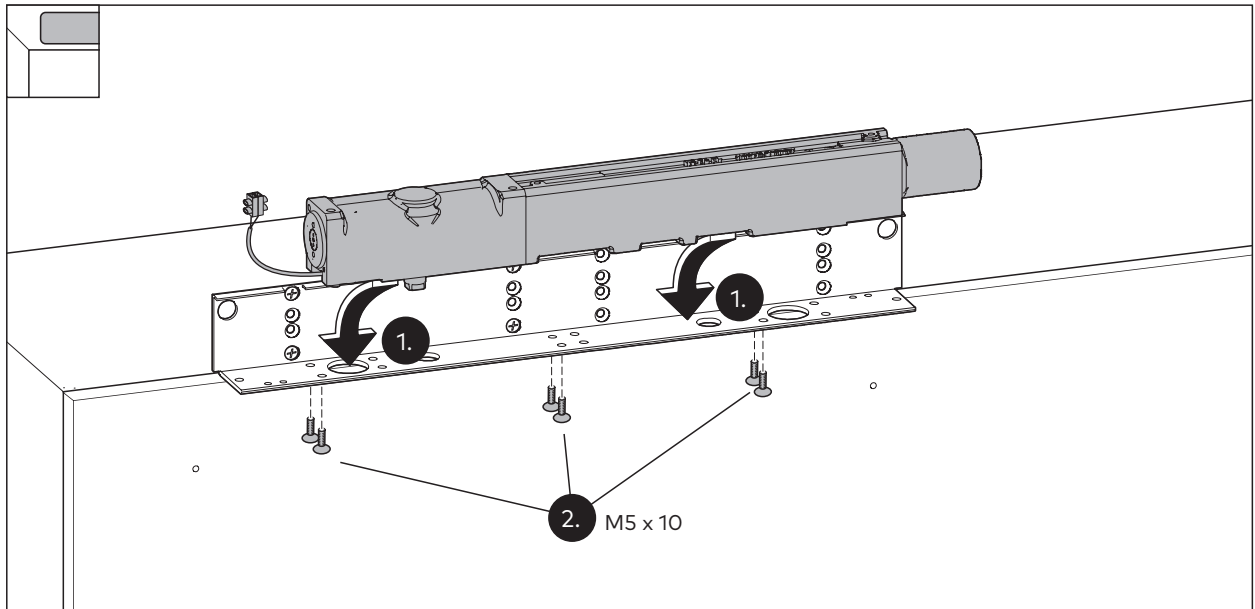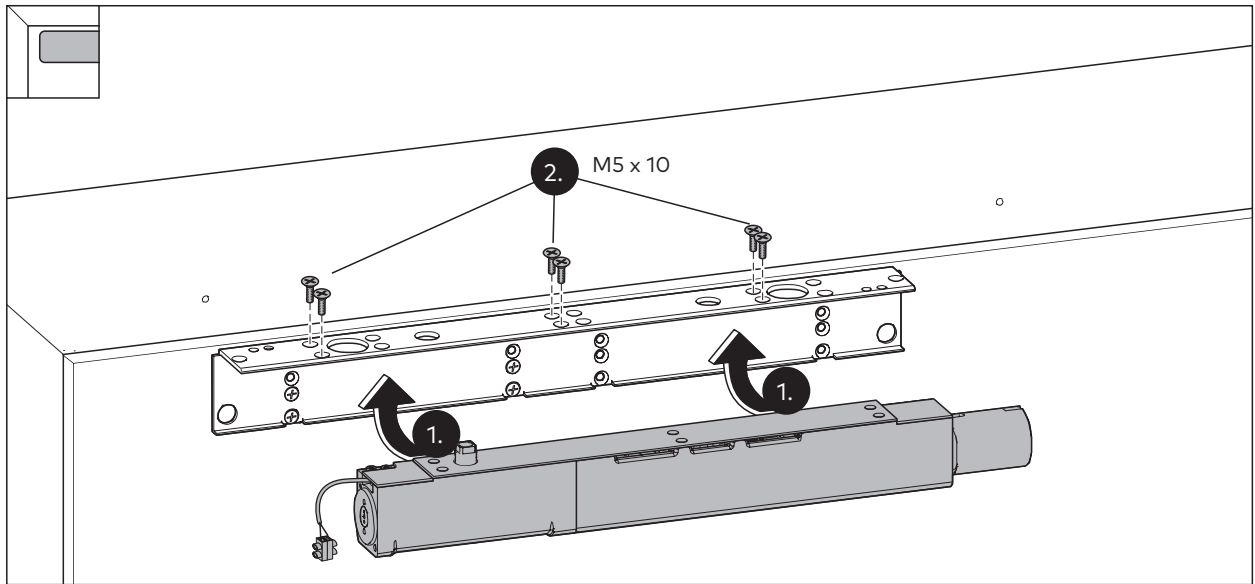



4

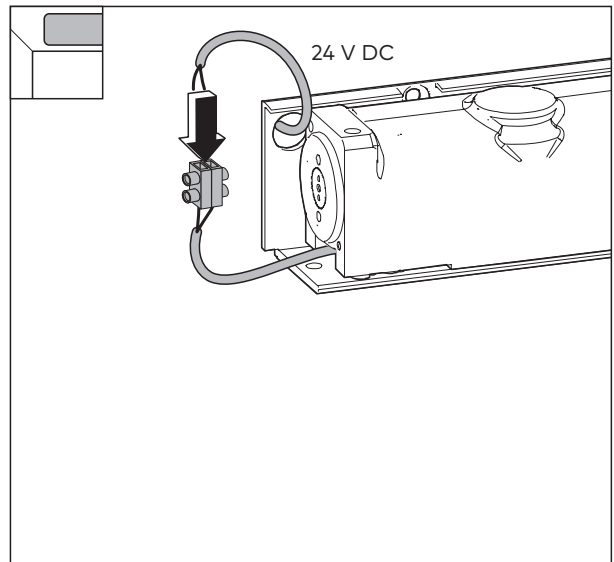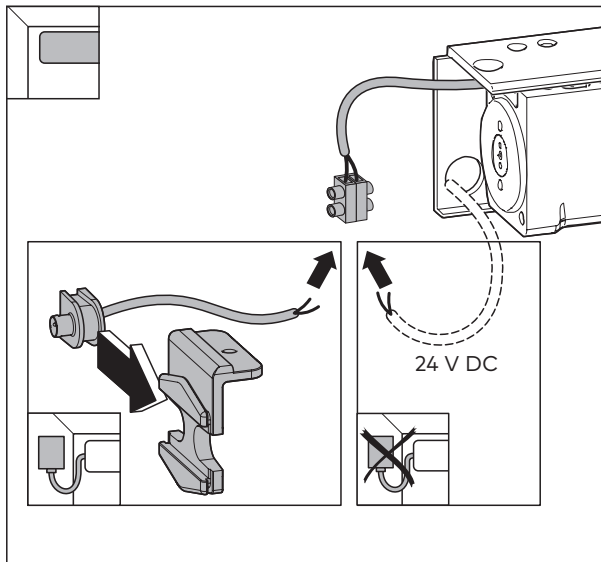


5

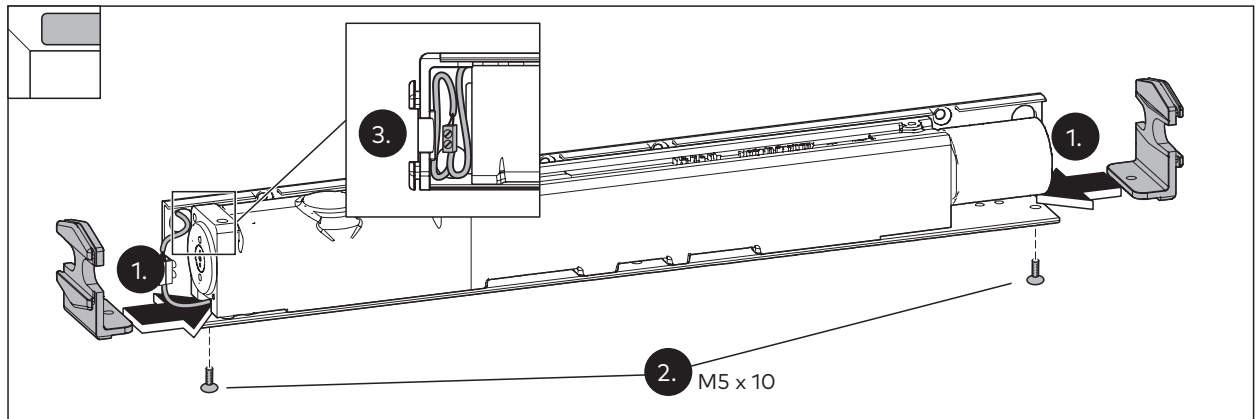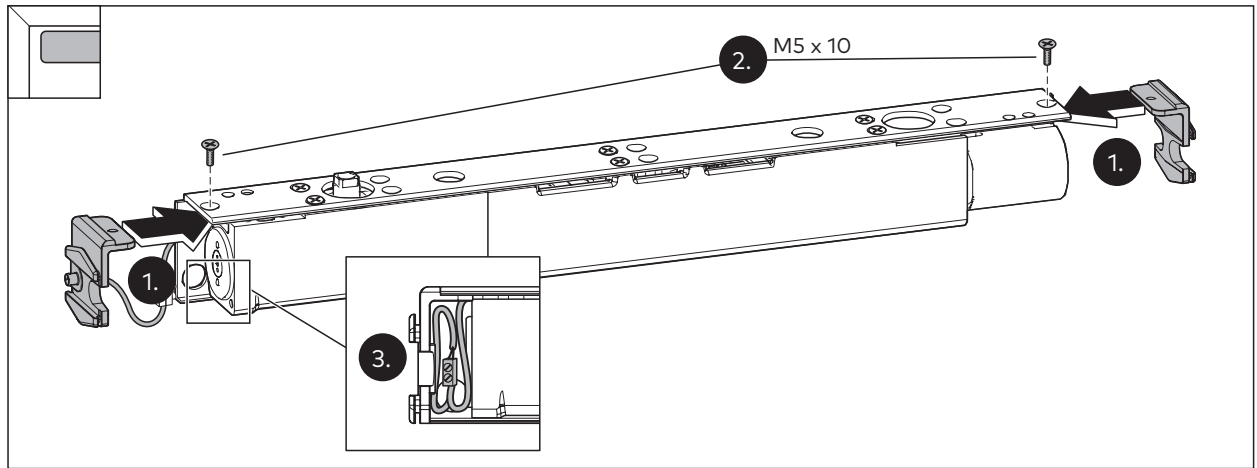



6

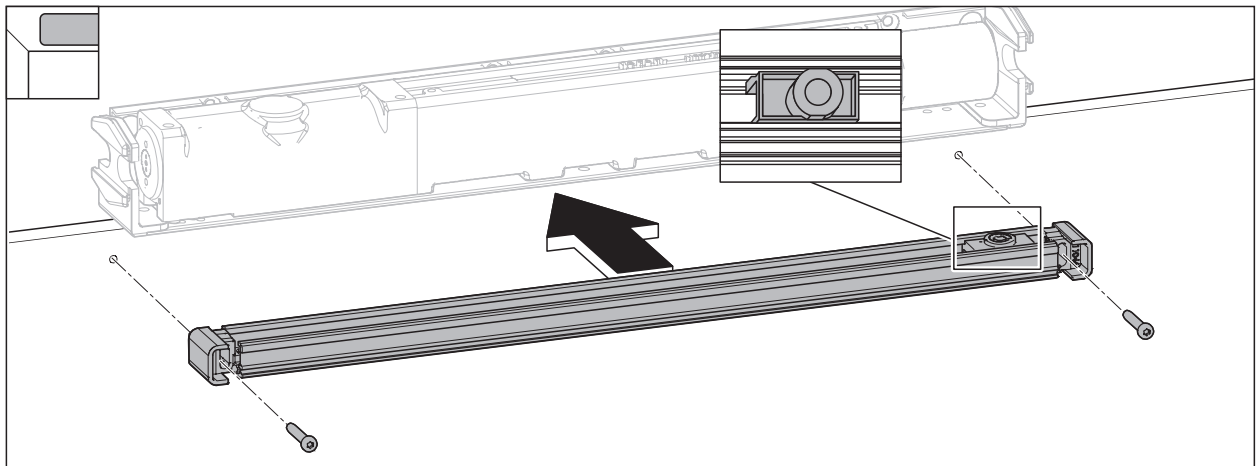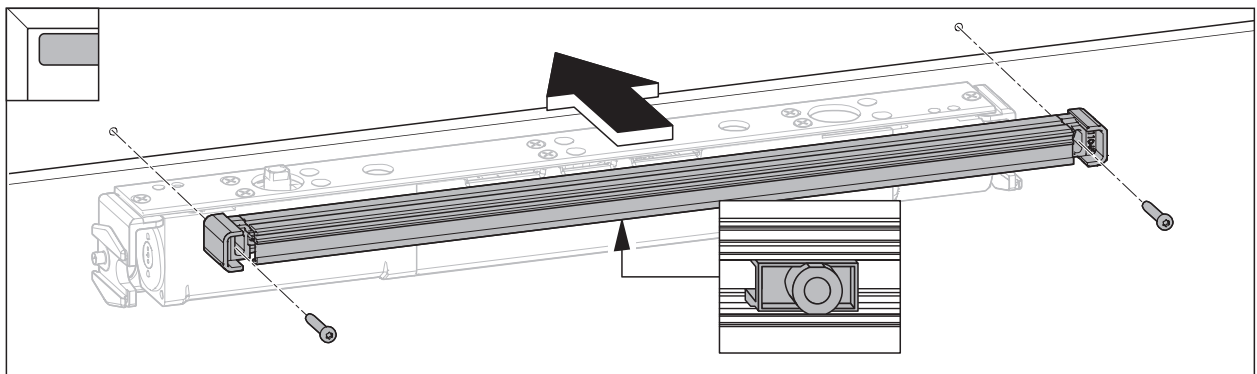





7

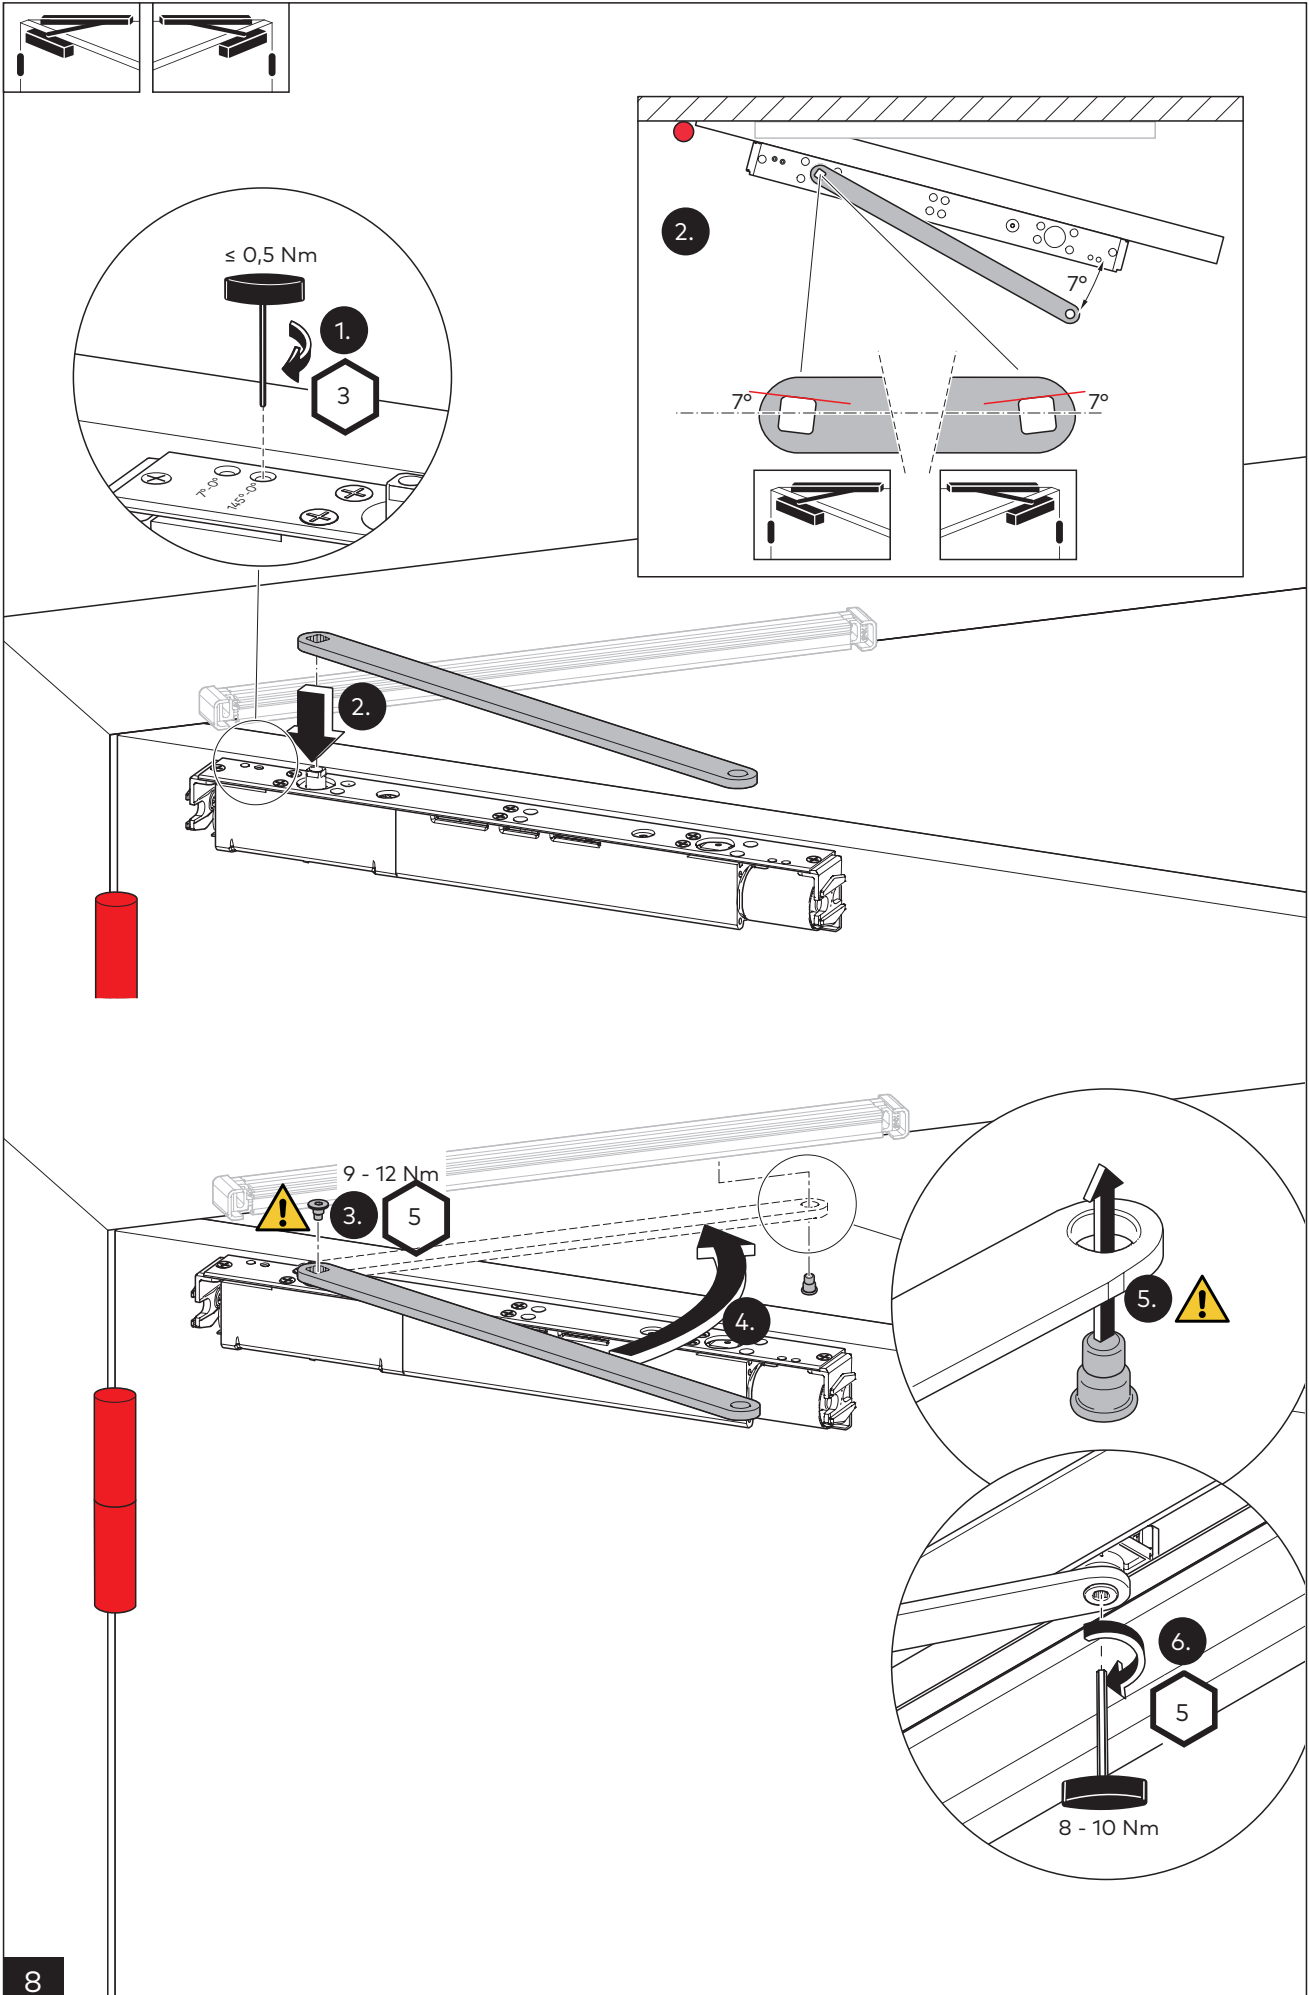


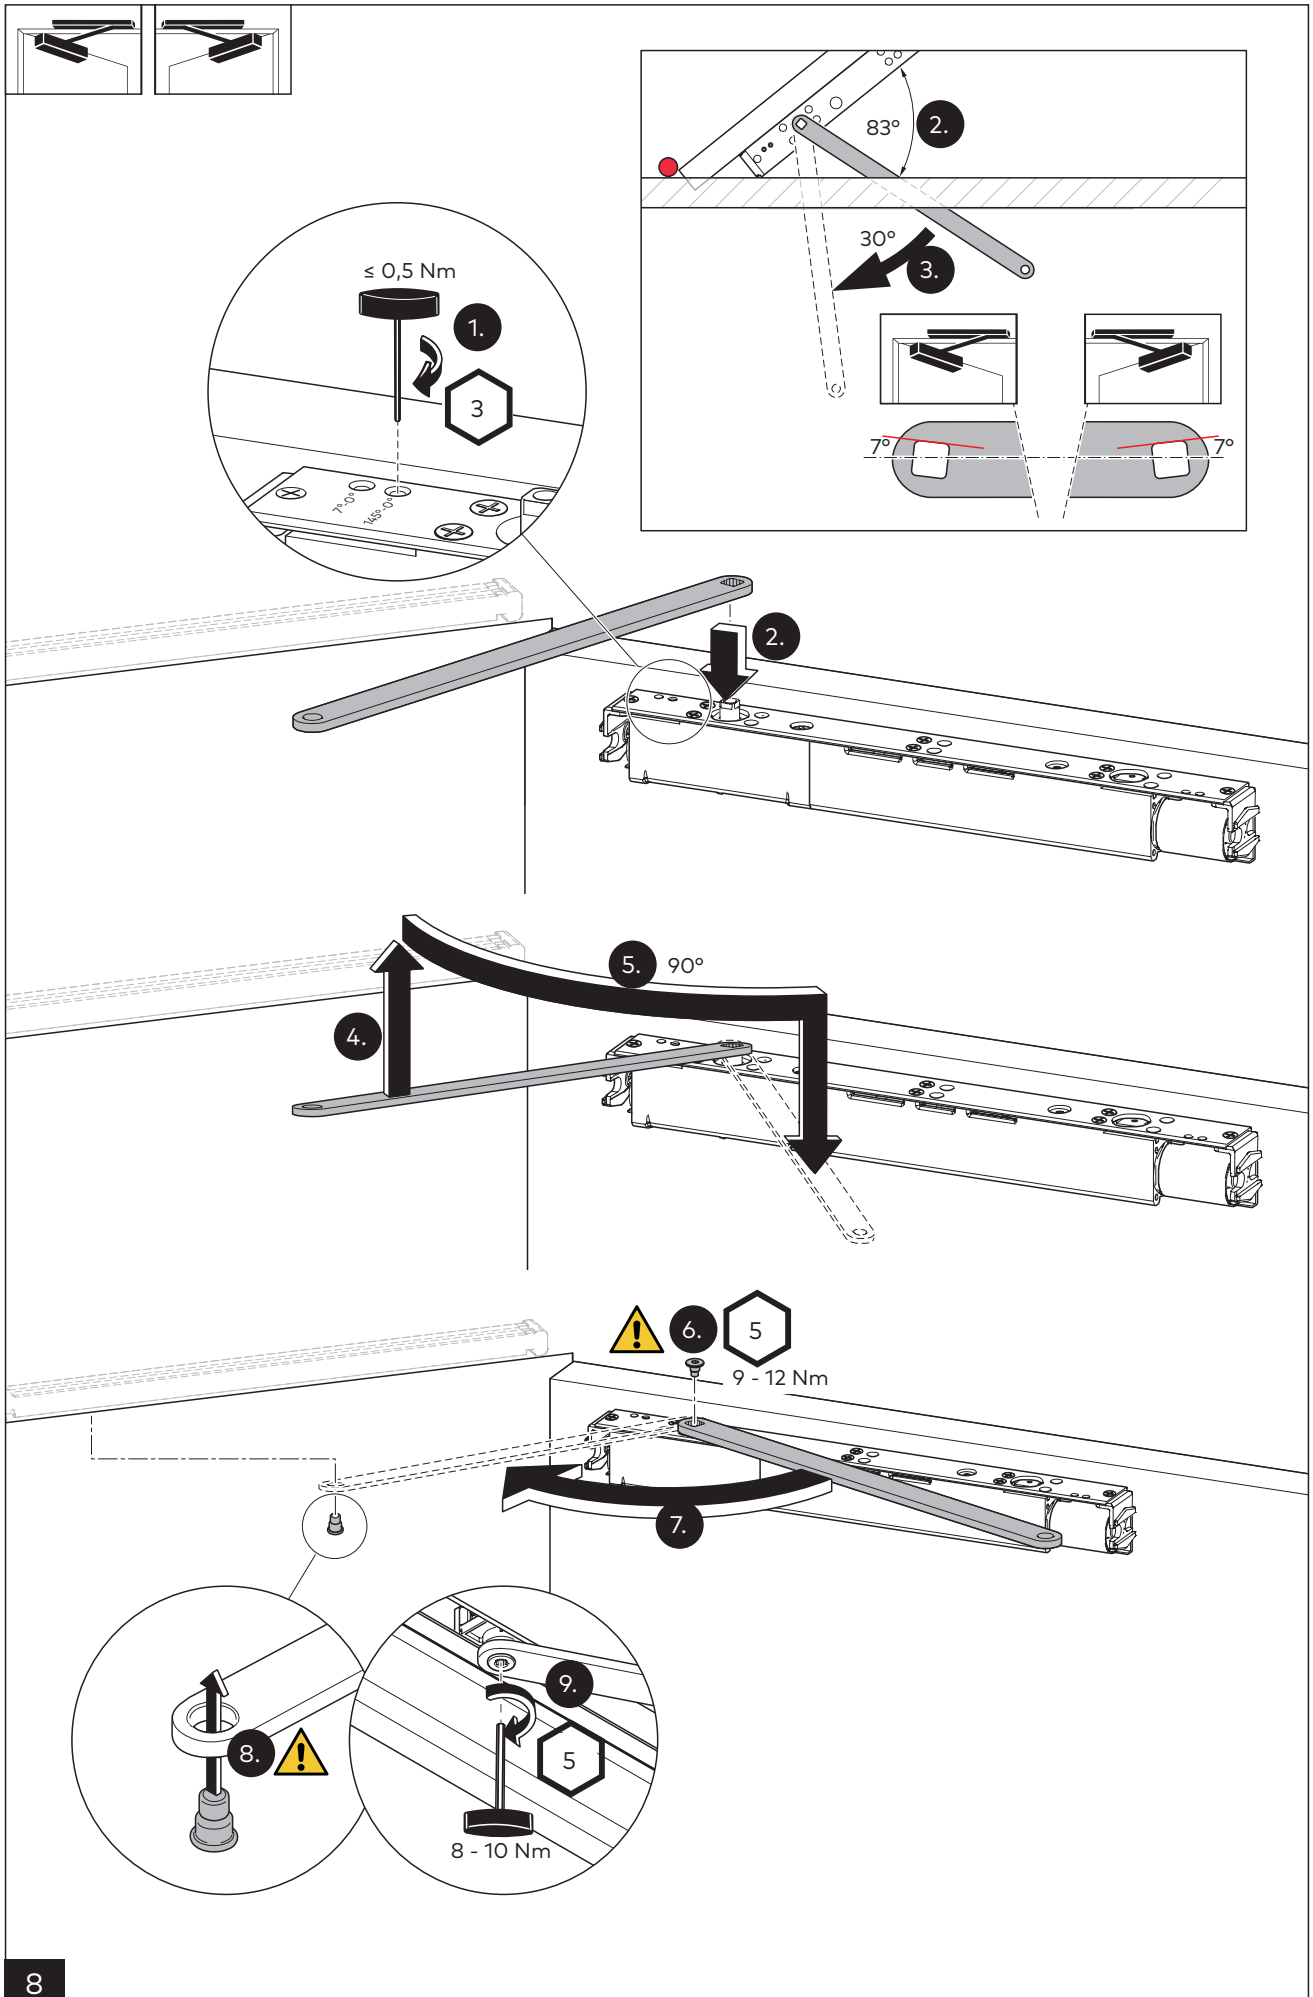

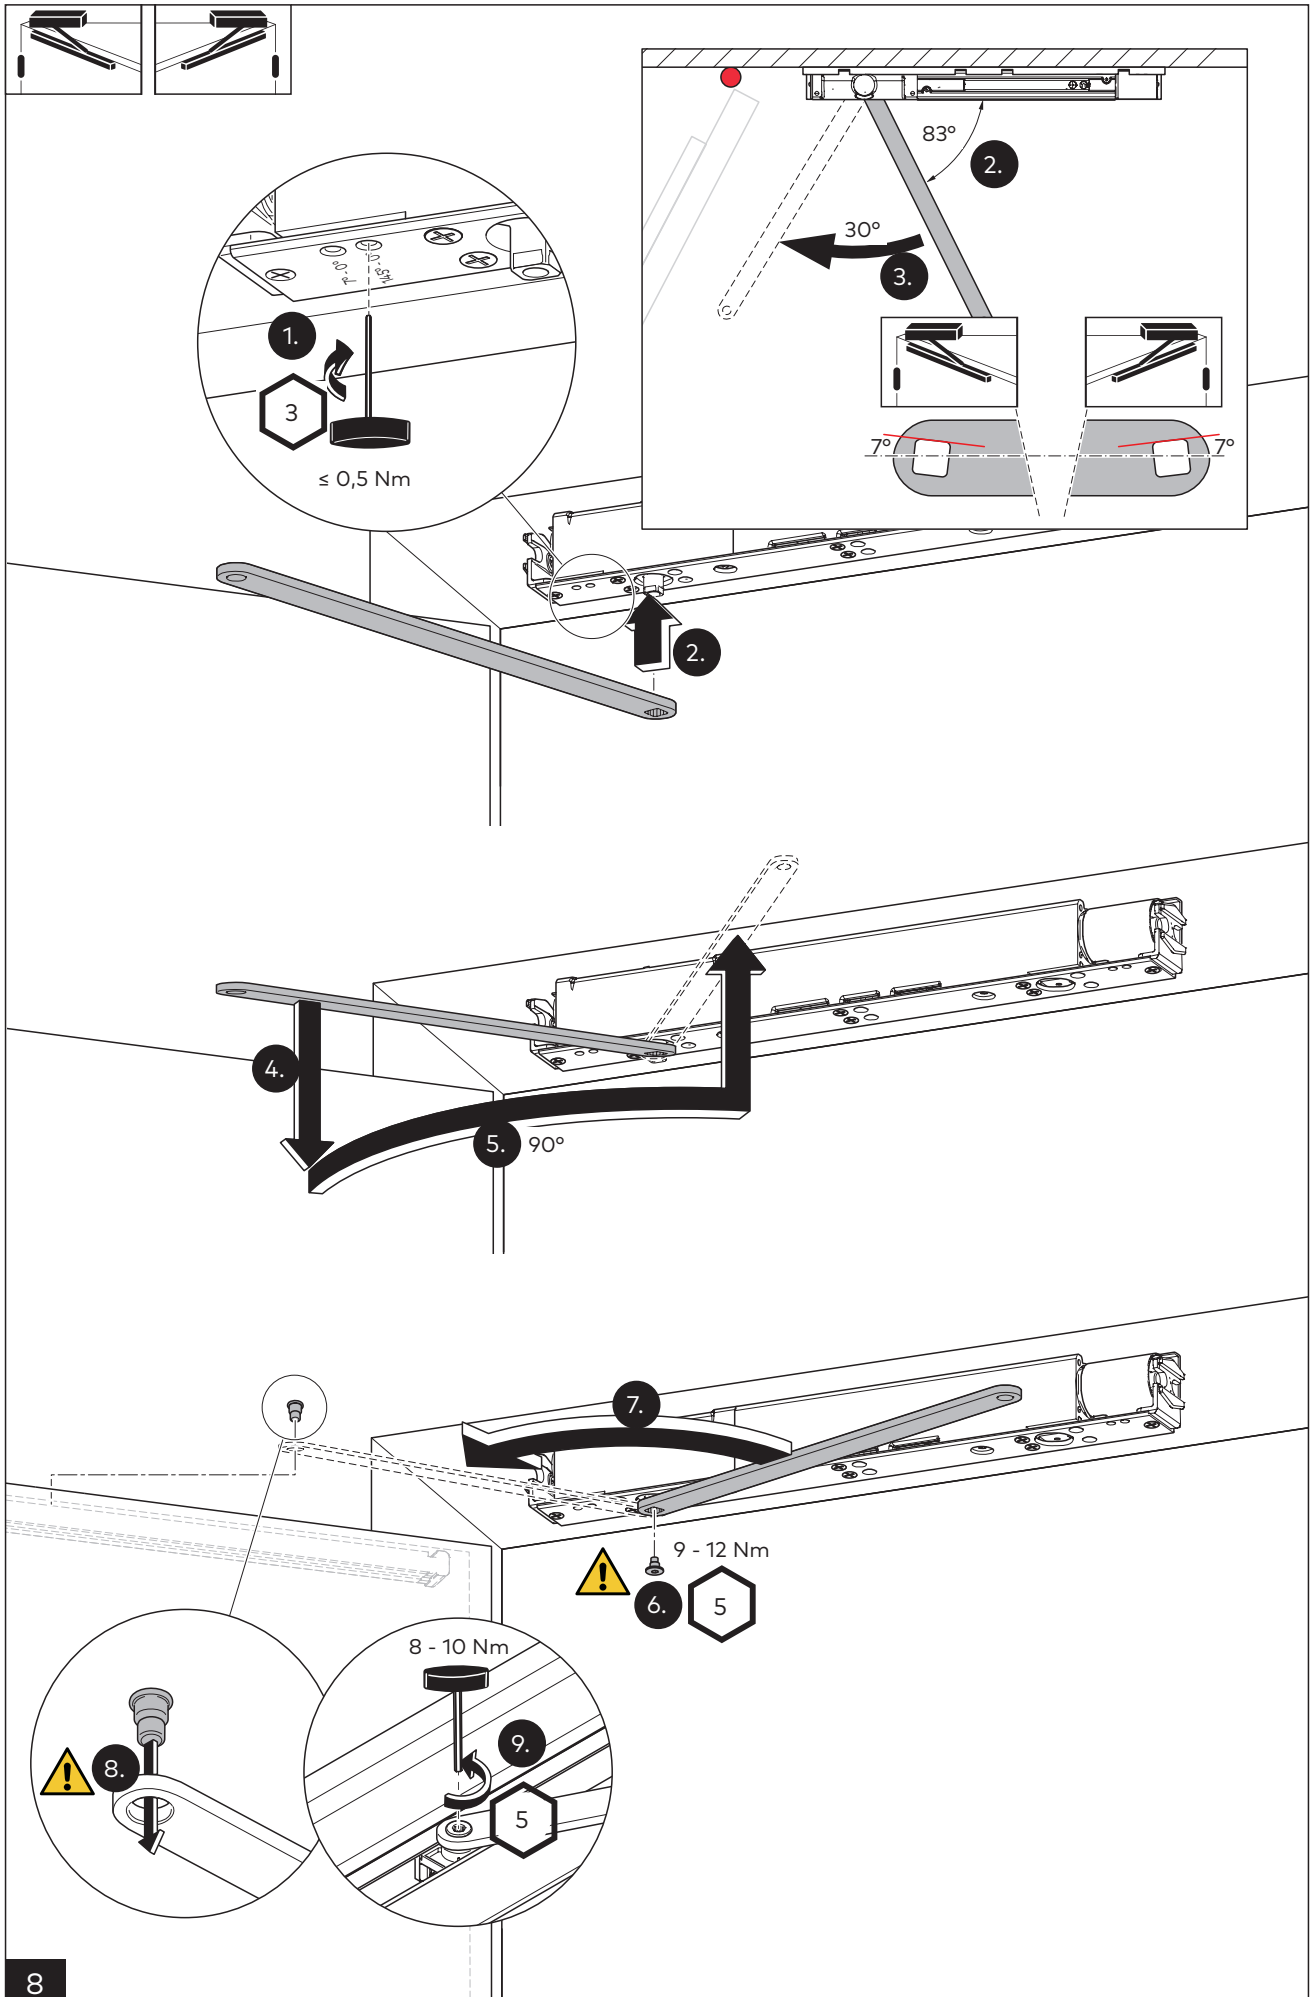


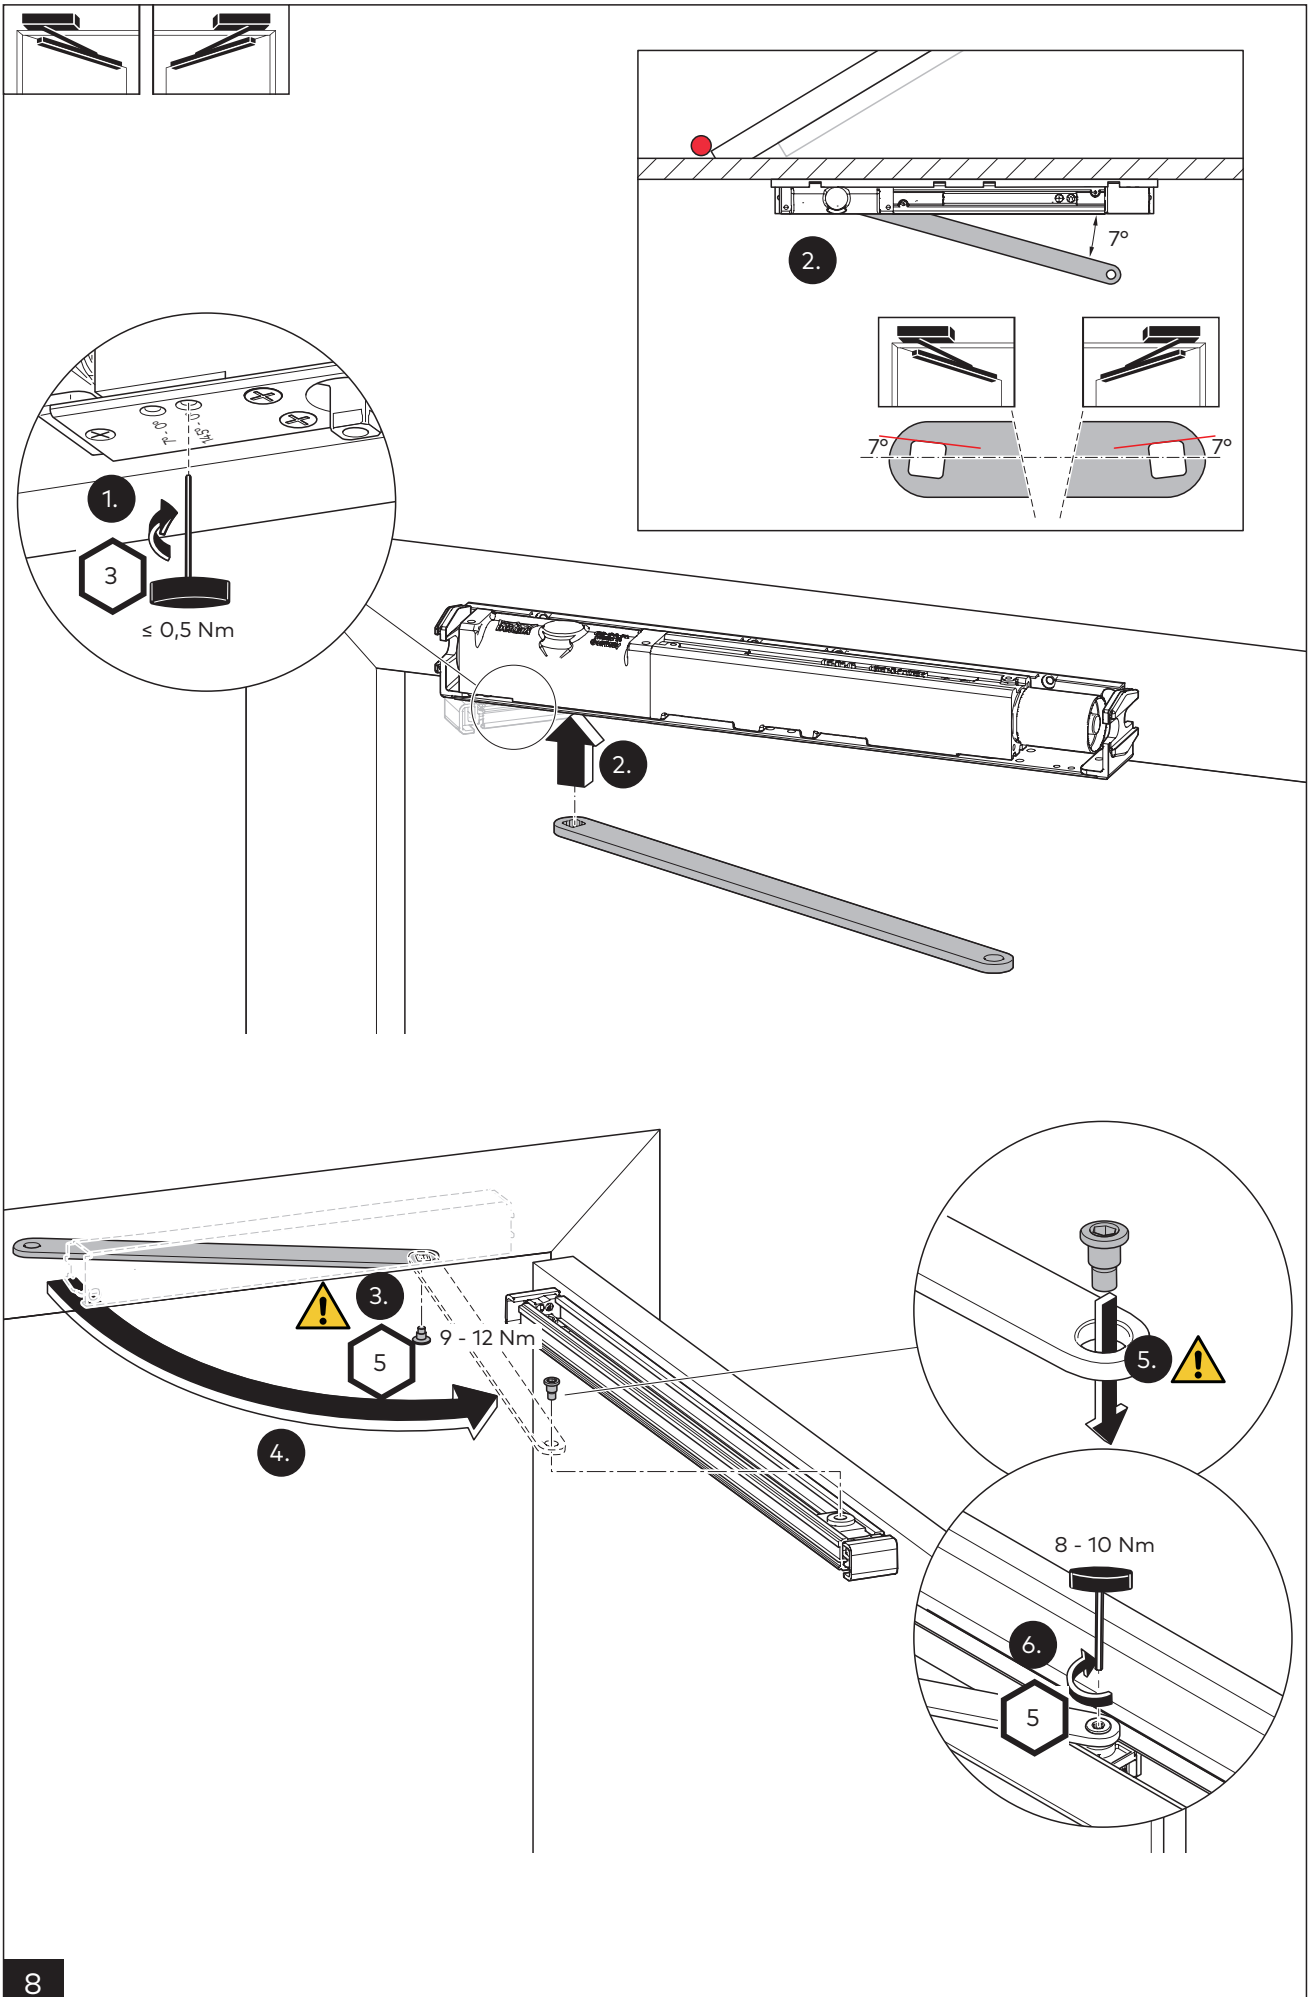

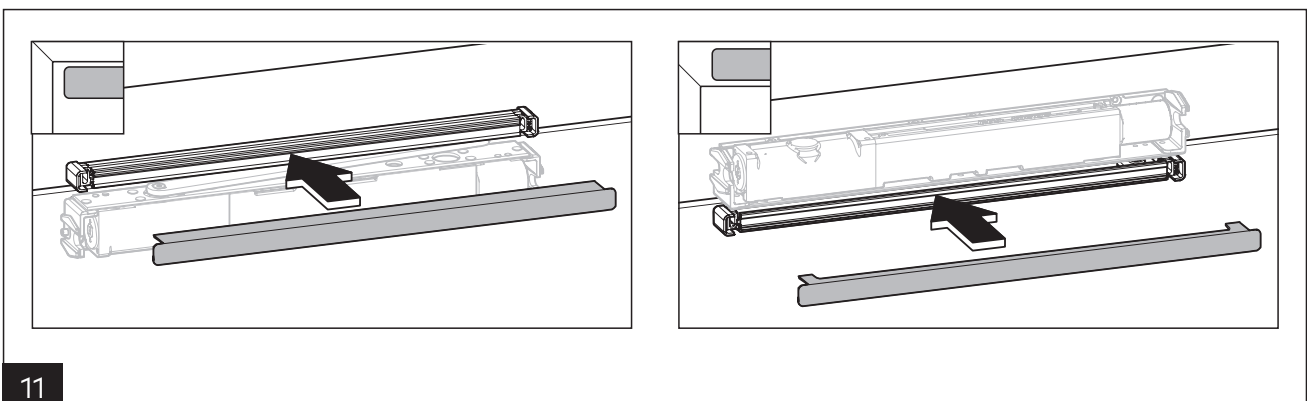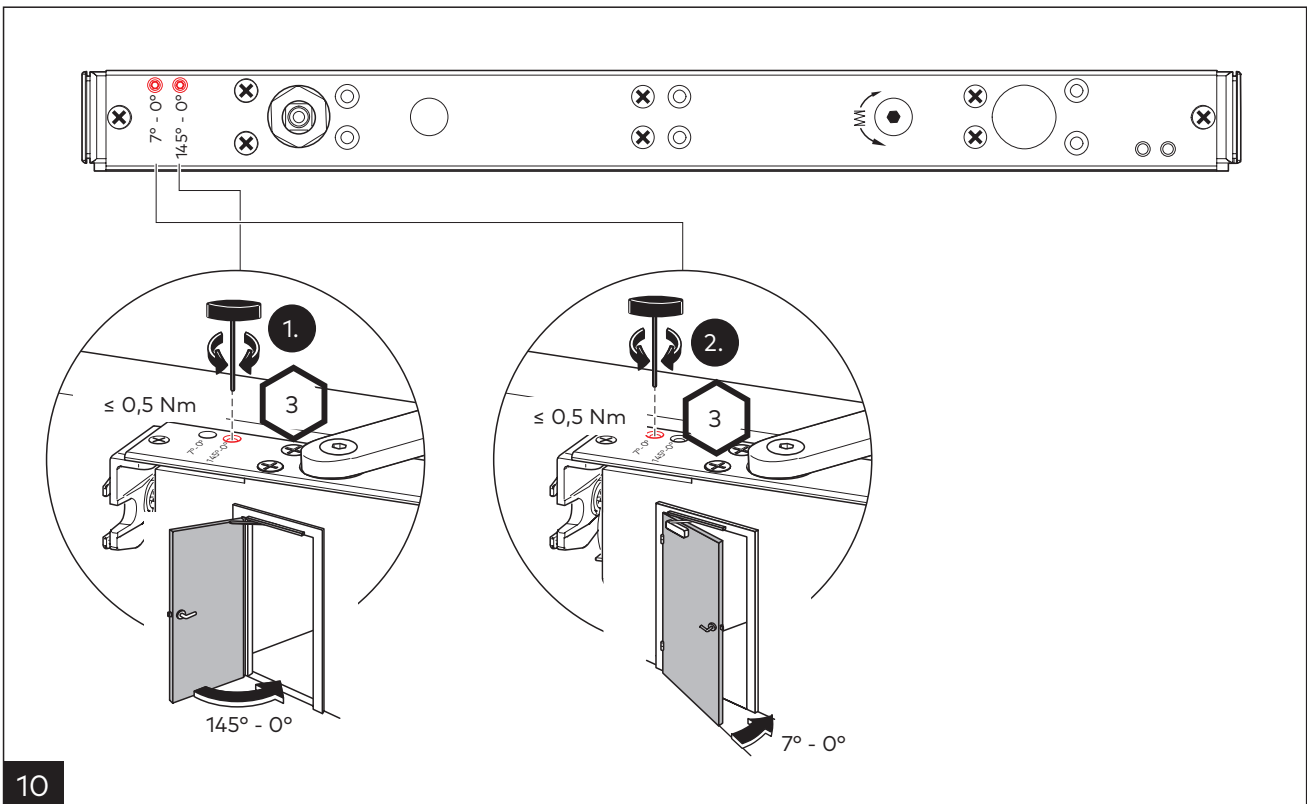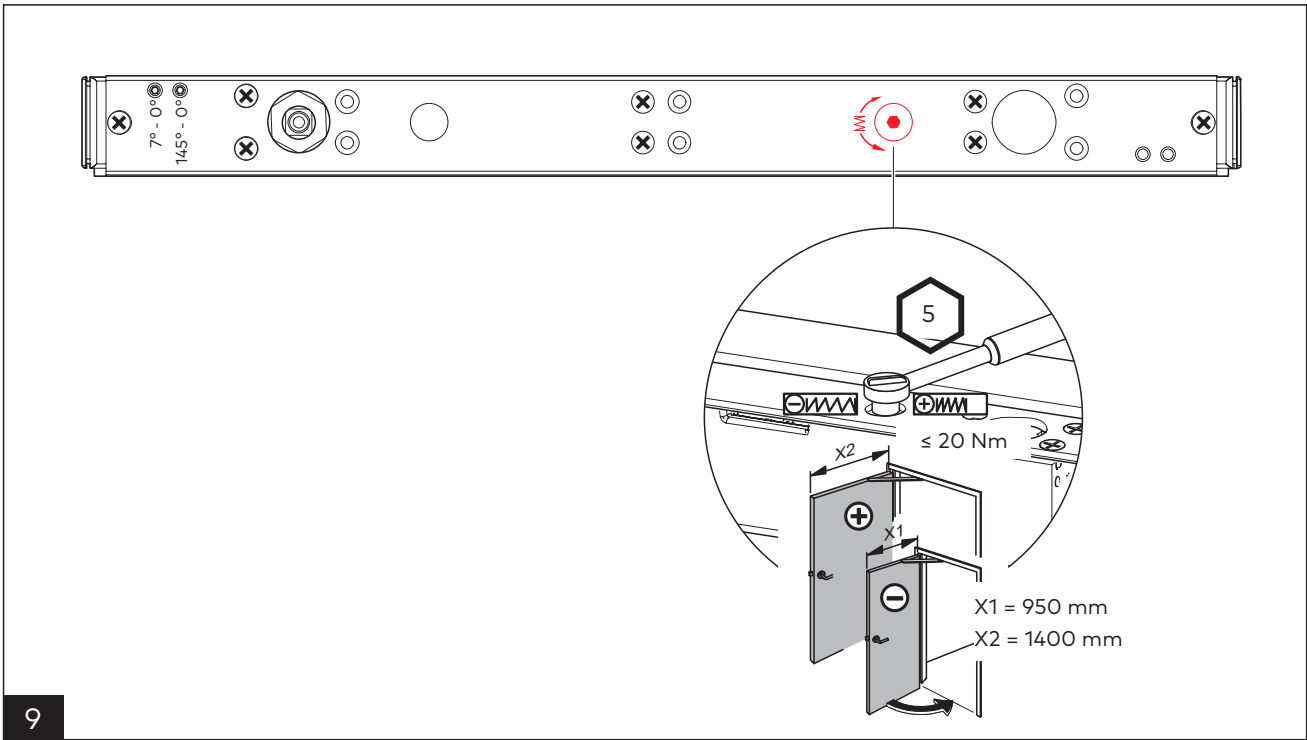


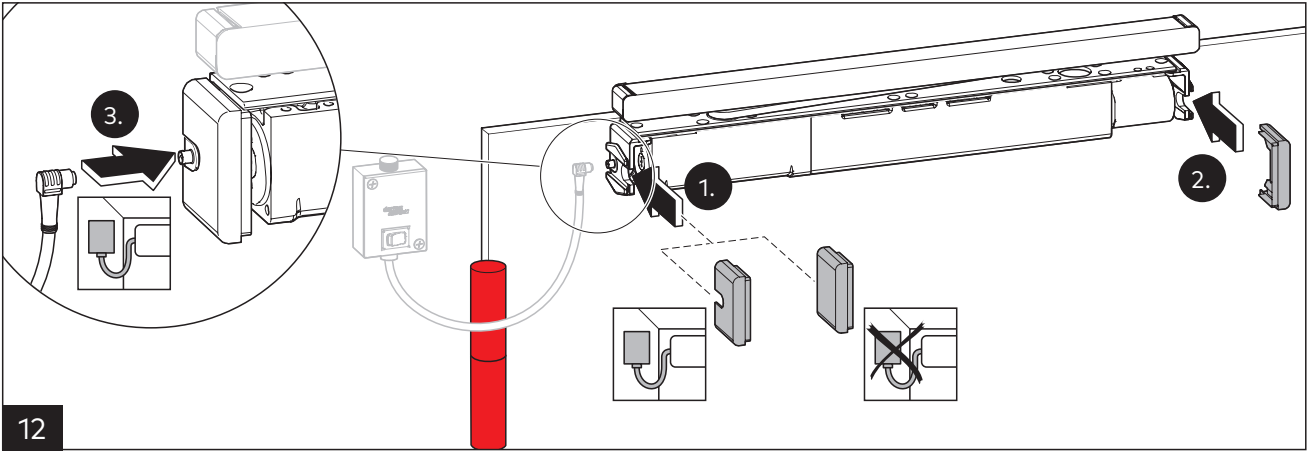

12

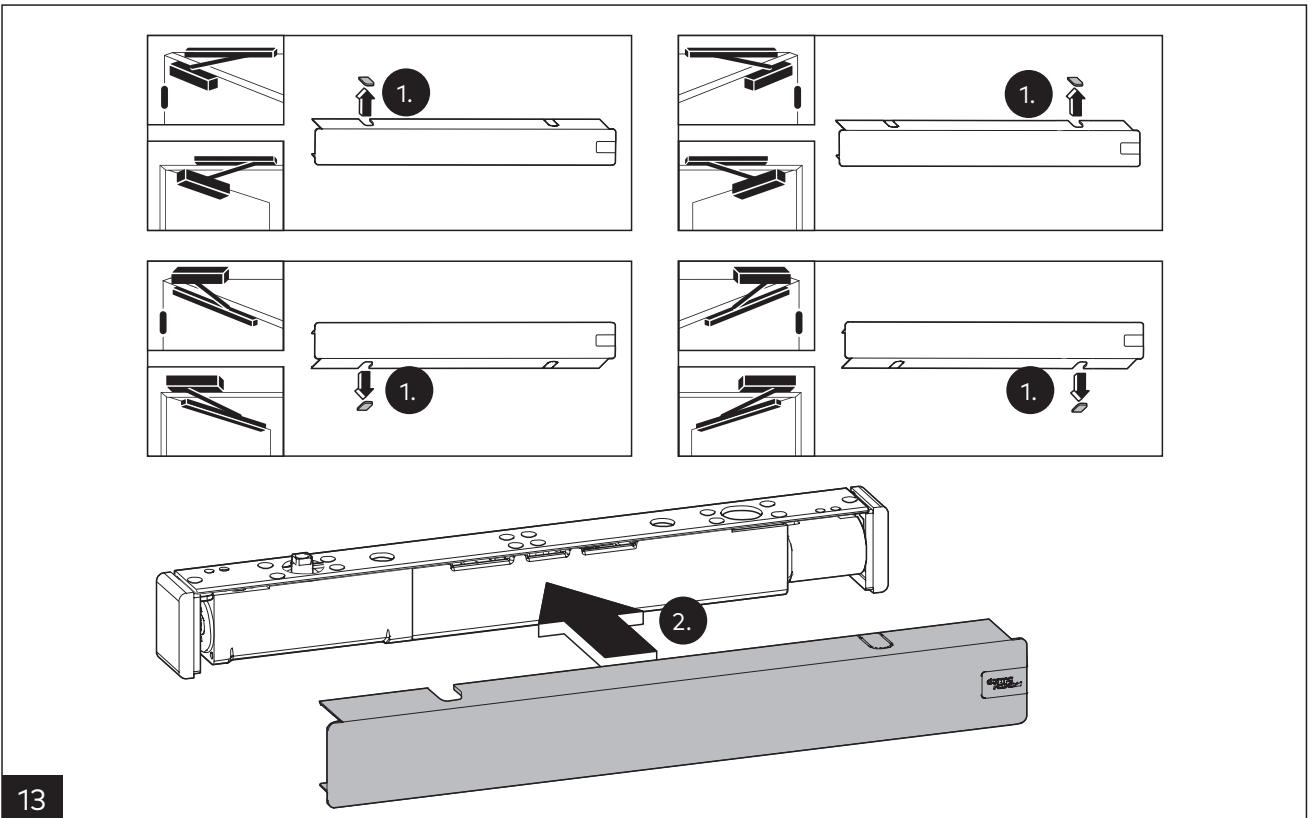

13

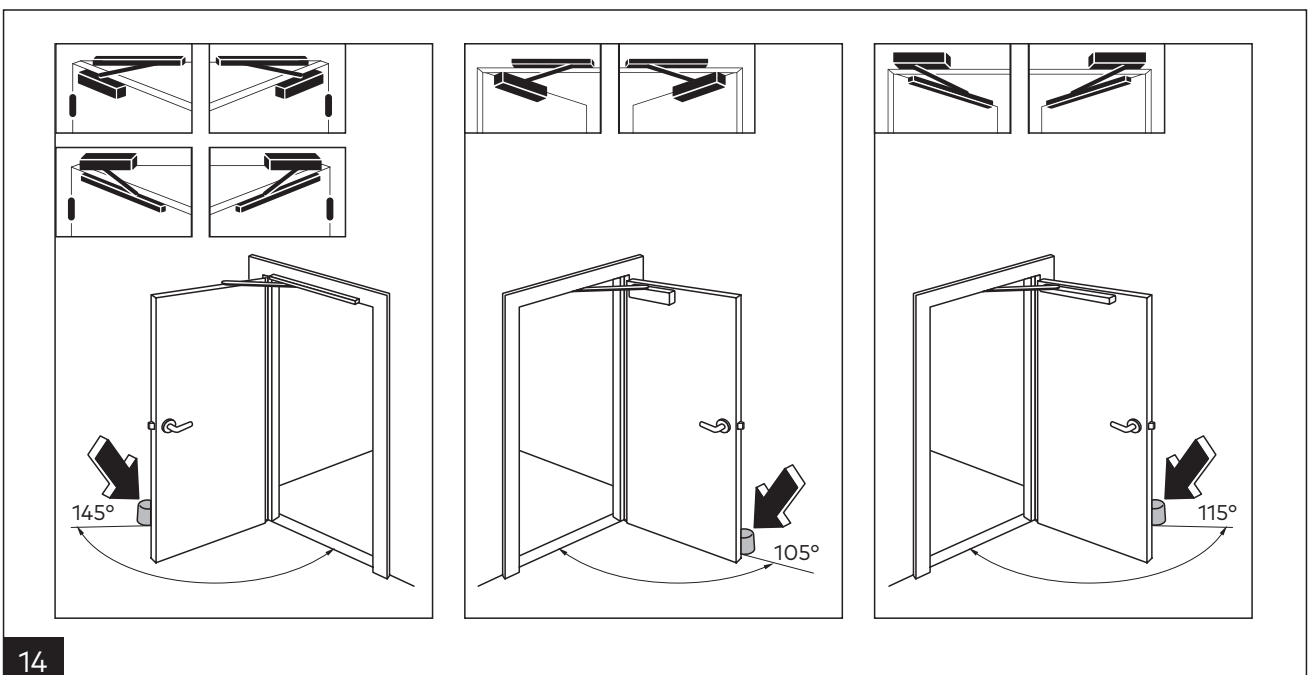

14

Änderungen vorbehalten