


Exit Pad

Exit Pad Installation Instructions

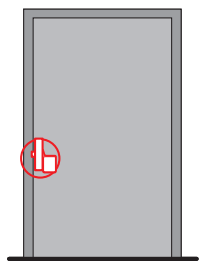

1

3

8

18

20


→

5

12

→


22

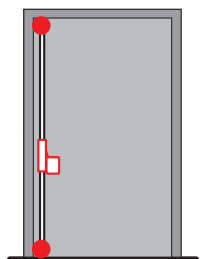

1

→


22

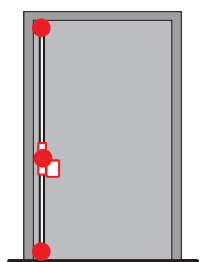

1

→


22

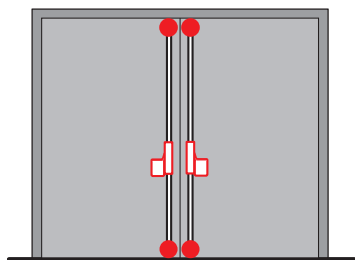

1

→

22

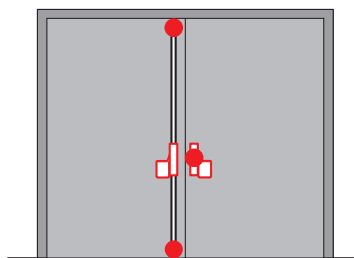


1

→

22





WN 055957

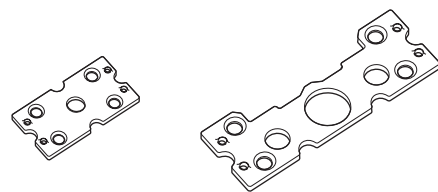


Warning

It may be the case that the panic fitting cannot be installed on extreme door situations according to standard measurements (door width X smaller than 1000 mm in connection with the distance of the hinge Y bigger than 90 mm). On request dormakaba will gladly give you installation suggestions.

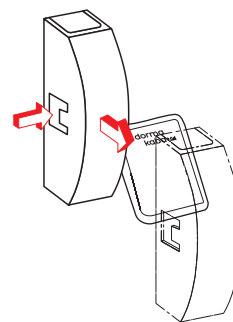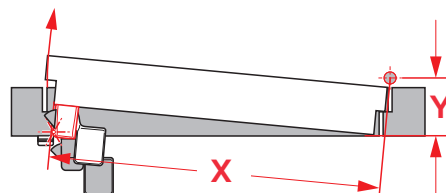

1

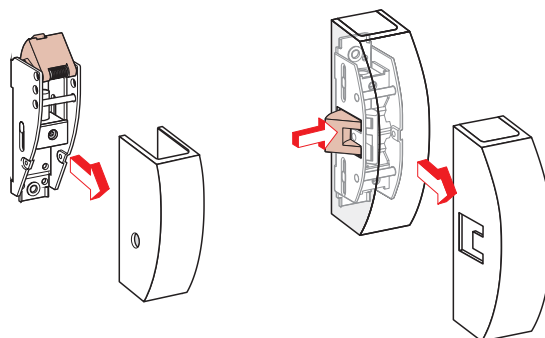

2




DORMA GmbH + Co. KG
Postfach 4009
58 247 Ennepetal

08




1121 - AB0031 3 7 6 1 1 4 4 2 B

EN 179: 1997 + A1: 2001 3 7 6 0 1 4 4 2 B


Dangerous substances: None

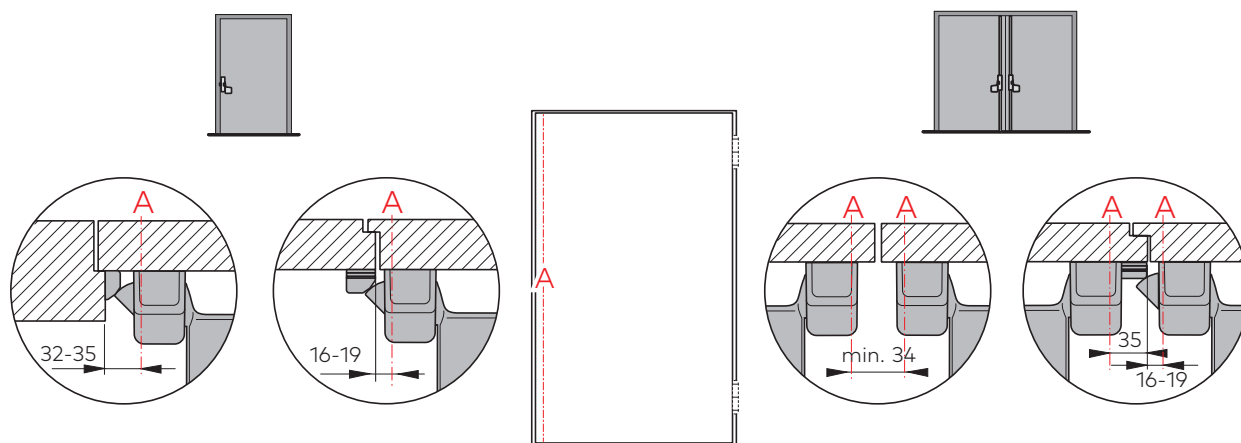


3

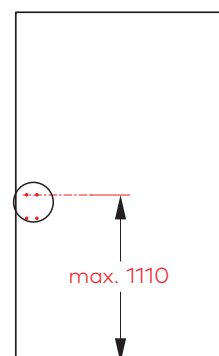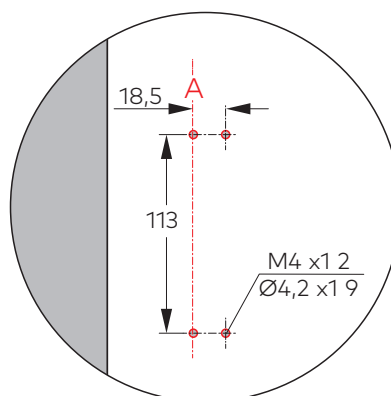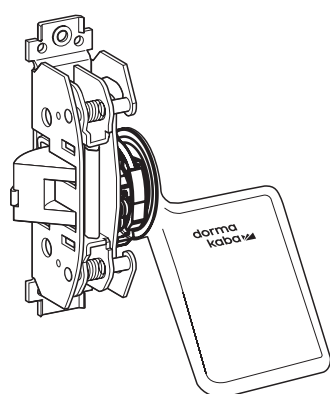



4

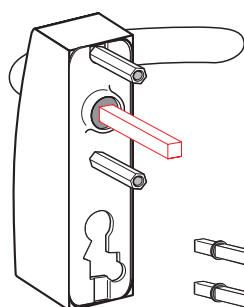













Option
PHT




T= max. 60
(Option PHTS 05)
T= max. 105

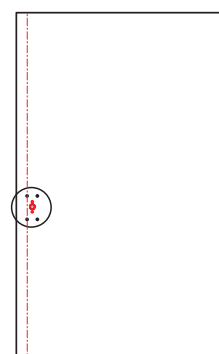
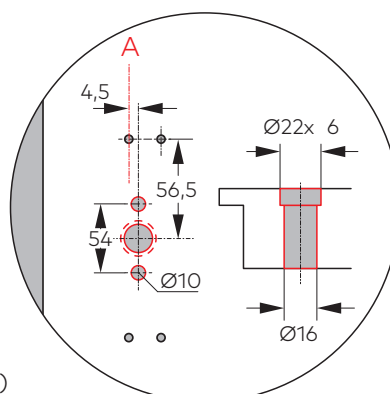


5

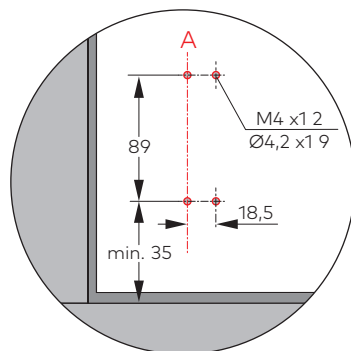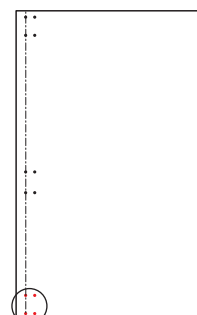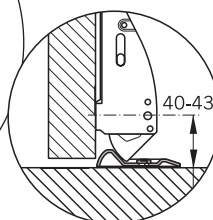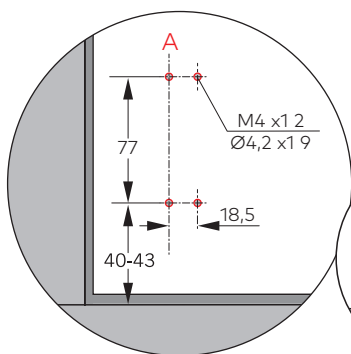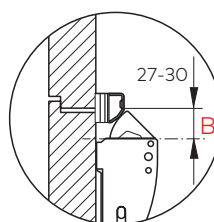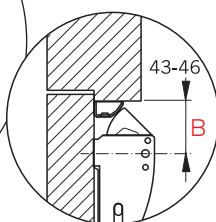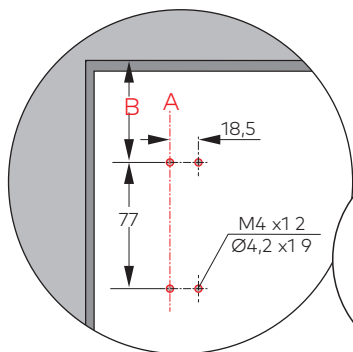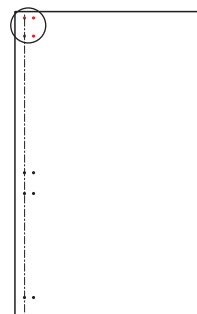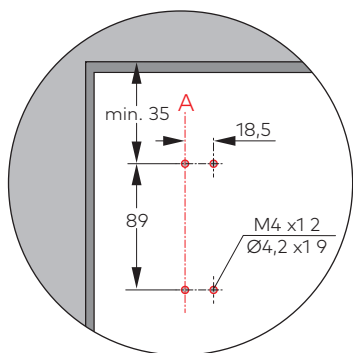


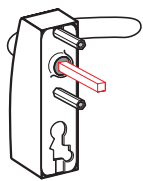

Option
PHT

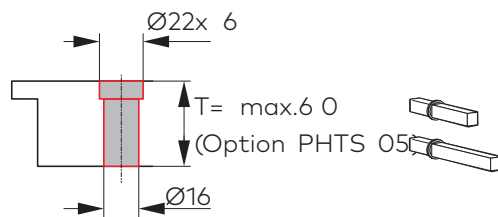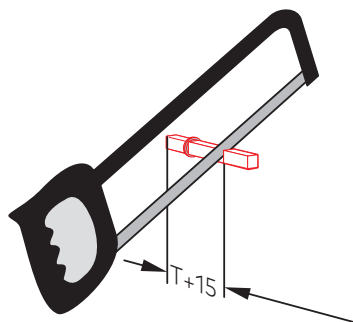


8

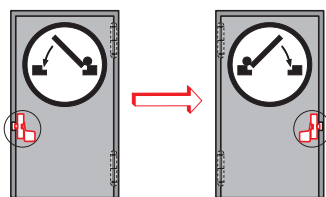


1.

2.




3.

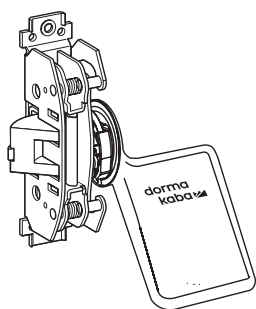

4.

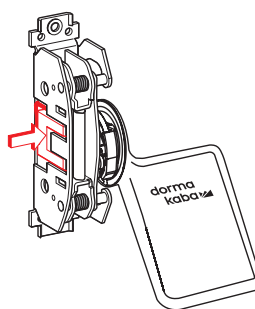


5.

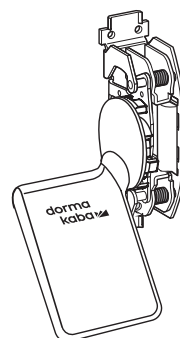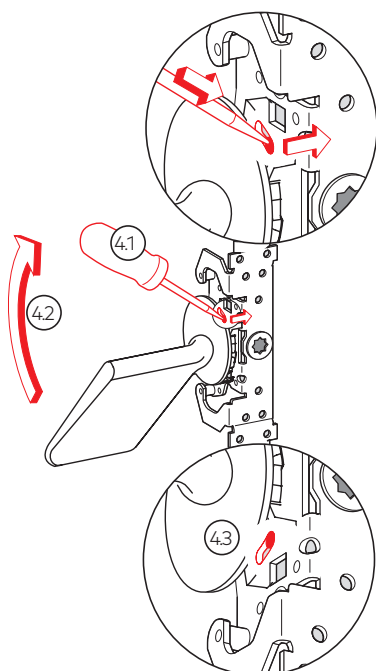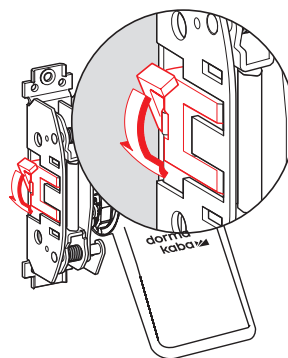


9



Optional

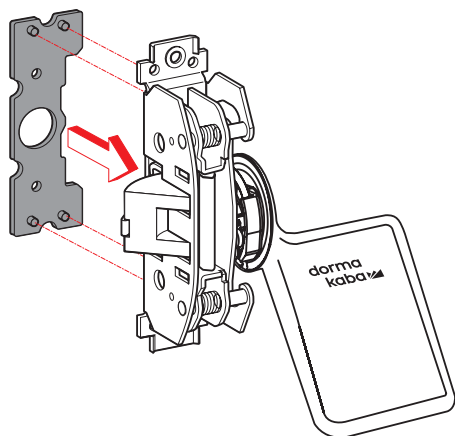



10

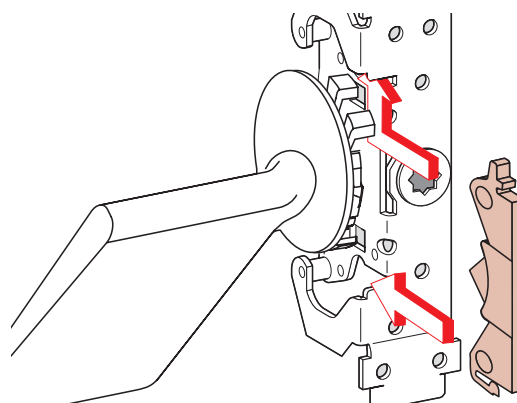












11

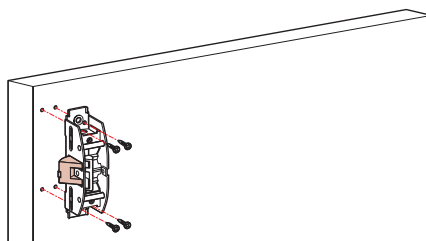

Option
PHT

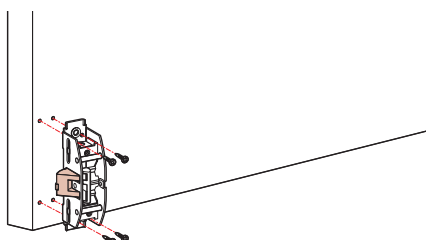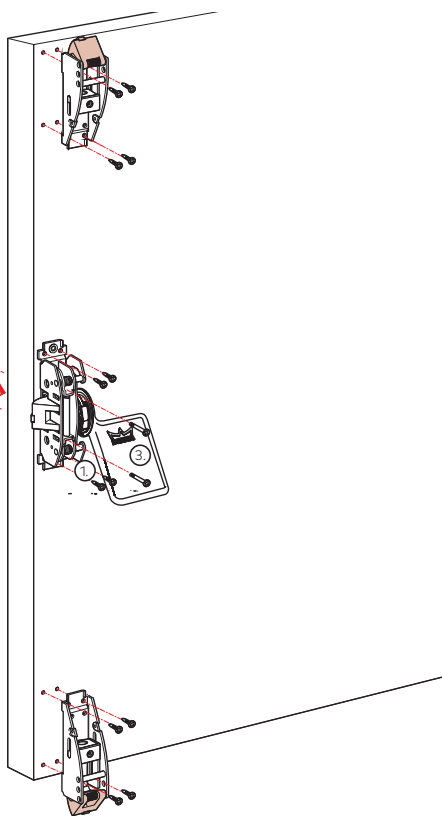

12

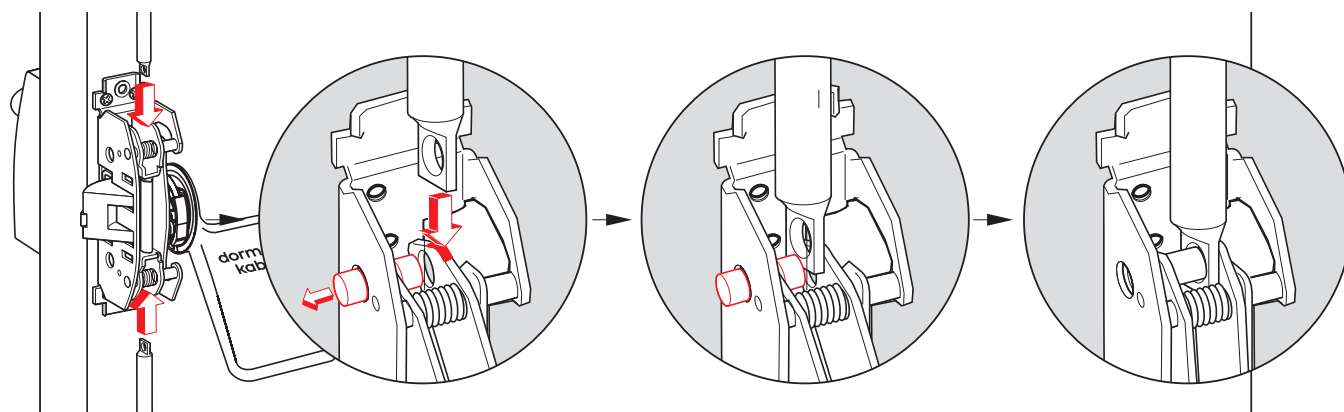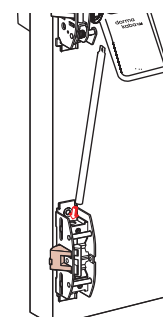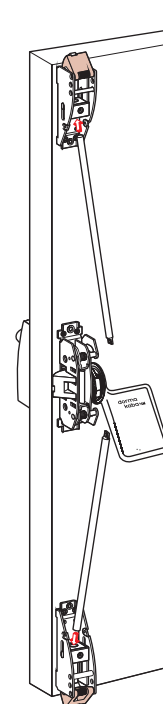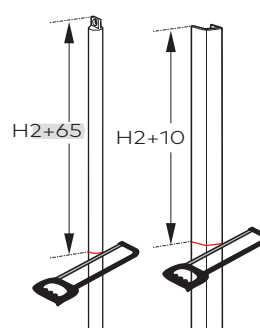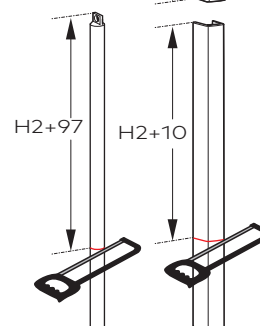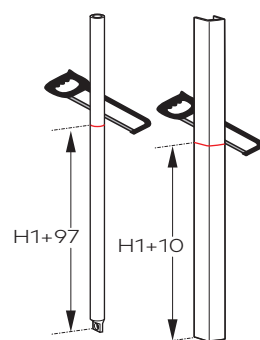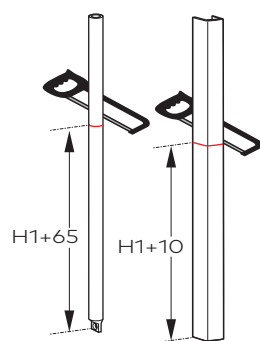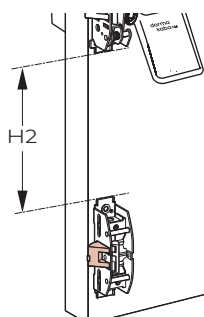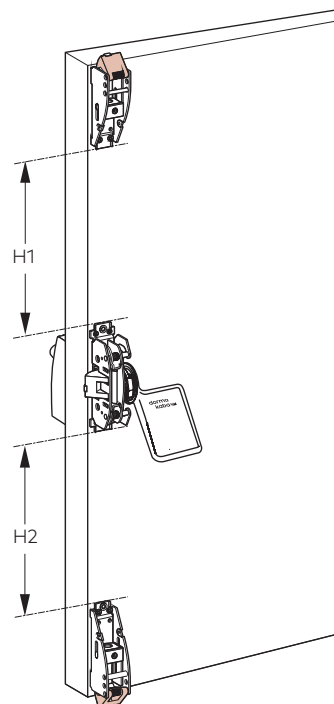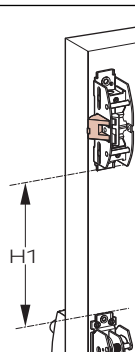

13

14

15

16

