


Installation Instructions

3/4" Offset Lead Lined Intermediate Pivot
For use with 75240, 75242, 75243

1.1 Install pivot

Fig. 1

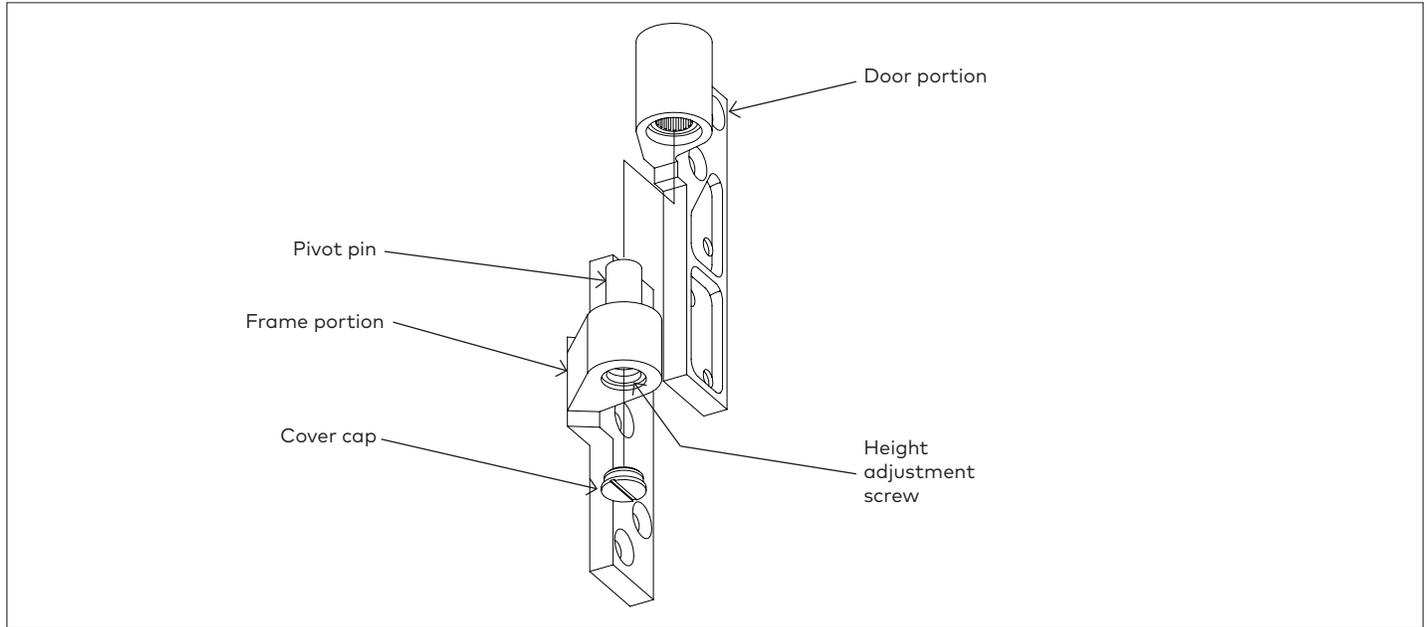

- 1.1.1 Prepare door and frame according to template.
- 1.1.2 Install door.
- 1.1.3 Fasten frame portion of pivot.
- 1.1.4 Fasten door portion of pivot.
- 1.1.5 Adjust vertical height of door, if necessary.
- 1.1.6 Remove cover cap.

- 1.1.7 Adjust door height:
 - Turn height adjustment screw clockwise - to raise door
 - Turn height adjustment screw counter-clockwise - to lower door.
- 1.1.8 Replace cover cap.


NOTE: When intermediate pivots are used in conjunction with the BTS Series Floor Closer, the entire weight of the door must rest firmly on the floor closer spindle.

To insure proper installation, the centerline of the intermediate pivot must be in line with the centerline of the top and bottom pivot.

NOTES

1. DO NOT SCALE DRAWING.
2. DIMENSIONS ARE IN INCHES/(MM).
3. RIGHT HAND DOOR SHOWN.
4. BEVEL HEEL EDGE OF DOOR 1/8" IN 2".
5. ALL NECESSARY REINFORCEMENT FOR PIVOT BY OTHERS.
6. FOR DOOR THICKNESS NOT LISTED USE NEXT SIZE SMALLER FOR PREPARATION.
7. TEMPLATE IS BASED ON THE ASSUMPTION THAT LEAD (BY OTHERS) IS PLACED IN CENTER OF DOOR.
8. FLUSH DOOR AND FRAME PREPARATION SHOWN.

FOR 1/4-20 MACHINE SCREWS USE NO.7 DRILL
 FOR NO.14 WOOD SCREWS USE 5/32" DRILL

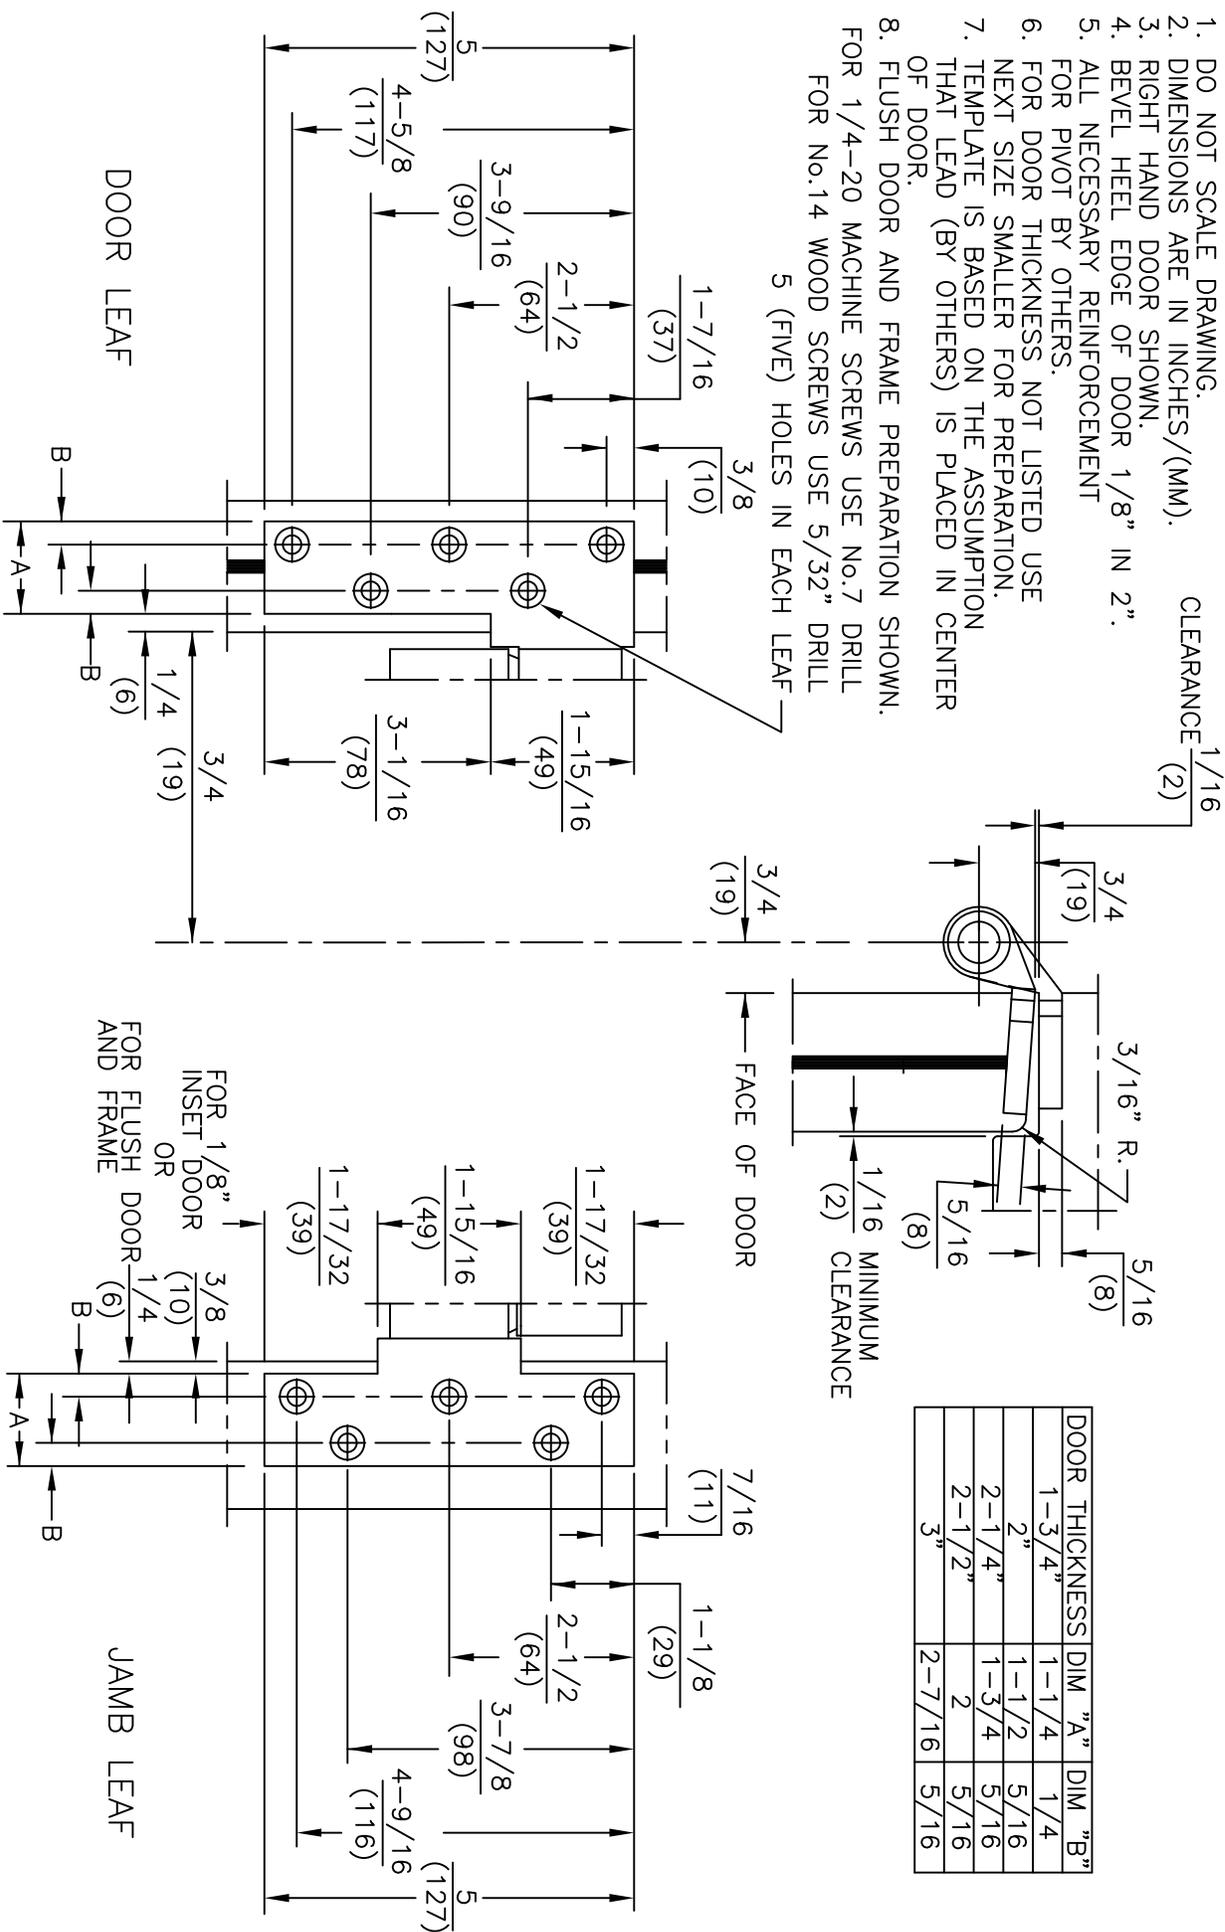

ALL SERIES: 75240, 75242, 75243
 3/4" OFFSET FULL MORTISE
 INTERMEDIATE PIVOT (HANDED)
 FOR LEAD LINED OR EXTRA HEAVY DOORS



dormakaba USA, INC.
 800 523 8483