



ITS 96/ITS 96 FL

Concealed cam-action door closer system

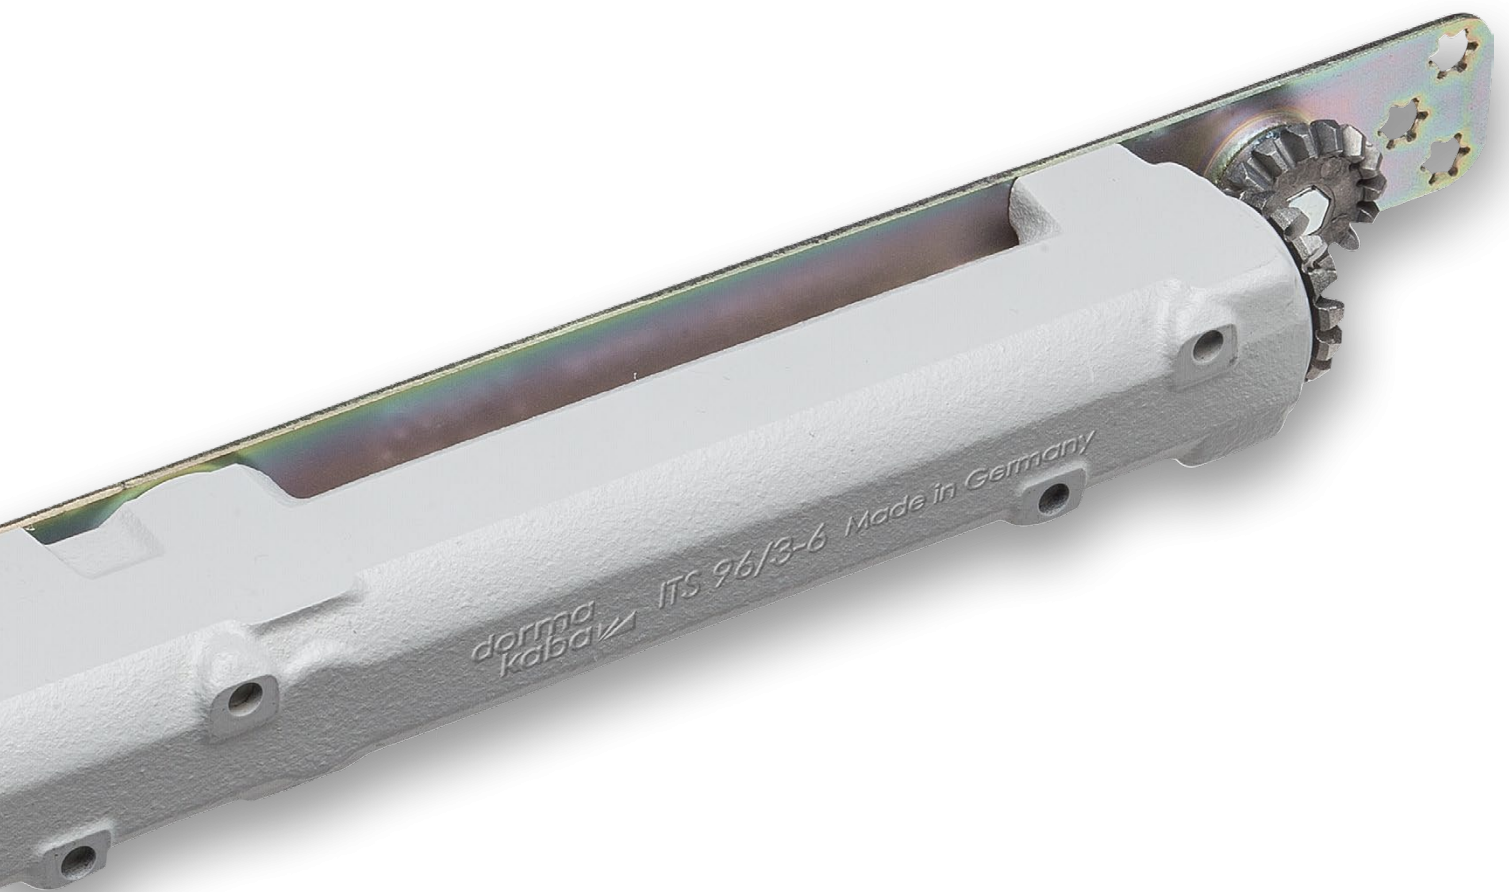

Concealed cam-action door closer system


The integrated solution for prestige doors

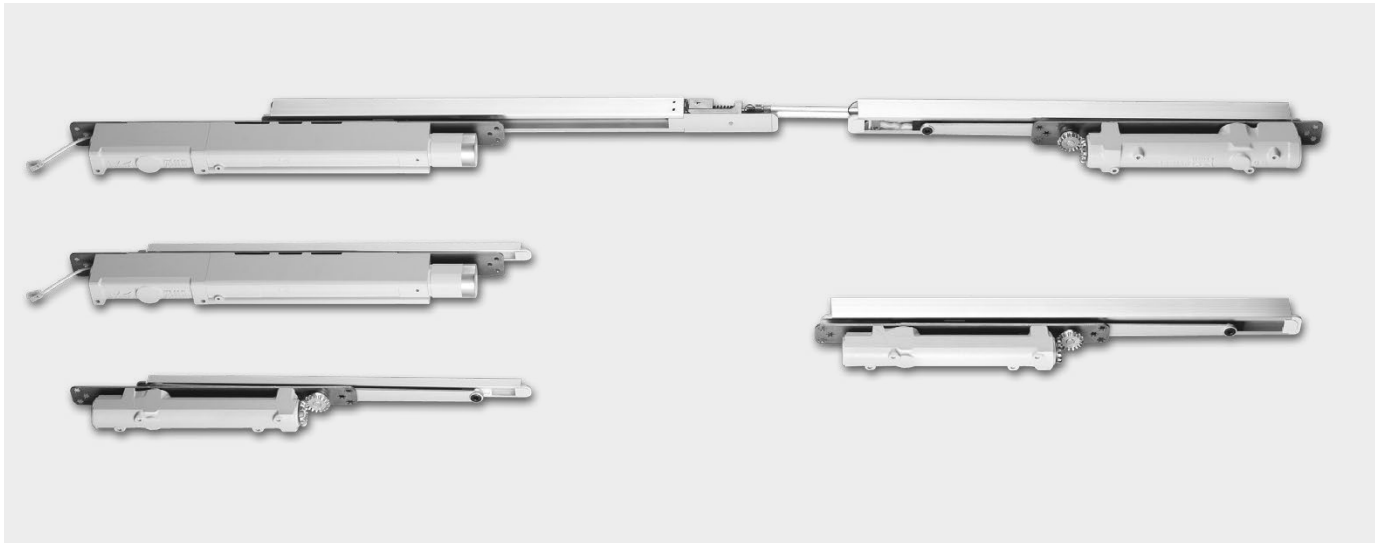

Because of its compact design, the ITS 96 system can be concealed for virtual invisibility within the door and frame, integrating inconspicuously with the overall architectural ambience.


Following the further development of the ITS 96 system to create the ITS 96 FL, the same advantages have now been complemented with a free-swing function for fire and smoke check doors up to a passage width of 1400 mm and a weight of 180 kg. This enhanced convenience also contributes to providing barrier-free access in a building.

Offering proven EASY OPEN technology, the free-swing function ensures exceptionally light door opening. dormakaba cam-action door closers with EASY OPEN technology feature a heart-shaped cam that significantly reduces the opening resistance that has to be overcome, almost as soon as the door is operated. Children, seniors and the physically disabled can thus open the door without undue effort. However, it is not only this group of users that benefits from the advantages of the rapidly decreasing opening force required – because this technology also generally ensures a significant reduction in effort for maximum user friendliness.

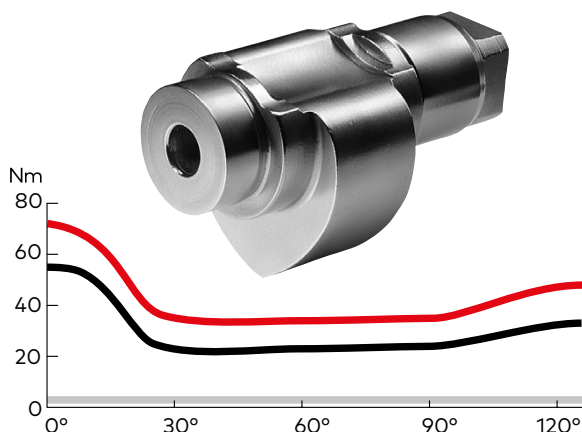

Force profile of an ITS 96 cam-action door closer (Size EN 3 – 6, max. closing strength setting)

- Opening force
- Closing force
- ITS 96 FL free-swing door closer

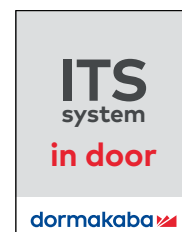

Contents

ITS 96 / ITS 96 FL	Features and functions	4
	Application and installation	8
Slide channel for single doors	G 96 N20 Slide channel	10
	RF Hold-open unit	11
	G 96 EMF Slide channel with electro-mechanical hold-open	14
Slide channel door co-ordinator for double doors	G 96 GSR Slide channel door co-ordinator	16
	G 96 GSR-EMF Slide channel door co-ordinator with electro-mechanical hold-open	18
	G 96 GSR Slide channel door co-ordinator with free-swing function at the active leaf	24
Smoke detectors	RMZ	30
	RMZ with RM-N and RMZ with FM AP / RM-F	30
Accessories		34
Hold-open systems	Regulations and information	37
Range of equipment and optional accessories	ITS 96	38
	ITS 96 FL	40

Engineering at its best

The closer and slide channel of the ITS 96 are of such compact design that they can be installed for complete visual concealment in the door and frame. At the same time, they offer the same level of user convenience expected from high-quality door closers, combined with a wide range of functionality. Its compactness means that the ITS 96 system can be installed in virtually all doors with a leaf thickness of 40 mm or more.

The ITS 96 FL (hold-open device with free-swing function) is ideally combinable with the existing slide channels and accessories generally available for the ITS 96, which means that the existing portfolio of add-ons can be utilised without any change. The area of application for this model extends to the protection of fire and smoke check doors and also general doors in senior homes, centres for the disabled, and hospitals.

Plus points...

...for the trade

- Low inventory costs and reduced stocking requirements thanks to streamlined modular system and separate packaging of closer body and slide channel assemblies.
- Same slide channels and accessories for the ITS 96 and ITS 96 FL.

...for the installer

- Non-handed system.
- Apart from the length, the installation dimensions of the ITS 96 EN 3-6 and the ITS 96 FL EN 3-6 are identical.
- Easy adjustment of the closing strength, closing speed and latch action after hanging of the doors.

...for the specifier/architect

- Unblemished appearance of prestige doors thanks to concealed installation.
- Compliance with statutory requirements for barrier-free building.Universeller
- Universally suitable for single or double doors.

...for the user


- Optimum protection against vandalism thanks to the concealed installation.
- Enhanced user convenience and fully controlled, reliable closing with adjustable latch action.
- Free-swing function from a door angle >0°, resulting in virtually resistance-free opening of the doors in applications requiring passive fire protection.

Data and features		ITS 96		ITS 96 FL
Variable closing force	Spring strength	EN 2-4	EN 3-6	EN 3-6
Standard doors ¹⁾	up to 1100 mm	●	●	●
	up to 1400 mm	-	●	●
External doors, outward opening		-	-	-
Fire and smoke check doors ¹⁾	up to 1100 mm	●	●	●
	up to 1400 mm	-	●	●
Door leaf thickness	up to 40 mm	●	-	-
	up to 50 mm	●	●	●
Max. door leaf weight in kg		130	180	180
Non-handed design (closer)		●	●	●
Arm	Slide channel	●	●	●
Closing force variable by means of adjustable screw		●	●	●
Closing speed adjustable by means of valve		●	●	●
Latching speed adjustable by means of valve		●	●	●
Cushioned limit stay, mechanical		●	●	●
Delayed action		-	-	-
Hold-open		○	○	-
Max. door opening angle (depends on door design)		approx. 120°		
Input voltage		-	-	24 V DC ± 15 %
Power consumption		-	-	3 W
Weight in kg		1,3	2,5	4,2
Dimensions in mm	Length	277	291	476
	Width	32	39,5	39,5
	Height	42	51	51
Door closer tested to EN 1154		●	●	●
Hold-open devices tested to EN 1155		●	●	●
Door co-ordinators tested to EN 1158		●	●	●
CE-mark for building products		●	●	●
Suitable for barrier-free building to DIN 18040 and DIN SPEC 1104 (CEN/TR 15894)		●	●	●
ANSI 156.4		●	-	-


● Yes – No ○ Option

¹⁾ For applications involving particularly heavy or wide doors, and doors which have to close against wind resistance, the next highest door closer size should be selected, or the closing force adjusted to a higher setting.

ITS 96

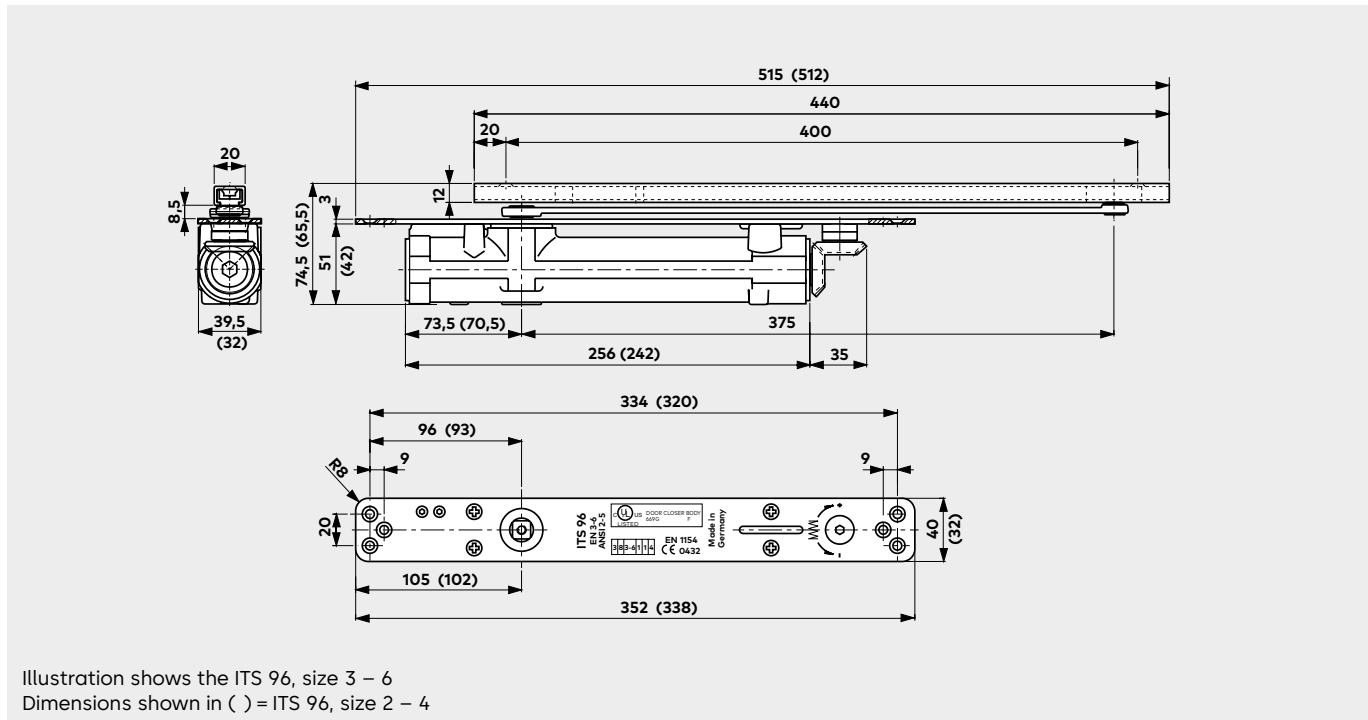

ITS 96 FL

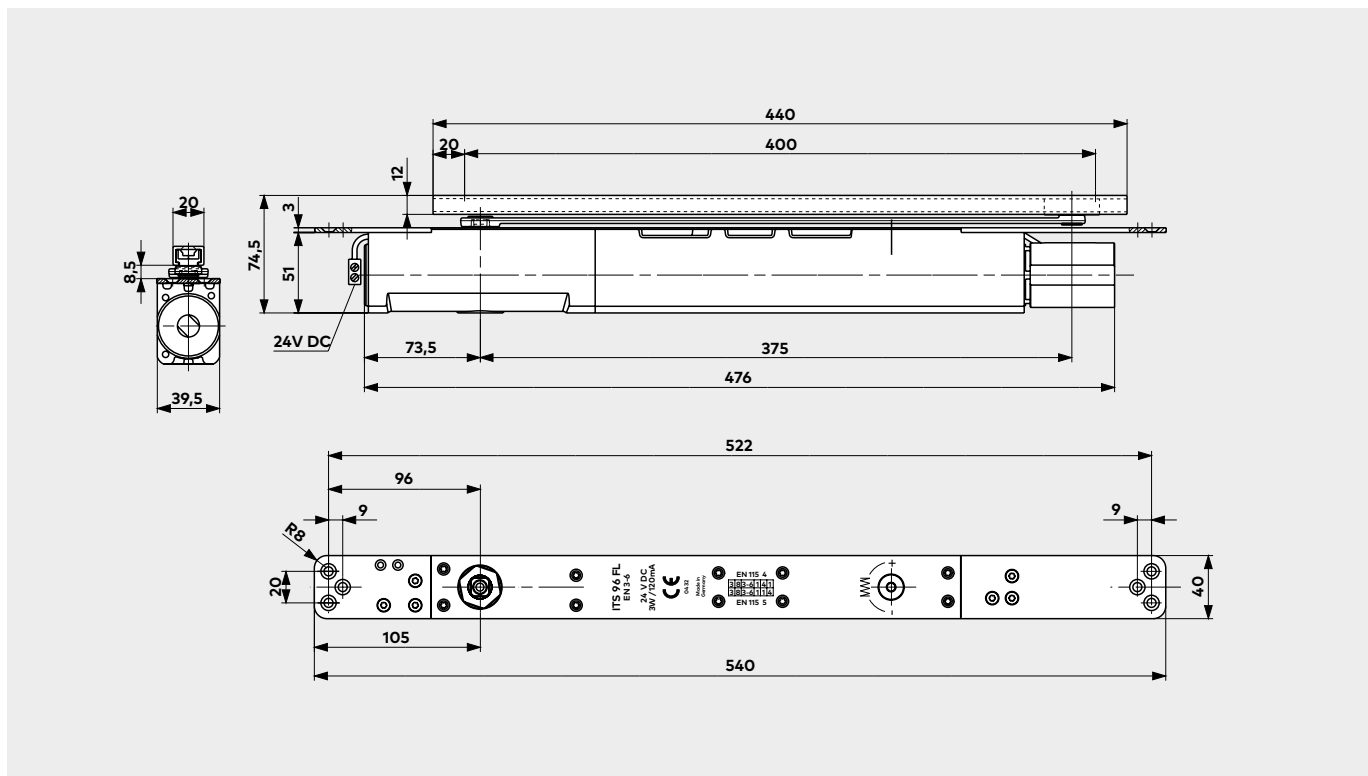

ITS 96 Cam-action door closer



Adjustment of settings

The functions of the ITS 96 can be individually adapted to the local conditions of each application. The closing strength can be easily varied in accordance with the door width via the adjustment screw accessible from the top. The closing speed and the latch action can likewise be modified at any time using adjustment screws at the top, even after the door has been hung.

F Approval certification

The ITS 96 is approved by the State Material Testing Authority, Dortmund, in accordance with EN 1154. Additionally, the model size EN 2 – 4 and EN 3 – 6 has CERTIFIRE approval for use on timber FD30 and FD60 doors (code ITT), when installed with the approved intumescent gasket set for FD30 or FD60 supplied by dormakaba UK.

The length, width and height of mortice for the body and slide channel must be increased by 2 mm to accommodate the gasket.

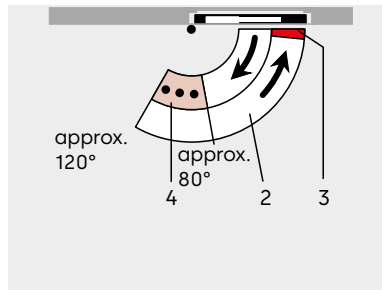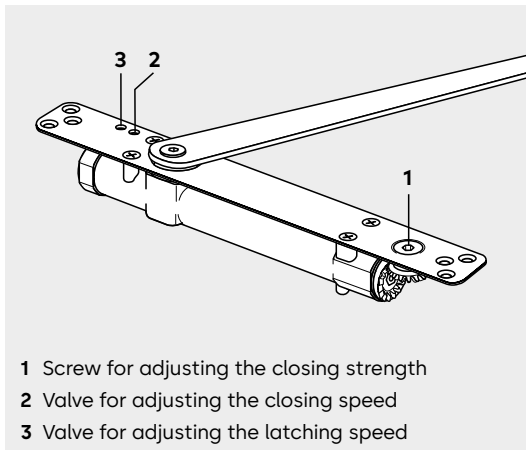

- 2 Fully controlled closing with adjustable speed
- 3 Adjustable latch action
- 4 Cushioned limit stay

Specification text

Cam-action door closer to EN 1154 for integration in the door leaf or frame, with rapidly decreasing opening resistance, for easy door opening action to DIN SPEC 1104.

Closing force, closing speed and latch action infinitely variable. Non-handed, with slide channel... (see pages 10 – 29).

Size

- EN 2 – 4
- EN 3 – 6

Make

ITS 96

ITS 96 FL Cam-action door closer with free swing function

Adjustment of settings

As the door is opened, the **free-swing function is activated from an opening angle of >0°**. This feature ensures that the door is particularly easy to use, with the only opening resistance emanating from the hinges. In the event of a fire or power failure, the door is safely closed by the door closer. The closing force can be readily adapted to the door width using an adjustment screw accessible from above. The closing speed and the latch action are likewise adjustable from above, again with the closer in situ and the door remaining hung.

F Approval certification

The ITS 96 FL has been tested to EN 1154 and EN 1155 by the State Material Testing Authority, Dortmund.

An approval certificate of the fire and smoke check door to be used is additionally necessary in combination with the ITS 96 FL.

Specification text

Cam-action door closer, spring strength 3-6 to EN 1154, for integration in the door leaf or door frame, with CE marking, with rapidly decreasing opening resistance, with electrohydraulic hold-open, 24 V DC, tested to EN 1154, and with free-swing function from a door opening angle >0°. Closing speed and latch action variable, non-handed, with slide channel ... (see pages 10 – 29). GSuitable for barrier-free building to DIN 18040 and DIN SPEC 1104 (CEN/TR 15894).



General building approval granted by DIBt, Berlin, for use in a hold-open system. Acceptance inspection of the system is mandatory in Germany

Make ITS 96 FL

Regulations and information


The use of hold-open devices may be subject to certain conditions – see page 37.

Please note that the maximum door opening angle is often greater than the available free-running range.

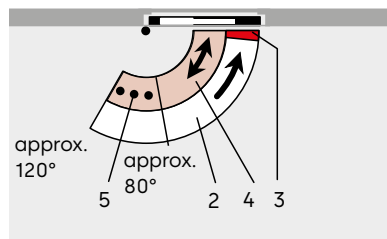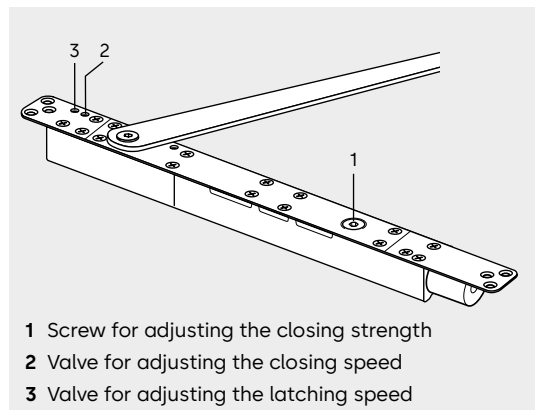

- 2 Fully controlled closing with adjustable speed (non-powered)
- 3 Adjustable latch action (non-powered)
- 4 Free-swing range
- 5 Cushioned limit stay

Example application, hold-open system

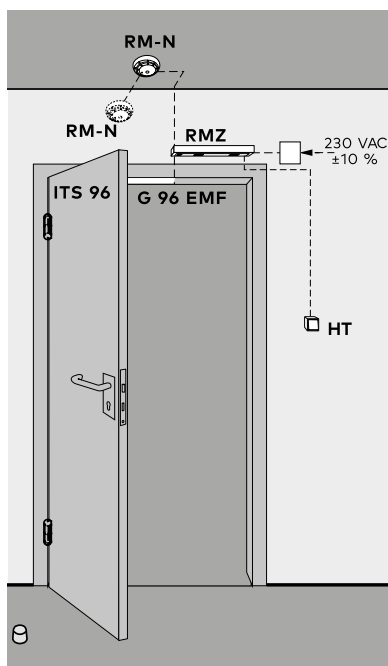


Recommended cabling KÜ:
Cable 2-wire 0.75mm² flexible

Example of connection plan RMZ with RM-N

Recommended cabling


230 V AC NYM 3 x 1,5 mm² (max.)
24 V DC J - Y (St) Y 2 x 2 x 0,6 mm² / 0,8 mm²

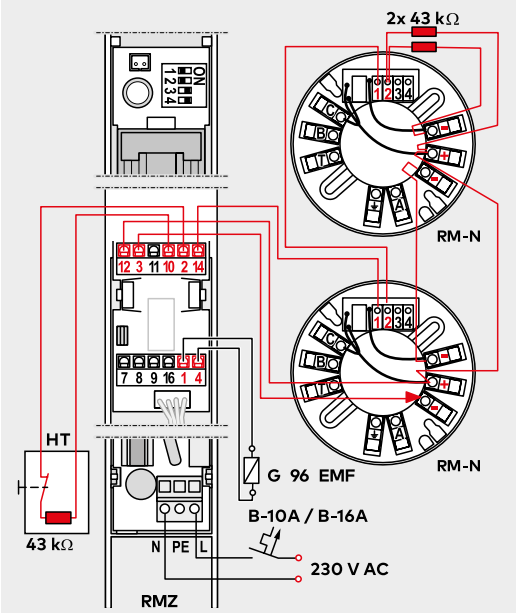

RMZ with FM AP/RM-F radio module

Recommended cabling

230 V AC NYM 3 x 1,5 mm² (max.)
24 V DC J - Y (St) Y 2 x 2 x 0,8 mm²

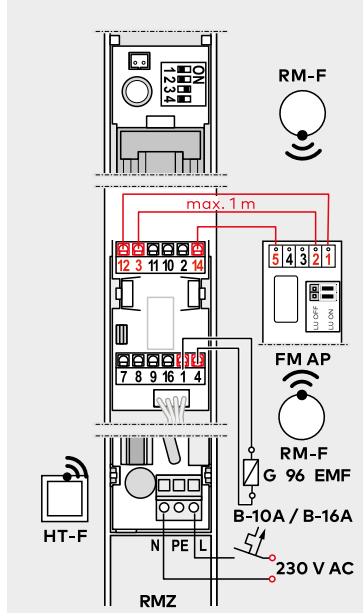


NEW


Applications and installation

The ITS 96 / ITS 96 FL concealed cam-action door closer system is suitable for various door designs and different rebate clearance dimensions. This is achieved through the combination of different spindle lengths available with the closer and the universal K8/K12 slide channel.


ITS 96 2-4
ITS 96 3-6
ITS 96 FL 3-6

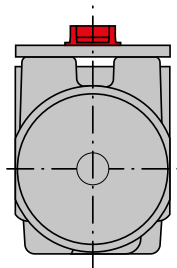






ITS 96 2-4
ITS 96 3-6
ITS 96 FL 3-6 with 4 mm extended spindle

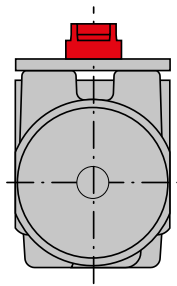


ITS 96 2-4
ITS 96 3-6
ITS 96 FL 3-6 with 8 mm extended spindle

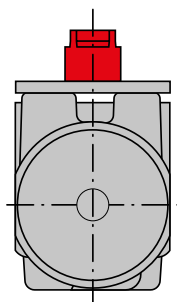


G 96...

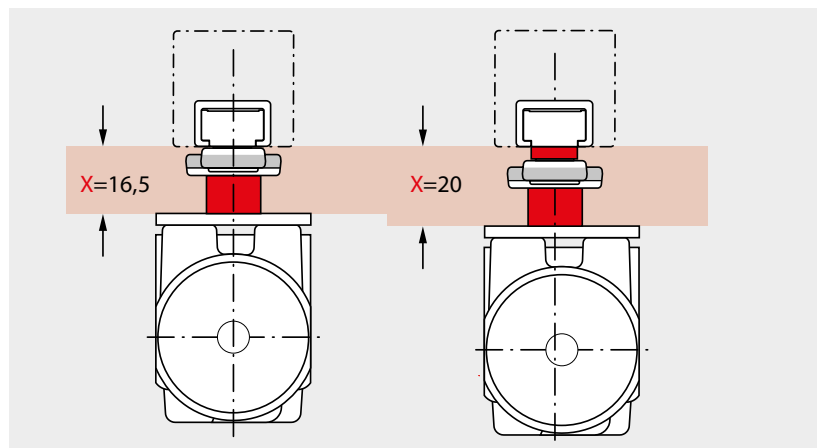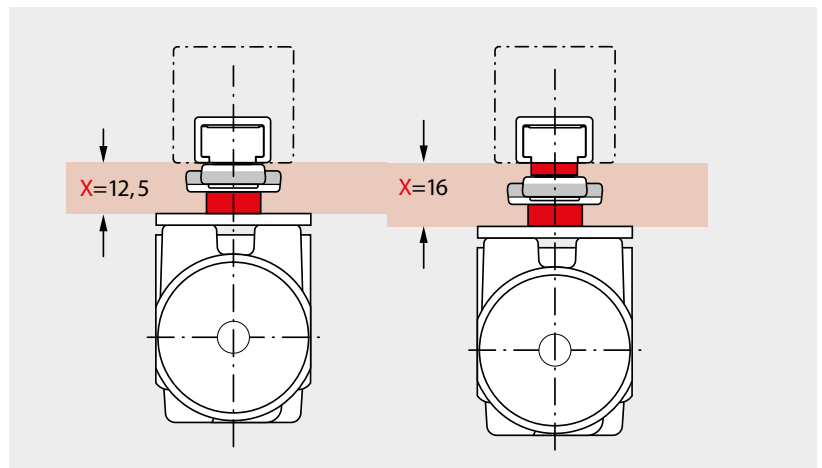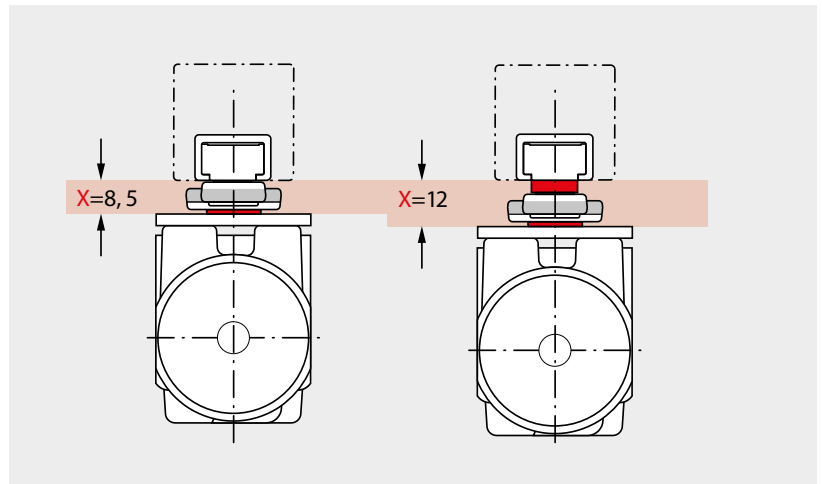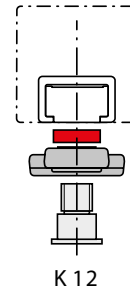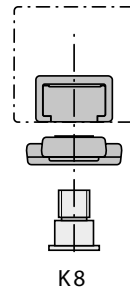


Timber door, flush-closing, clearance 8.5 mm, with ITS 96/ITS 96 FL EN 3-6 and slide channel G 96 N20 K8.

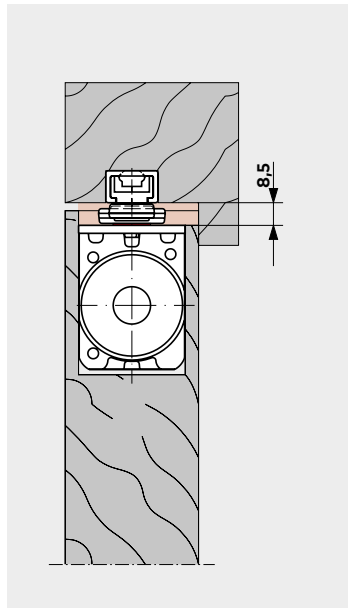


Timber door with steel frame, flush closing, clearance 12.5 mm, with ITS 96/ITS 96 FL EN 3-6, 4 mm extended spindle and slide channel G 96 N20 K8.


 Please check dimensions carefully

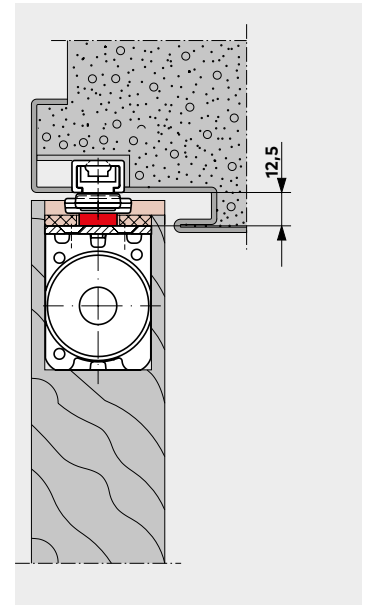


Tubular steel frame door, flush-closing, clearance 12 mm, with ITS 96/ITS 96 FL EN 3-6 and slide channel G 96 N20 K12.

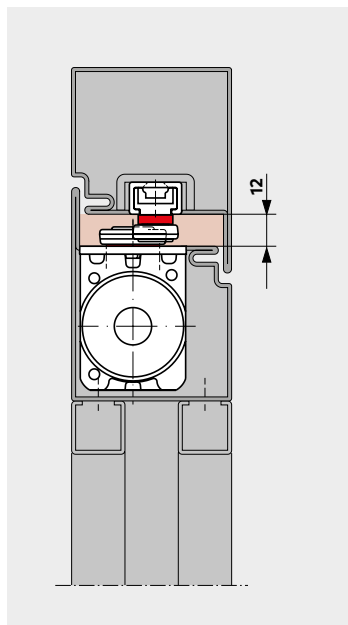


Aluminium tubular frame door, flush-closing, clearance 16 mm, with ITS 96/ITS 96 FL EN 3-6, 4 mm extended spindle and slide channel G 96 N20 K12.

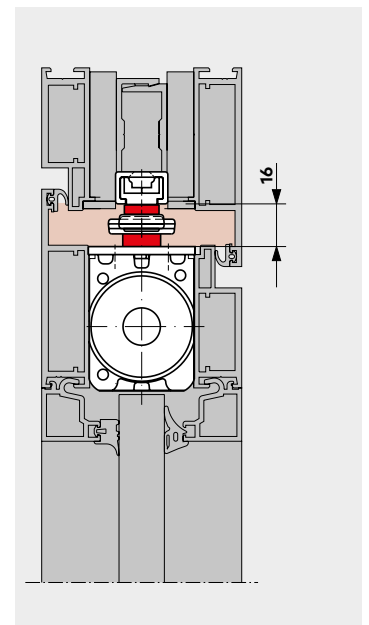


Timber door with solid frame, double-rebated, clearance 20 mm, with ITS 96/ITS 96 FL EN 3-6, 8 mm extended spindle and slide channel G 96 N20 K12.


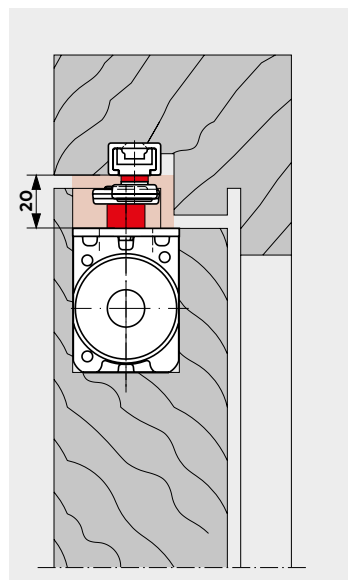


Hollow steel door with steel frame, over-rebated, clearance 12 mm, with ITS 96 EN 3-6, 4 mm extended spindle and slide channel G 96 EMF K8.

 Please check dimensions carefully

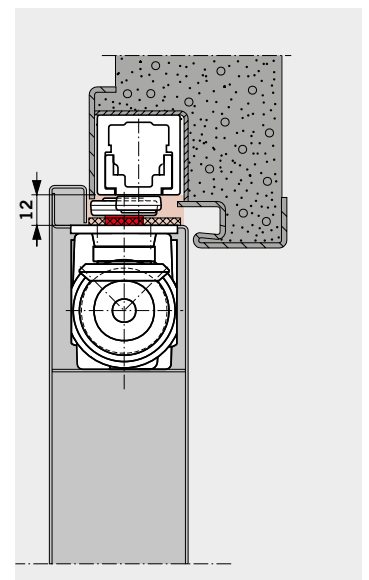

G 96 N20 Slide channel

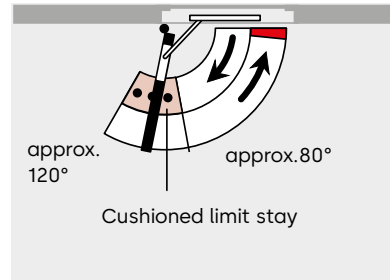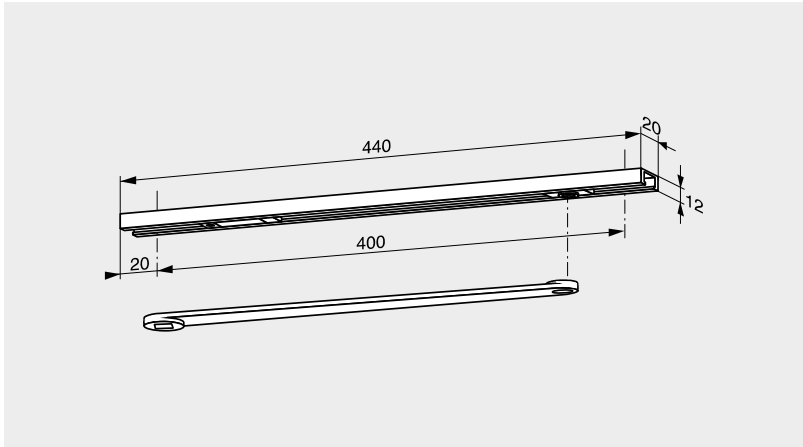

The G 96 N20 slide channel pack includes the arm, slide channel, slide block, cushioned limit stay and fixing screws, and can be combined with both door closer sizes in the ITS 96 range. The G 96 N20 slide channel is adjustable to K8/K12

F Approval certification

The G 96 N20 slide channel is tested to EN 1154 in conjunction with the ITS 96 and ITS 96 FL.

Specification text

ITS 96 ... door closer (see pages 4 and 7) with slide channel G 96 N20

Version

- LH (ISO 6) K8/K12
- RH (ISO 5) K8/K12


Make

- ITS 96 N20
- ITS 96 FL N20



Cushioned limit stay

The integrated mechanically cushioned limit stay of the ITS 96 is progressively damped to protect the wall and doors from the damage arising from the door being opened too wide (under conditions of normal usage). It can be adjusted to an opening angle between approx. 80° and max. 120°.

The cushioned limit stay feature is not an overload protection device and in many cases cannot replace a doorstop.

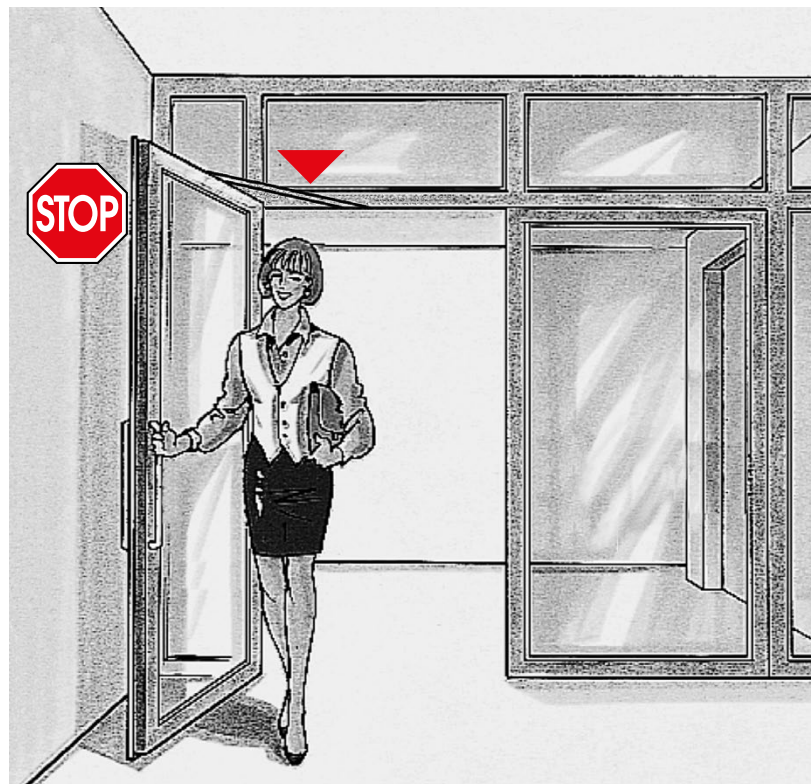

Hold-open unit

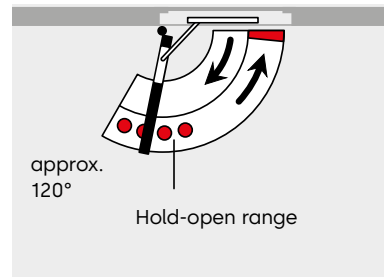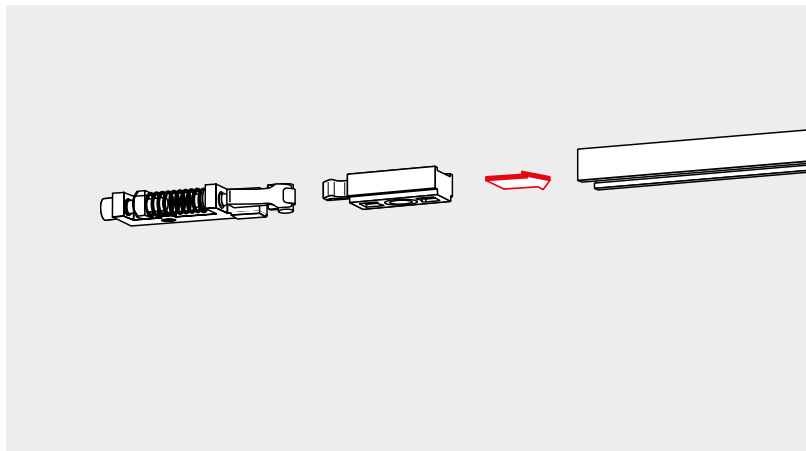

The RF hold-open unit enables doors to be securely held without any fall-back at precisely the required position up to an opening angle of approx. 120°.


The pull-off force can be adjusted to any door situation.

The RF mechanism is non-handed and has been specifically designed for retrofitting to the G 96 N20 slide channel.


Not for fire and smoke check doors.

Accessories


- Hold-open unit RF G 96 N20

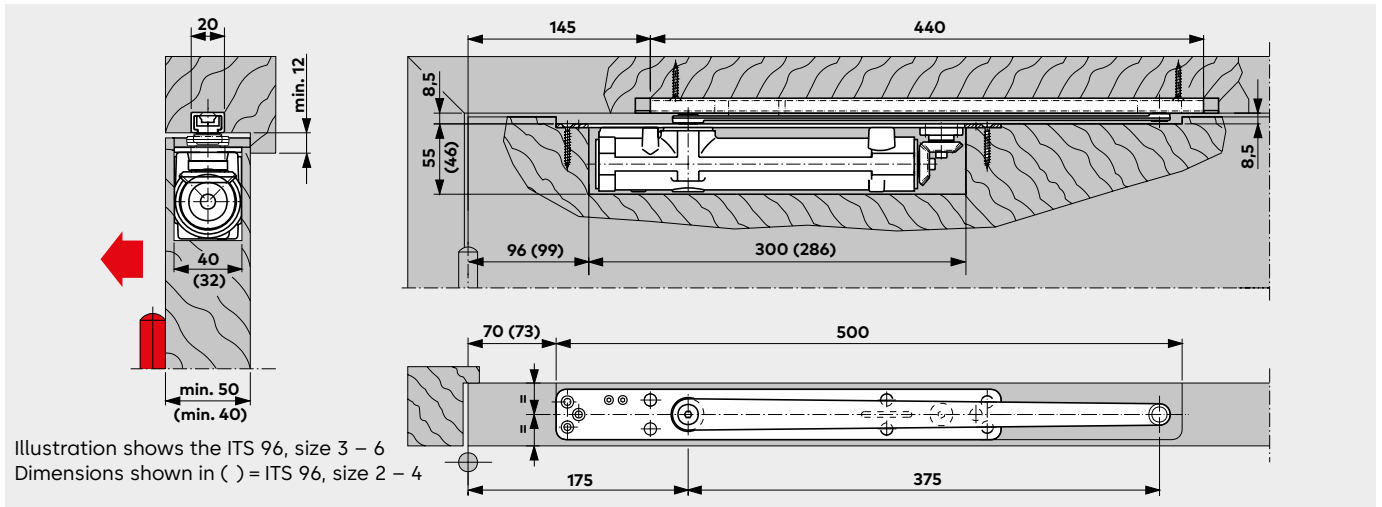


ITS 96 door closer with G 96 N20 slide channel in a **timber door**.
 Example: Anticlockwise-closing (ISO 6) door; mirror image applies to clockwise-closing (ISO 5) doors.

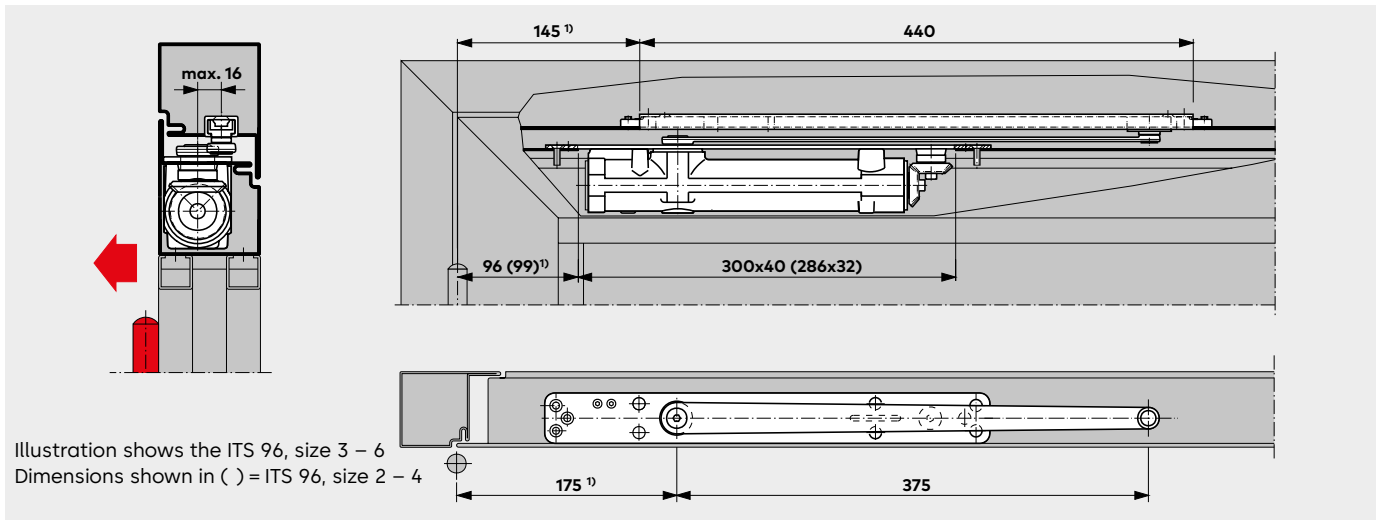

ITS 96 door closer with G 96 N20 slide channel in an **aluminium framed door**. Example: Anticlockwise-closing (ISO 6) door; mirror image applies to clockwise-closing (ISO 5) doors.
¹⁾ Add 25 mm for aluminium profile frames with corner-angle reinforcement.

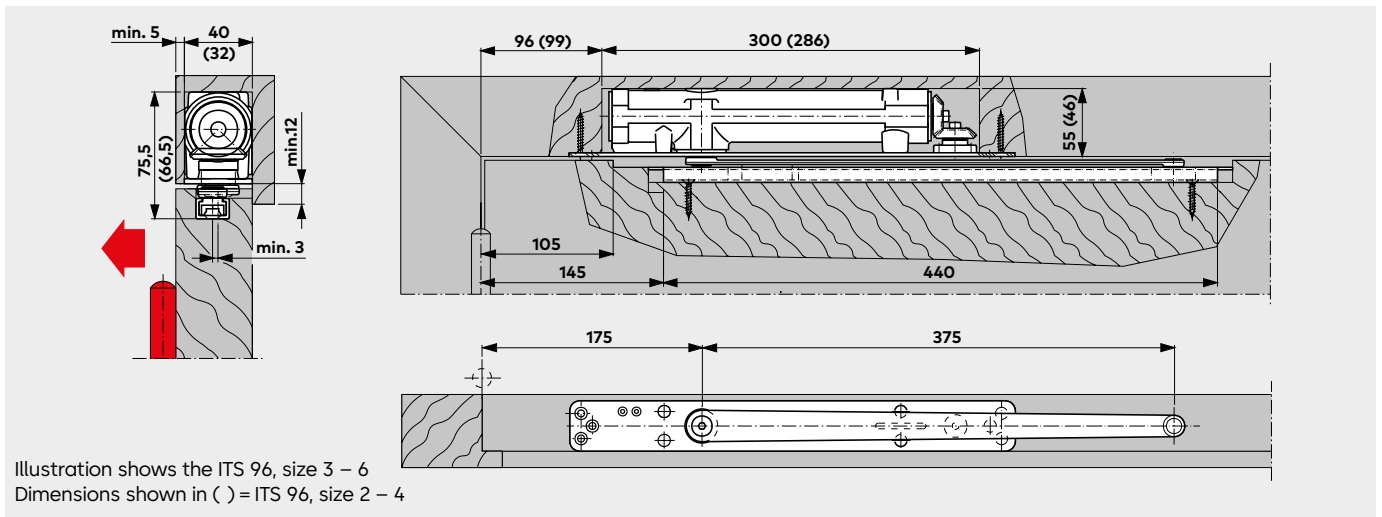


ITS 96 door closer with G 96 N20 slide channel in a **timber door transom fixing**.
 Example: Anticlockwise-closing (ISO 6) door; mirror image applies to clockwise-closing (ISO 5) doors.

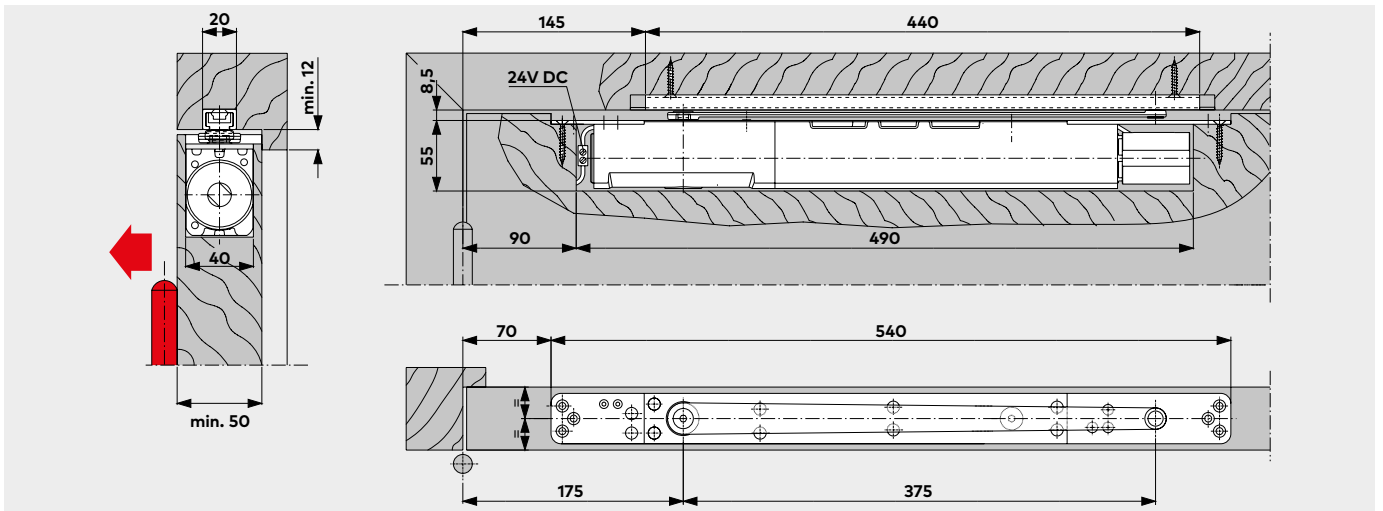

ITS 96 FL door closer with G 96 N20 slide channel in a **timber door**.


Example: Anticlockwise-closing (ISO 6) door; mirror image applies to clockwise-closing (ISO 5) doors.

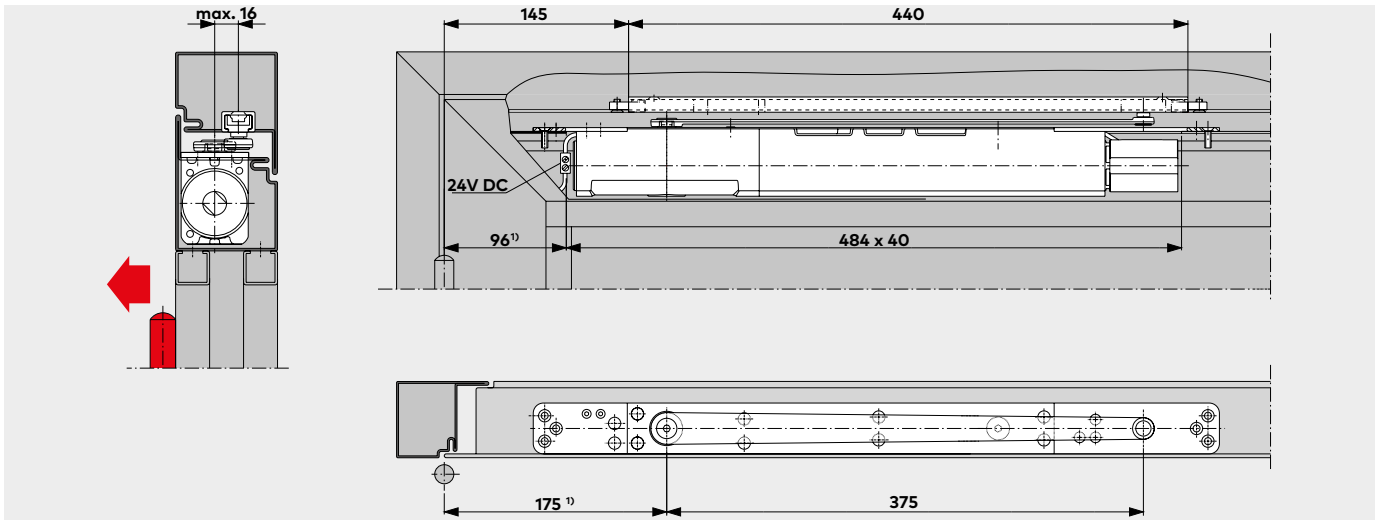

ITS 96 FL door closer with G 96 N20 slide channel in an **aluminium framed door**. Example: Anticlockwise-closing (ISO 6) door;

mirror image applies to clockwise-closing (ISO 5) doors.



¹⁾ Add 25 mm for aluminium profile frames with corner-angle reinforcement.

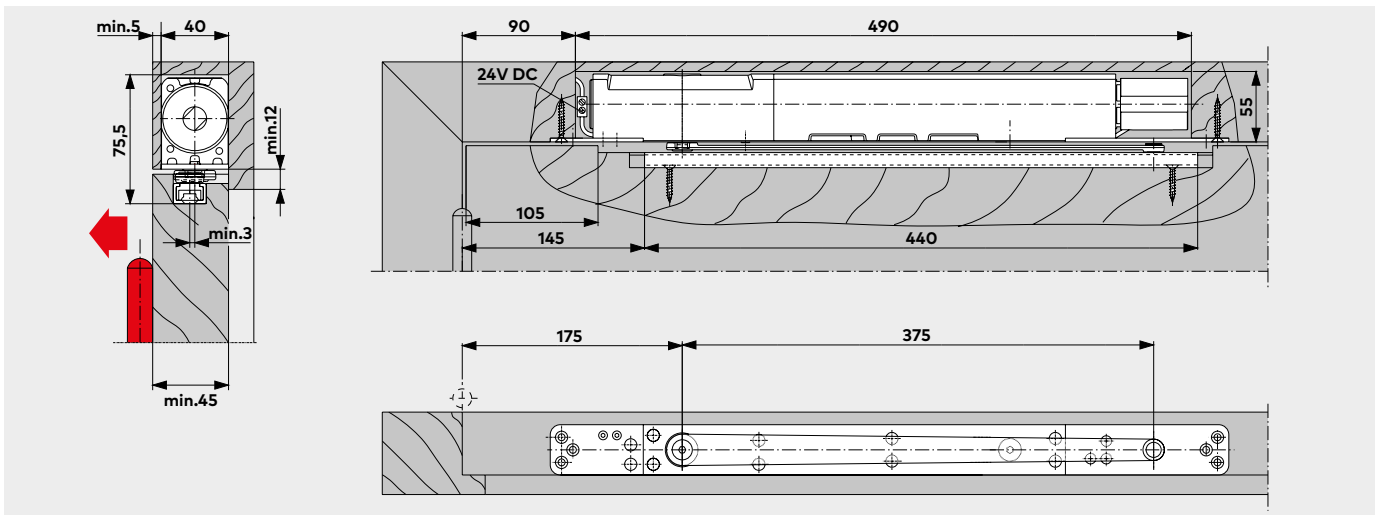

ITS 96 FL door closer with G 96 N20 slide channel in a timber door transom fixing.

Example: Anticlockwise-closing (ISO 6) door; mirror image applies to clockwise-closing (ISO 5) doors.

G 96 EMF Slide channel with electro-mechanical hold-open

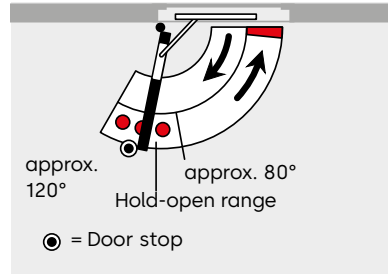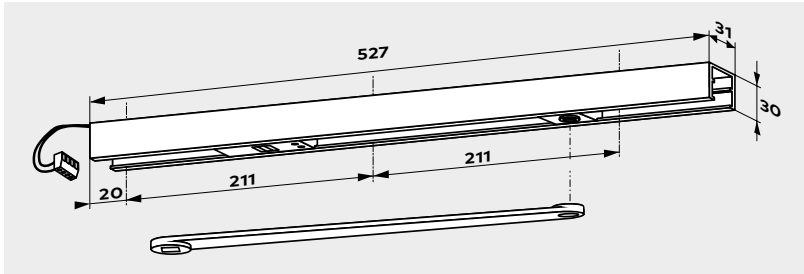

The slide channel assembly enables the door to be held open securely at a pre-selected position without fall-back. The hold-open point can be adjusted within an opening angle of approx. 80° and 120°.

Note:

The hold-open point also constitutes the max. door opening angle – position door stop accordingly.

Technical data	
Operating voltage:	24 V DC, ± 15%
Power input:	1,4 W
Rated for continuous duty:	100% ED
Release force:	Adjustable

In the event of an alarm or a fault in the power supply, the hold-open is released and the door is closed by the door closer. The release is triggered by a signal from external smoke detectors (e.g. RMZ). The release force for the hold-open mechanism can be adjusted without tools and is rated to ensure that the door can also be easily released manually.

The G 96 EMF slide channel assembly comprises the arm, slide channel, slide block, electro-mechanical hold-open unit and fixing screws, and can be combined with both door closer sizes in the ITS 96 range.

In the case of particularly large and heavy doors (over 1250 mm), we recommend that EM hold-open magnets be employed instead of the electro-mechanical hold-open unit.

Specification text


ITS 96 ... door closer (see pages 4 and 5) with G 96 EMF K8/K12 slide channel assembly, with integrated 24 V DC electro-mechanical hold-open, tested to EN 1155. Hold-open point (80° – 120°) and release force adjustable.

Version


- LH (ISO 6) K8/K12
- RH (ISO 5) K8/K12

Make ITS 96 EMF


Example application, hold-open system

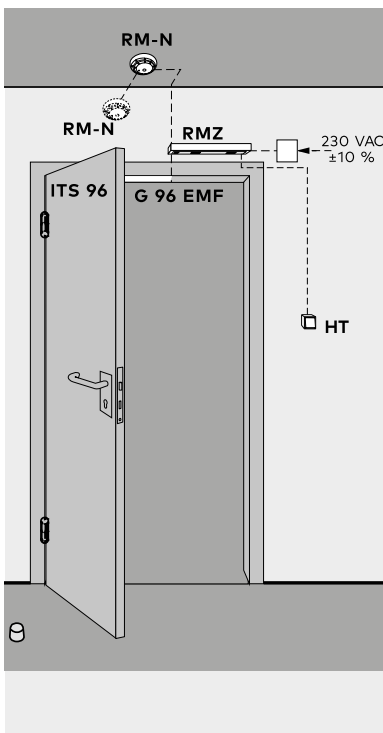


Example of connection plan RMZ with RM-N

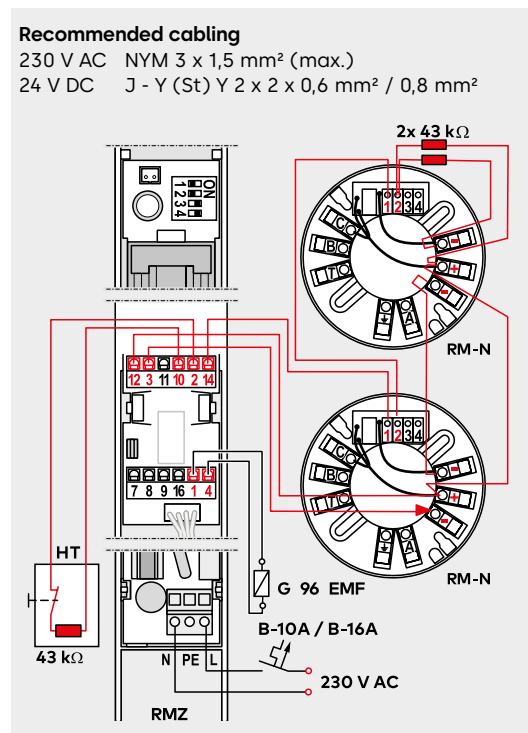


RMZ with FM AP/RM-F radio module

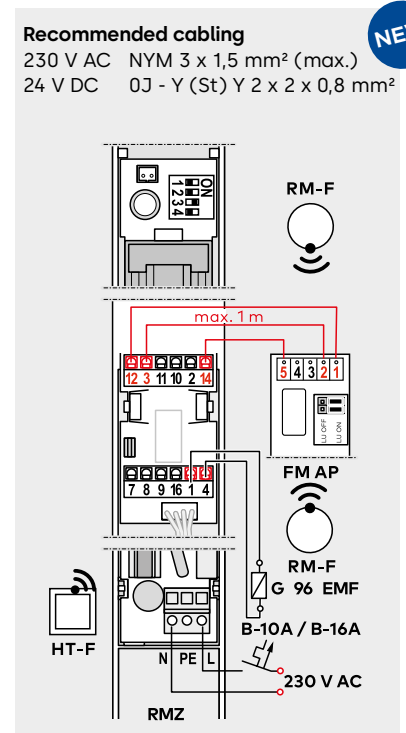

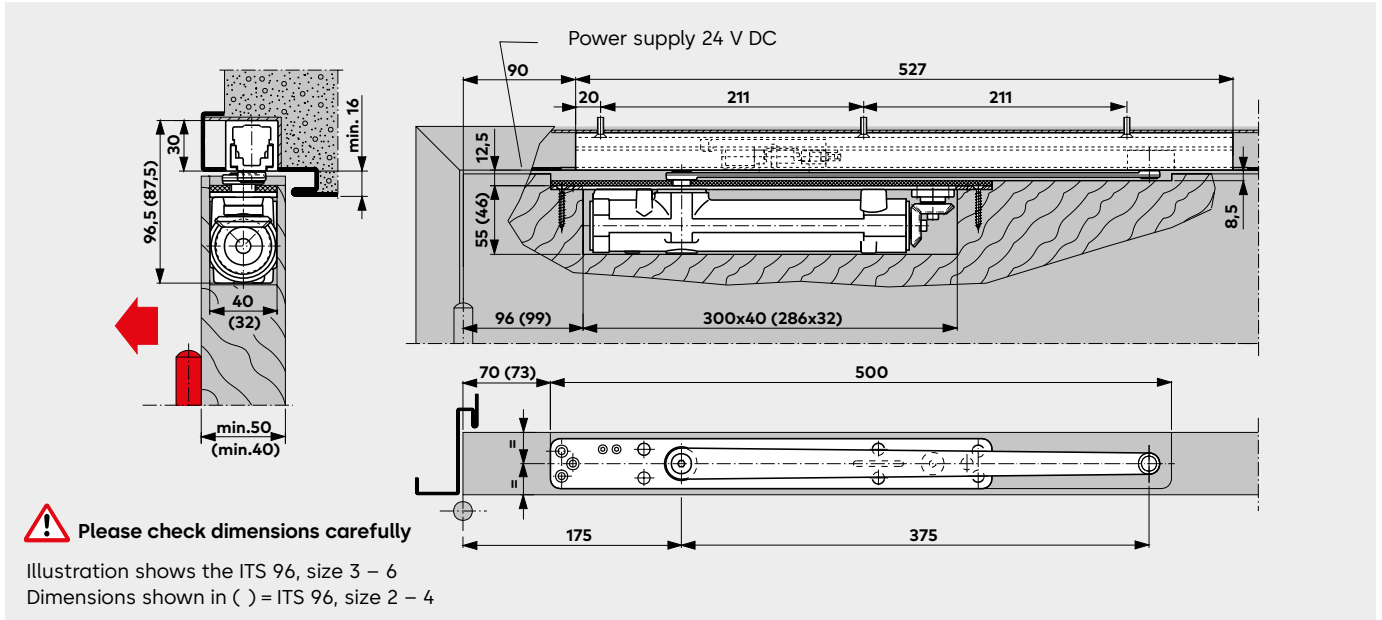

ITS 96 door closer with G 96 EMF slide channel assembly in a **timber door**.
 Example: Anticlockwise-closing (ISO 6) door; mirror image applies to clockwise-closing (ISO 5) doors.

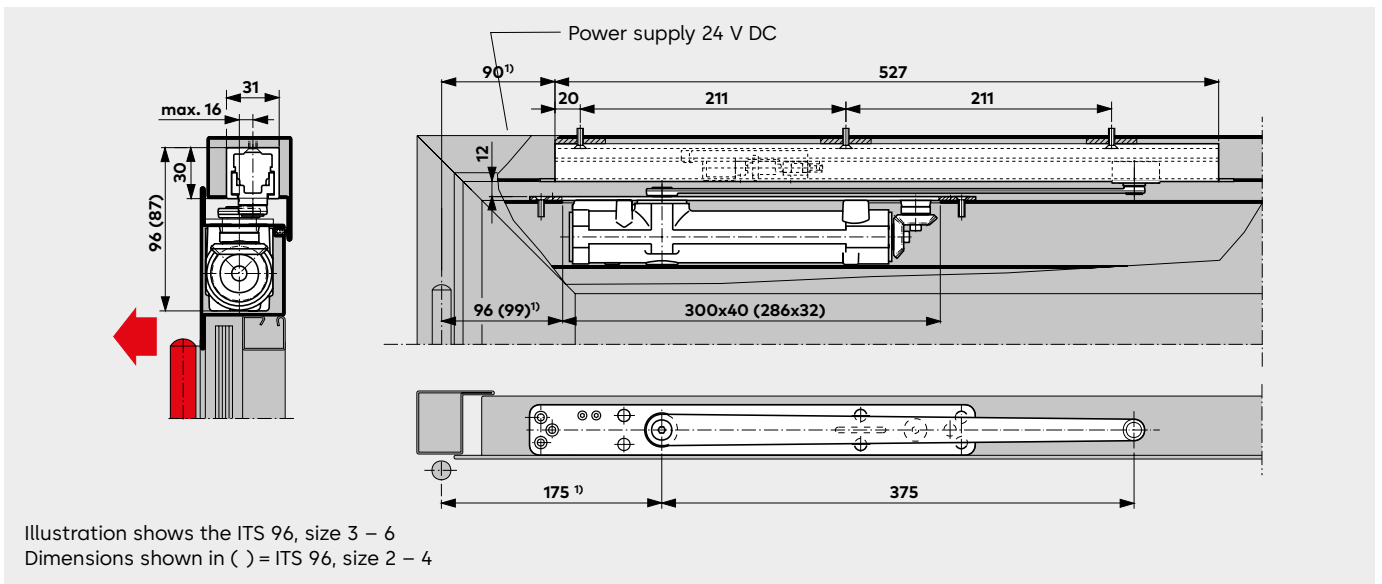

ITS 96 door closer with G 96 EMF slide channel assembly in an **aluminium framed door**.
 Example: Anticlockwise-closing (ISO 6) door; mirror image applies to clockwise-closing (ISO 5) doors.
¹⁾ Add 25 mm for aluminium profile frames with corner-angle reinforcement.

F Approval certification

The ITS 96 EMF has been tested by the State Material Testing Authority, Dortmund, to EN 1155, Electrically Powered Hold-open Devices.

Regulations/Information


The use of hold-open devices may be subject to certain conditions – see page 37.

G 96 GSR Slide channel door co-ordinator

The slide channel with integral door co-ordinator for pairs of doors ensures that the active leaf always closes after the inactive leaf.

The G 96 GSR slide channel door co-ordinator features a push rod clamping system. As this system operates independently of door closer hydraulics, it offers maximum safety and reliability. An overload release protects the door co-ordinator and the door set from damage. The G 96 GSR can be combined with both door closer sizes of the ITS 96 and ITS 96 FL range.


Version/Function	Door width (mm)	Door leaf thickness min. (mm)	Closer size ITS 96
GSR Door co-ordinator	1450 – 2200	40	2 – 4
	1450 – 2800	50	3 – 6

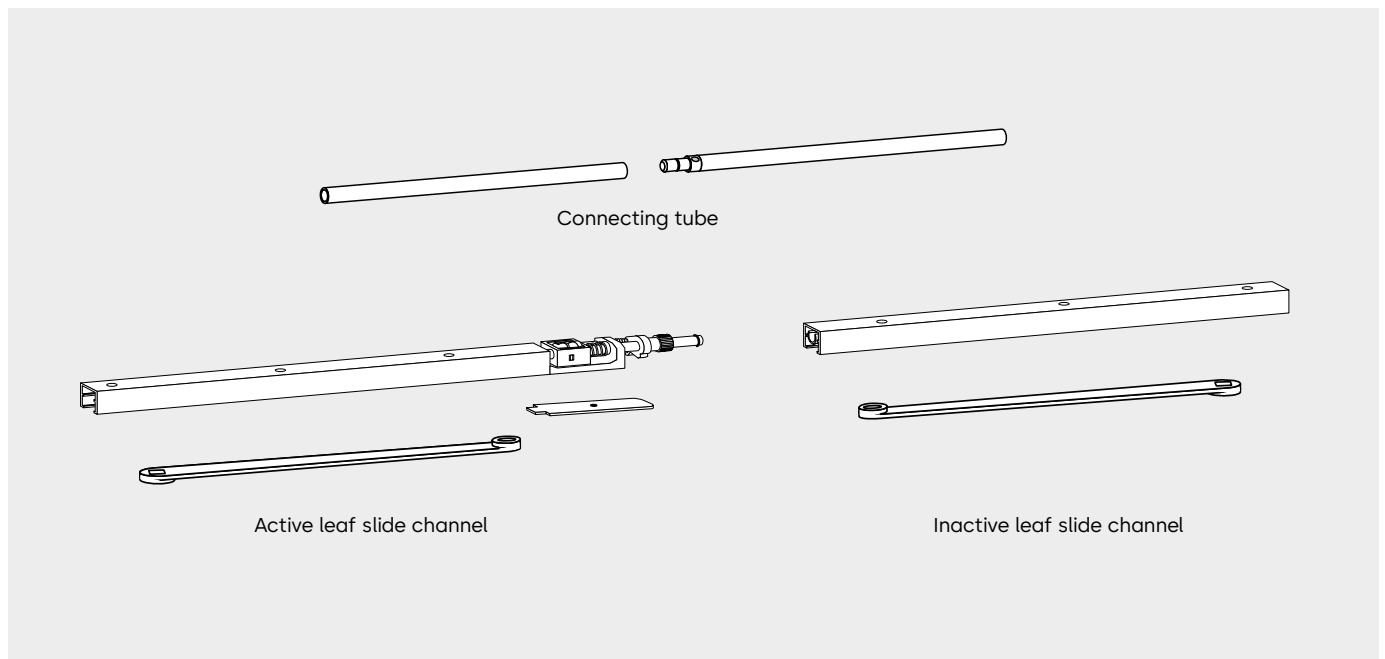

A G 96 GSR slide channel door co-ordinator encompasses an active leaf and an inactive leaf slide channel with cushioned limit stay, a connecting tube, a cover for the co-ordinator mechanism on the active leaf slide channel, and two arms.

F Approval certification

The ITS 96 GSR has been tested to EN 1158, Door Co-ordinator Devices, by the State Material Testing Authority, Dortmund/Germany.

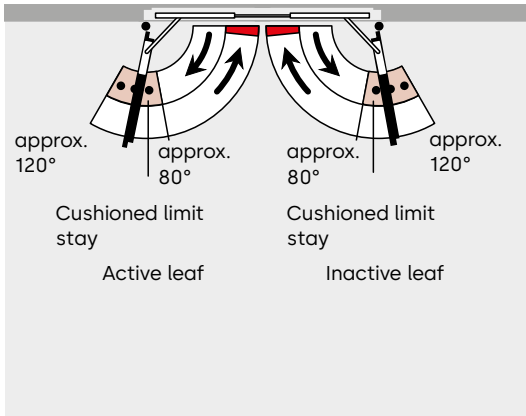

Specification text


ITS 96 door closer (see pages 4 – 6) with G 96 GSR K8/K12 slide channel, featuring integrated mechanical door co-ordinator using a push rod clamping system with overload release which operates independently of the closer hydraulics. Standard design – door leaves with no hold-open. Tested to EN 1158.

Approved by the Institute of Building Technology, Berlin, for general use in conjunction with fire and smoke check doors.

Make

ITS 96 GSR

Example application

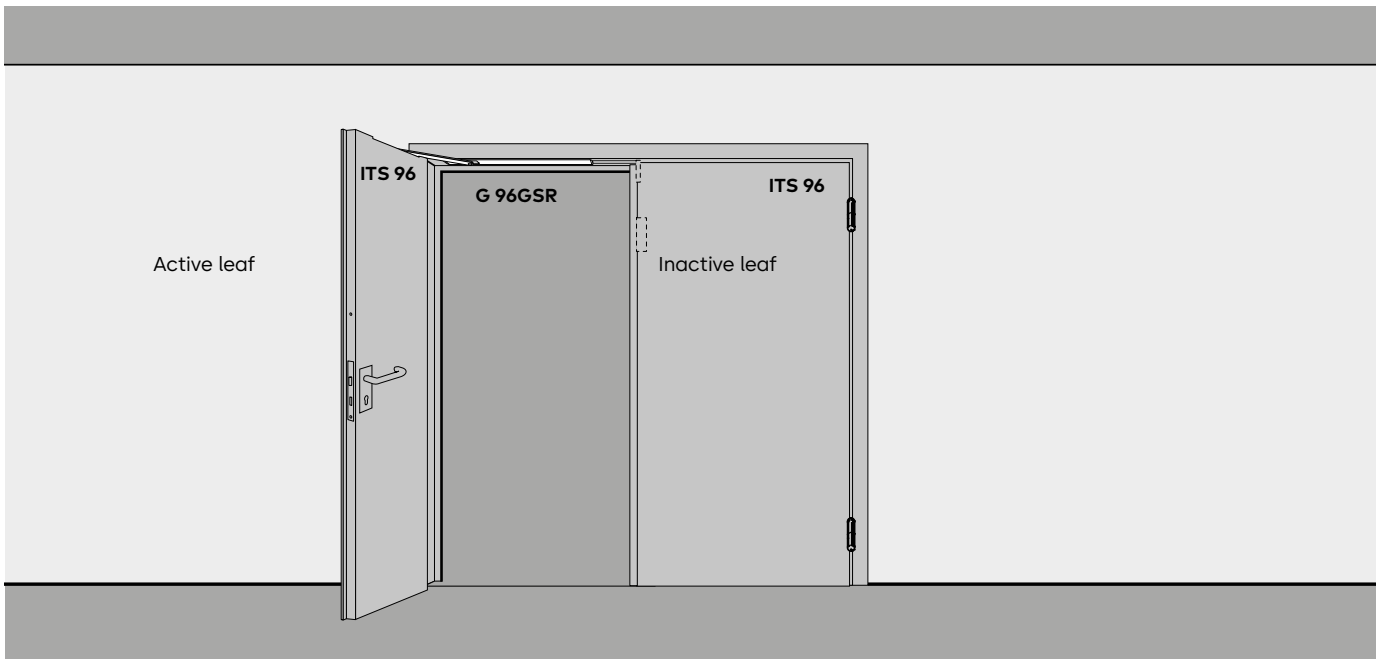

G 96 GSR-EMF Slide channel door co-ordinator with electro-mechanical hold-open

This door co-ordinator not only ensures the correct closing sequence of pairs of doors, but also allows the door leaves to be individually held open by an electromechanical device. The hold-open point for both door leaves lies between approx. 80° and 120°.

In the event of an alarm or a fault in the power supply, the hold-open is released and the door is closed by the door closer. The release is initiated by a signal from external

smoke detectors (e.g. RMZ) or other fire alarm. The release force for the hold-open mechanism can be adjusted without tools and is rated to ensure that the door can also be easily released manually.

The G 96 GSR-EMF slide channel door co-ordinator can be combined with both door closer sizes of the ITS 96 range. In the case of particularly large and heavy doors (over 2500 mm), we recommended that EM hold-open magnets be employed

instead of the electro-mechanical hold-open unit.


Note:

The hold-open point also constitutes the max. door opening angle – position door stop accordingly.

Regulations/Information

The use of hold-open devices may be subject to certain conditions – see page 37.

Version/Function	Door width (mm)	Door leaf thickness min. (mm)	Closer size ITS 96
GSR-EMF	1450 – 2200	40	2 – 4
Door-coordinator and hold-open in both leaves	1450 – 2800	50	3 – 6

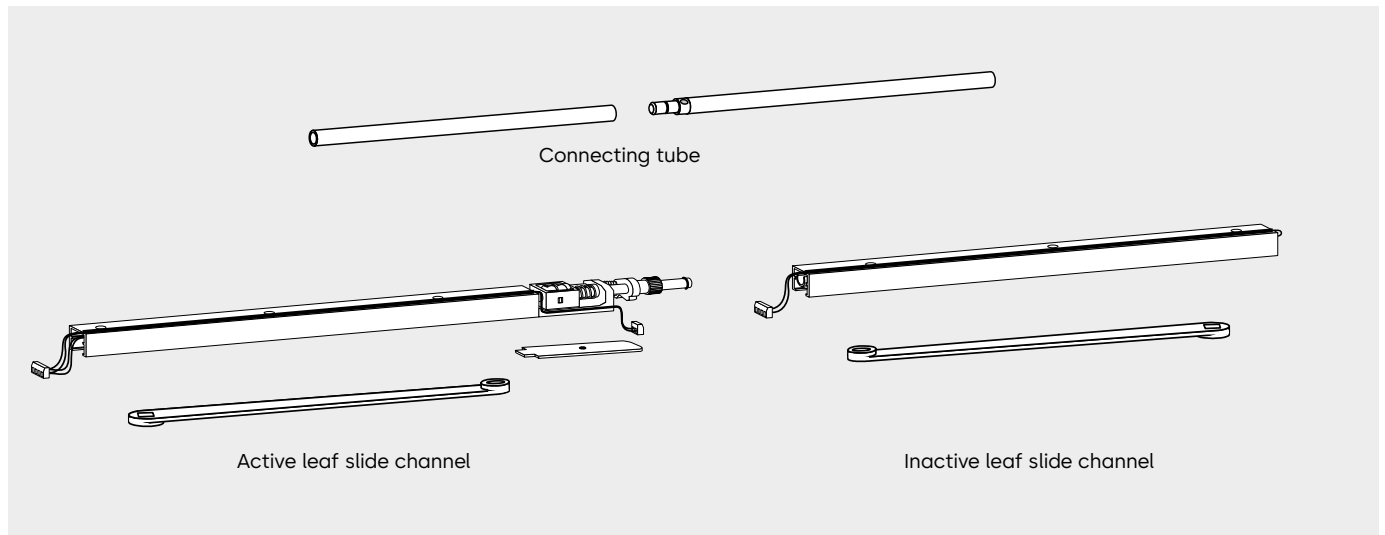


A G 96 GSR slide channel door coordinator encompasses an active leaf and an inactive leaf slide channel with electromechanical hold-open, a connecting tube, a cover for the co-ordinator mechanism on the active leaf slide channel, and two arms.

F Approval certification

The ITS 96 GSR-EMF has been tested by the State Materials Testing Authority, Dortmund, to EN 1158, Door Coordinator Devices, and EN 1155, Electrically Powered Hold-Open Devices.

Technical data	
Operating voltage:	24 V DC, ± 15%
Power input:	2,8 W
Rated for continuous duty:	100% ED
Release force:	adjustable

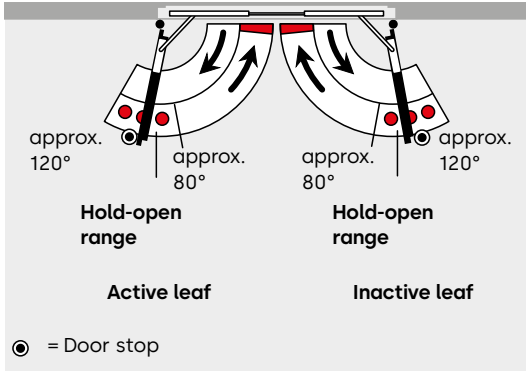

Specification text

ITS 96 ... door closer (see pages 4 – 6) with G 96 GSR-EMF K8/K12 slide channel, featuring integrated mechanical door co-ordinator using a push rod clamping system with overload release which operates independently of the closer hydraulics, with integrated electro-mechanical hold-open, 24 V DC. Hold-open point (80° – 120°) and release force adjustable.


Tested to EN 1158 and EN 1155.

Approved by the Institute of Building Technology, Berlin, for general use in hold-open systems. Acceptance inspection of the system is mandatory in Germany.

Make

ITS 96 GSR-EMF


Example application, hold-open system

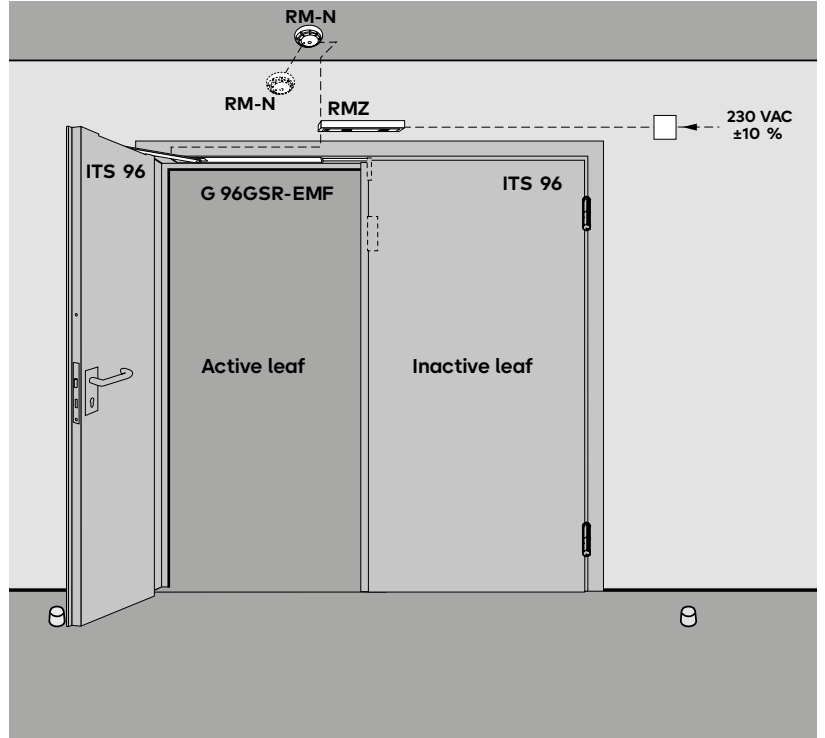

Example of connection plan RMZ with RM-N

Recommended cabling

230 V AC NYM 3 x 1,5 mm² (max.)
 24 V DC J - Y (St) Y 2 x 2 x 0,6 mm² / 0,8 mm²

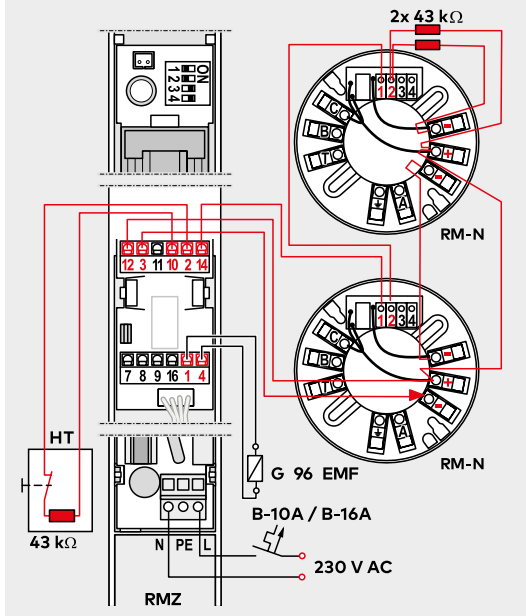


RMZ with FM AP/RM-F radio module



Recommended cabling

230 V AC NYM 3 x 1,5 mm² (max.)
 24 V DC J - Y (St) Y 2 x 2 x 0,8 mm²

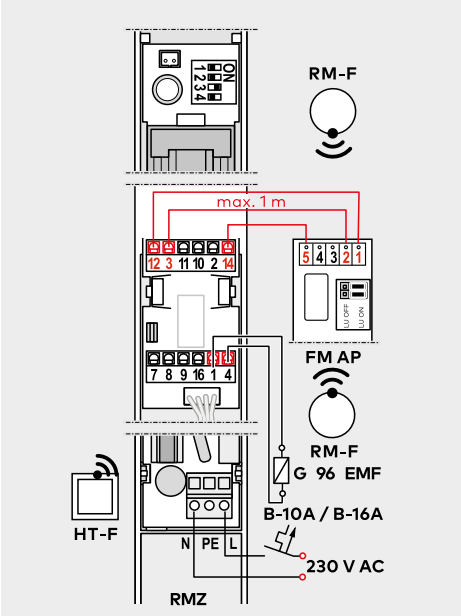

Installation in a timber door



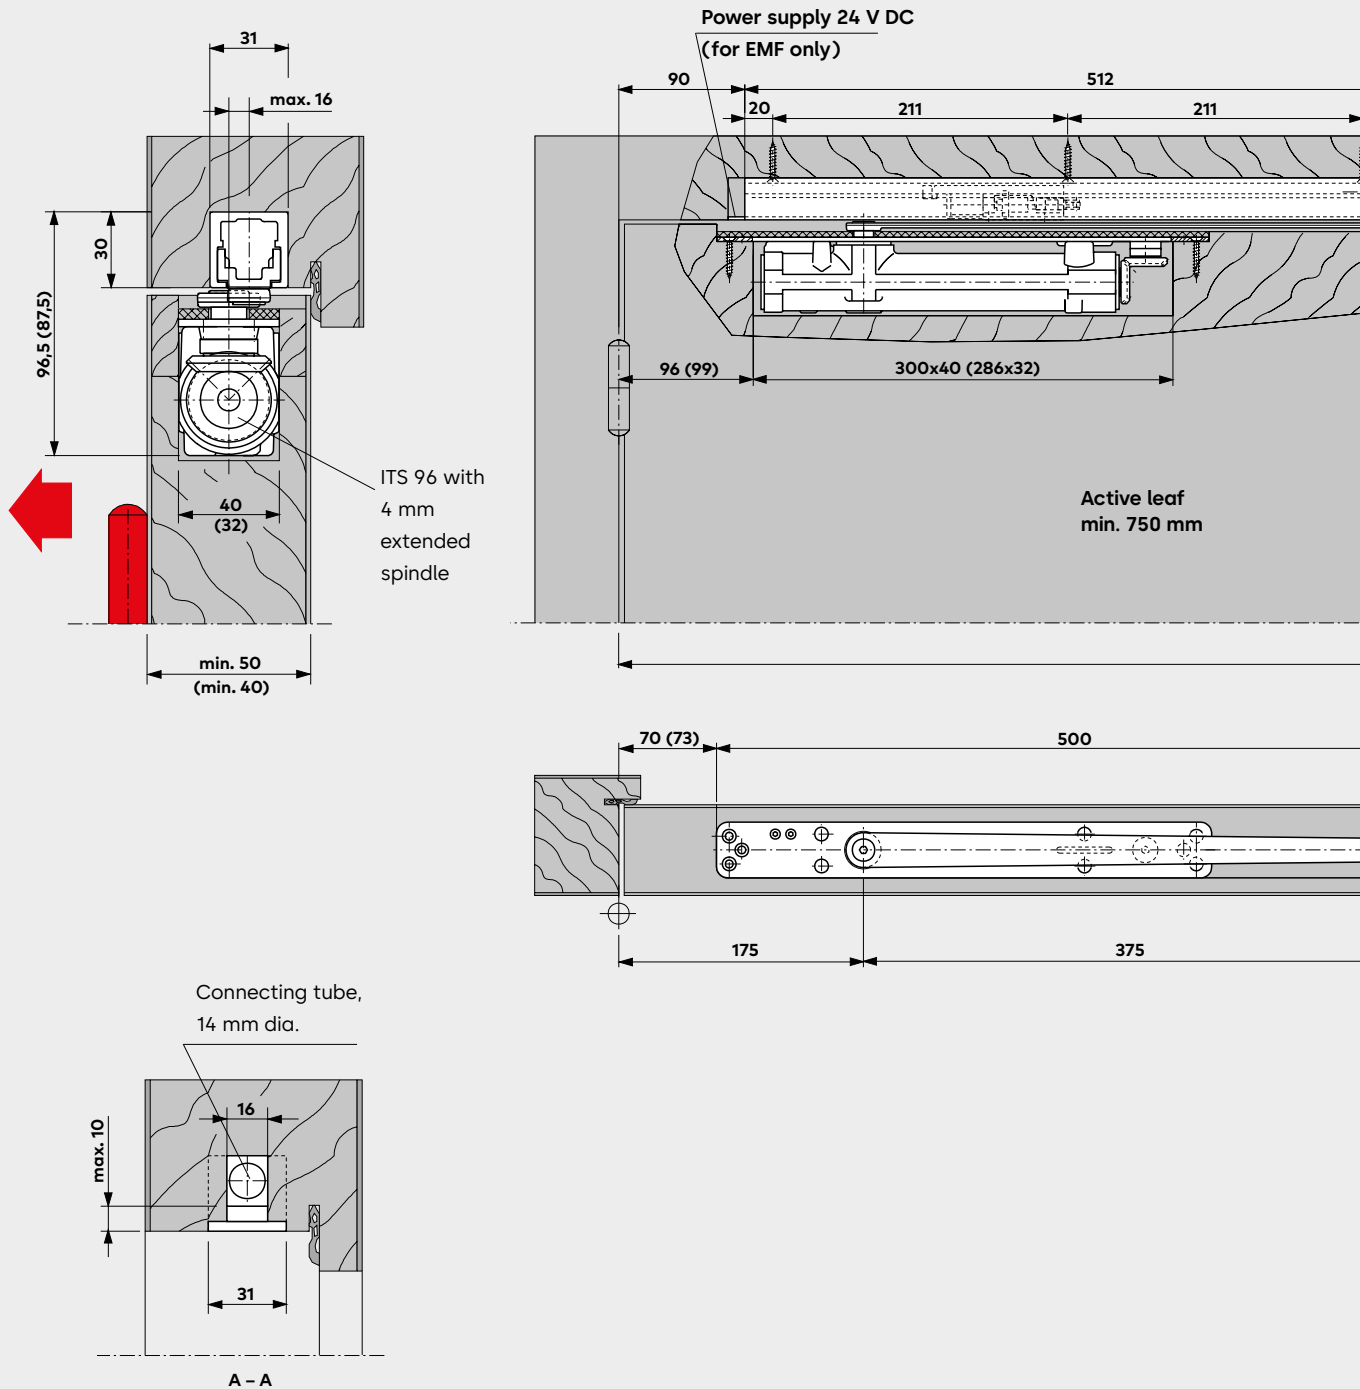


Illustration shows the ITS 96, size 3 – 6



Dimensions shown in () = ITS 96, size 2 – 4

ITS 96 door closer with G 96 GSR/GSR-EMF slide channel.

Example: Anticlockwise-closing (ISO 6) active leaf; mirror image applies to clockwise-closing (ISO 5) active leaf.

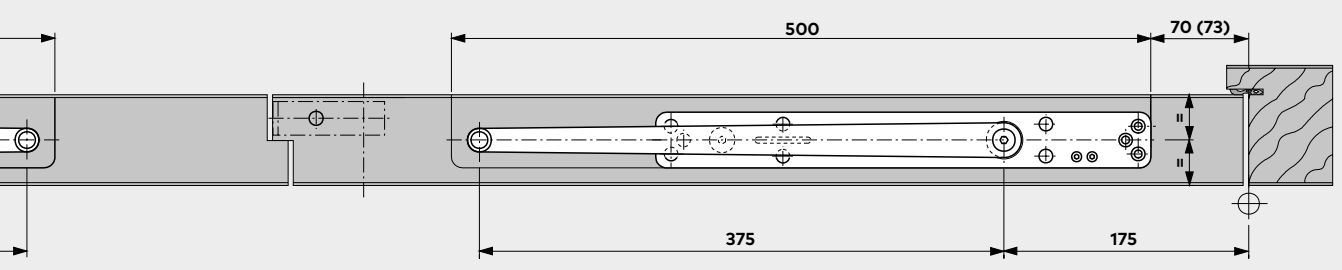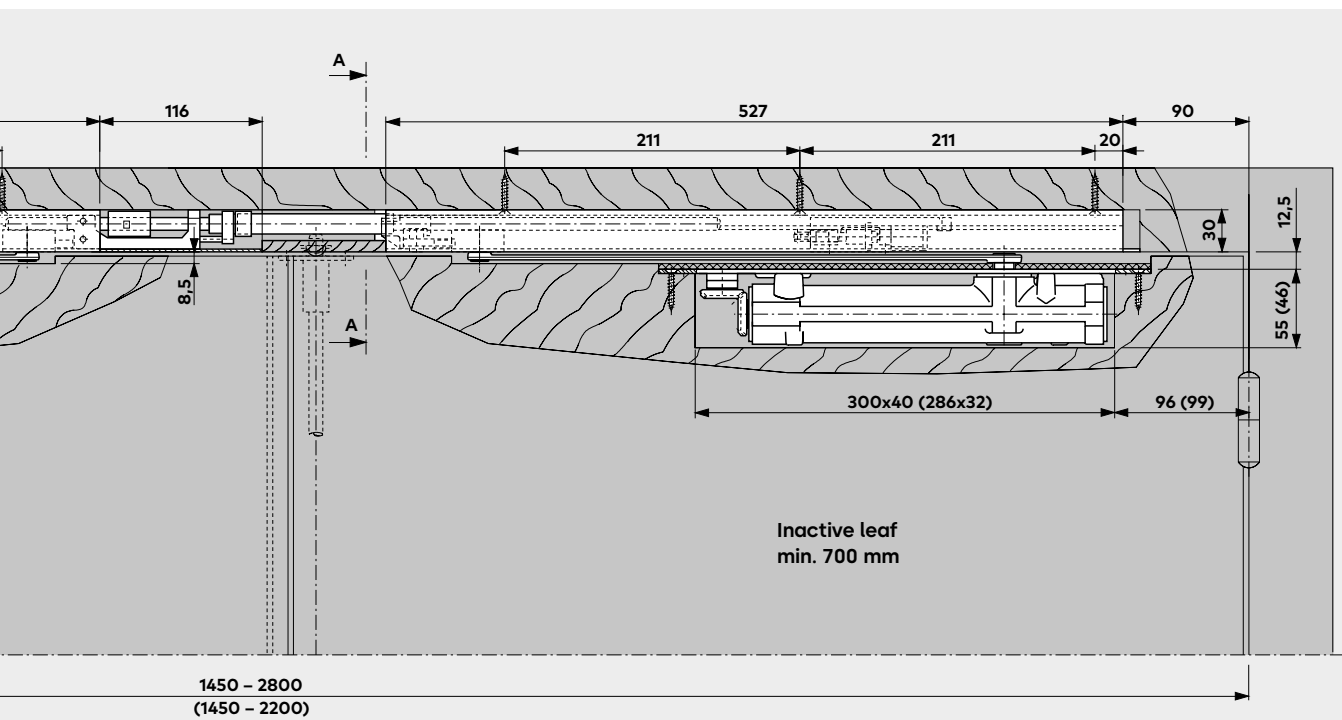


GSR door co-ordinator for
narrow inactive leaf
(inactive leaf slide channel
shortened, arm 260 mm)
Inactive leaf 540 - 700 mm
Active leaf min. 750 mm

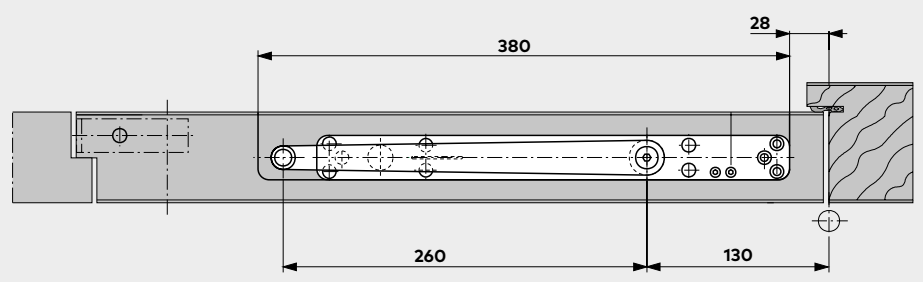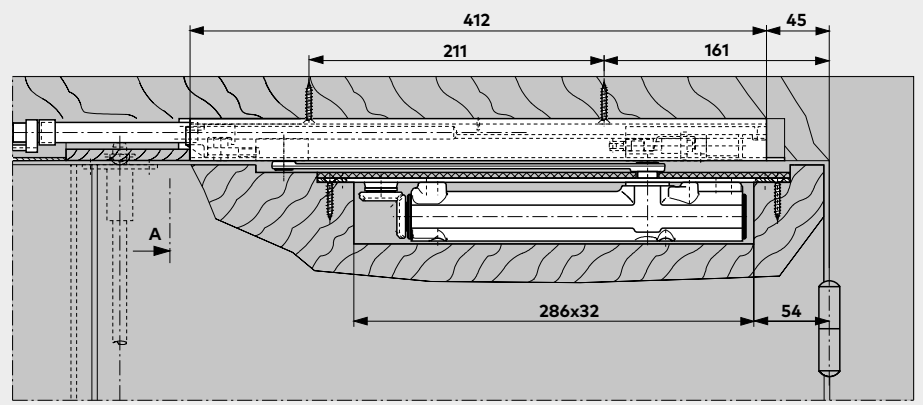




F When installed in fire and smoke check doors, ensure that the MK 397 carry bar is also fitted.

Installation in an aluminium framed door

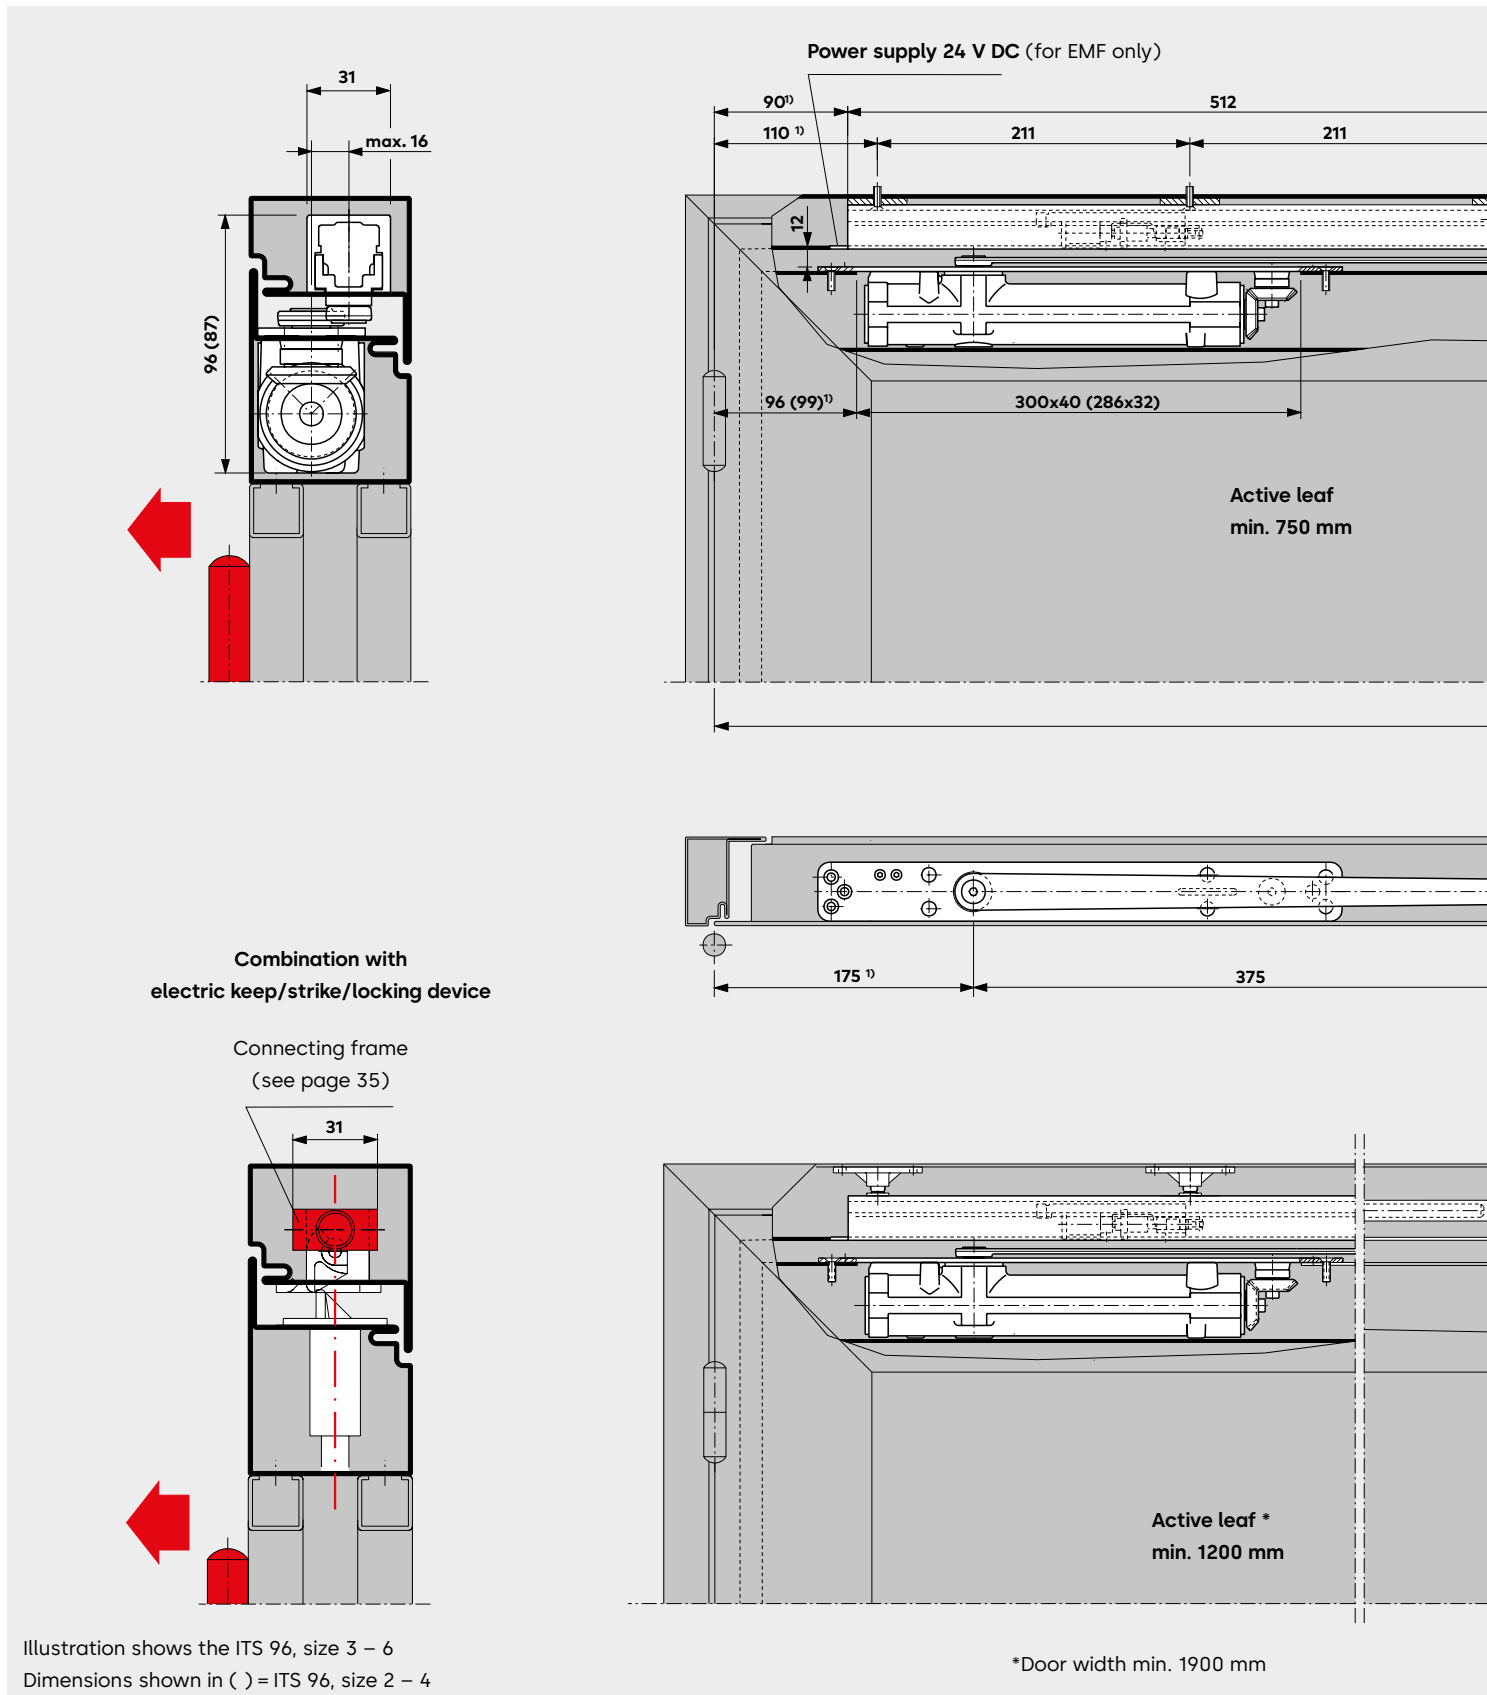


ITS 96 door closer with G 96 GSR/GSR-EMF slide channel.
Example: Anticlockwise-closing (ISO 6) active leaf; mirror image applies to clockwise-closing (ISO 5) active leaf.

¹⁾ Add 25 mm for aluminium profile frames with corner-angle reinforcement.

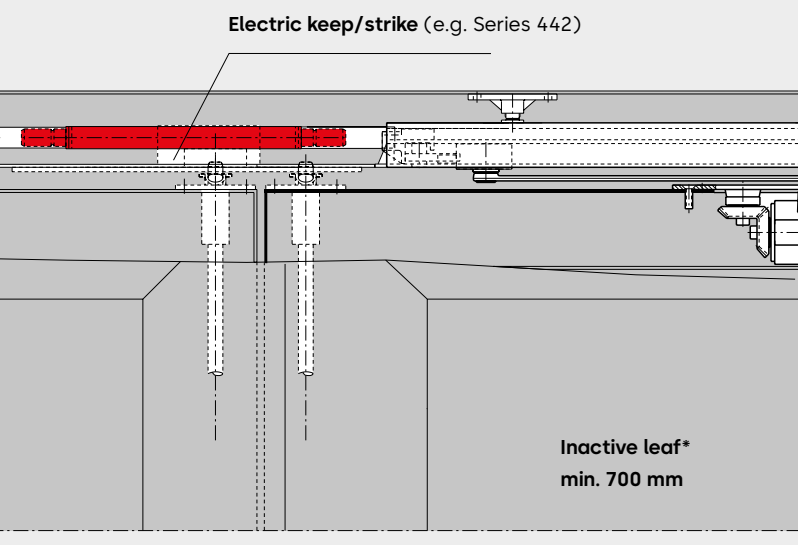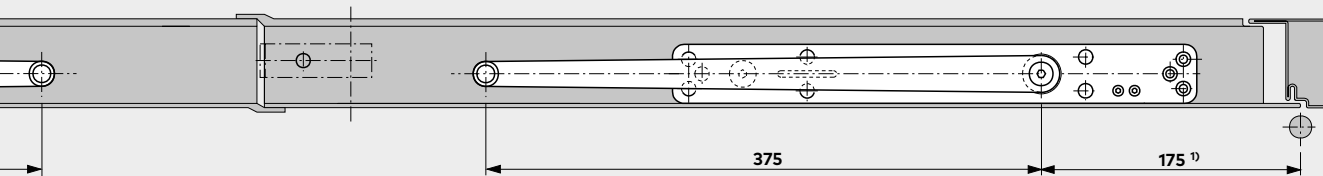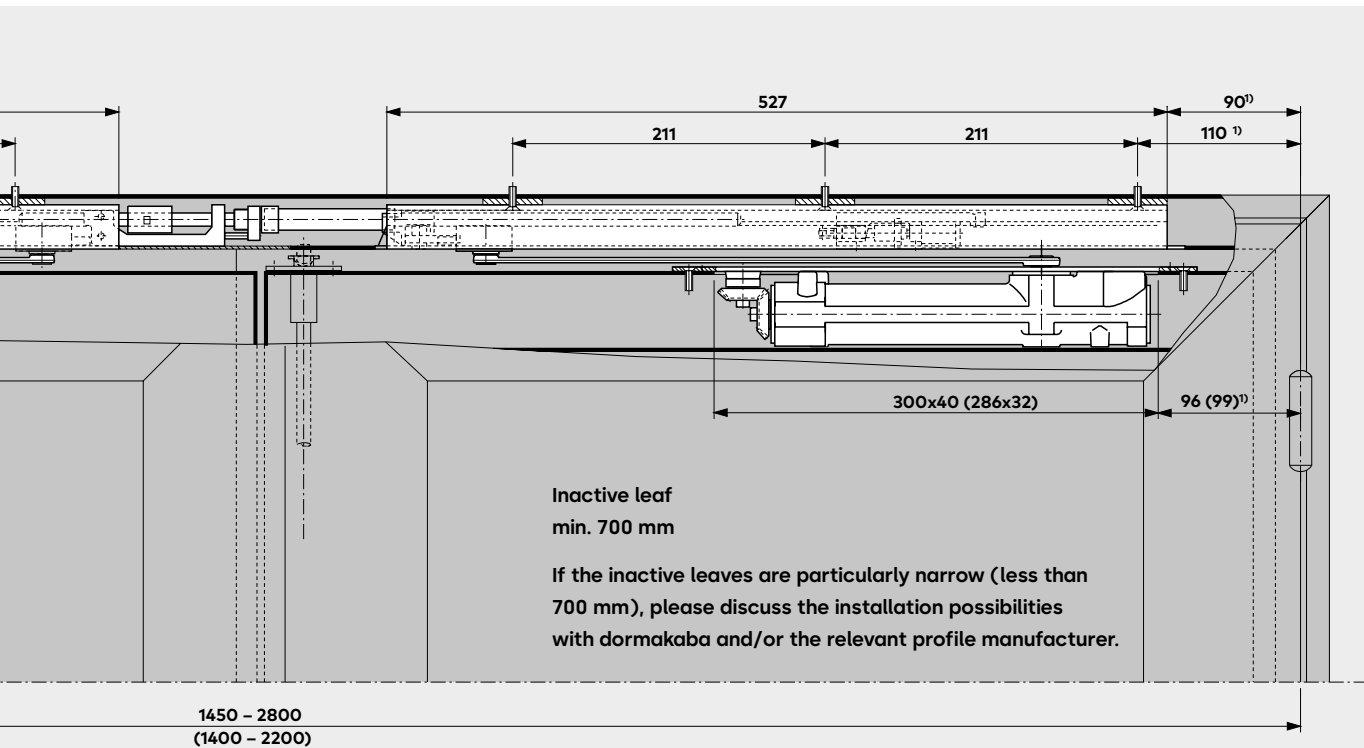

Profile frames with corner angle reinforcement

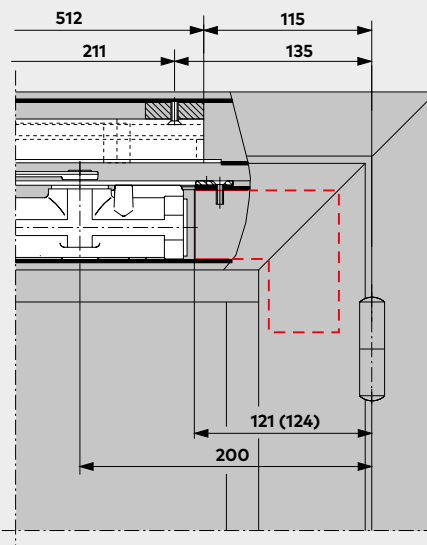

F When installed in fire and smoke check doors, ensure that the MK 397 carry bar is also fitted.

G 96 GSR Slide channel door co-ordinator with free swing function at the leaf


The ITS 96 system also allows the fitting of an ITS 96 FL on the active leaf of pairs of doors. As the door is opened, the free-swing function is activated for the active leaf from a door opening angle >0°.

The slide channel with integral door co-ordinator for pairs of doors ensures that the active leaf always closes after the inactive leaf.

The G 96 GSR slide channel door co-ordinator features a push rod clamping system. As this system operates independently of door closer hydraulics, it offers maximum safety and reliability.

An overload release protects the door co-ordinator and the door set from damage. The G 96 GSR can be combined with the ITS 96 FL at the active leaf.


Version/Function	Door width (mm)	Door leaf thickness min. (mm)	Closer size ITS 96
GSR Door co-ordinator	1450 – 2800	50	3 – 6

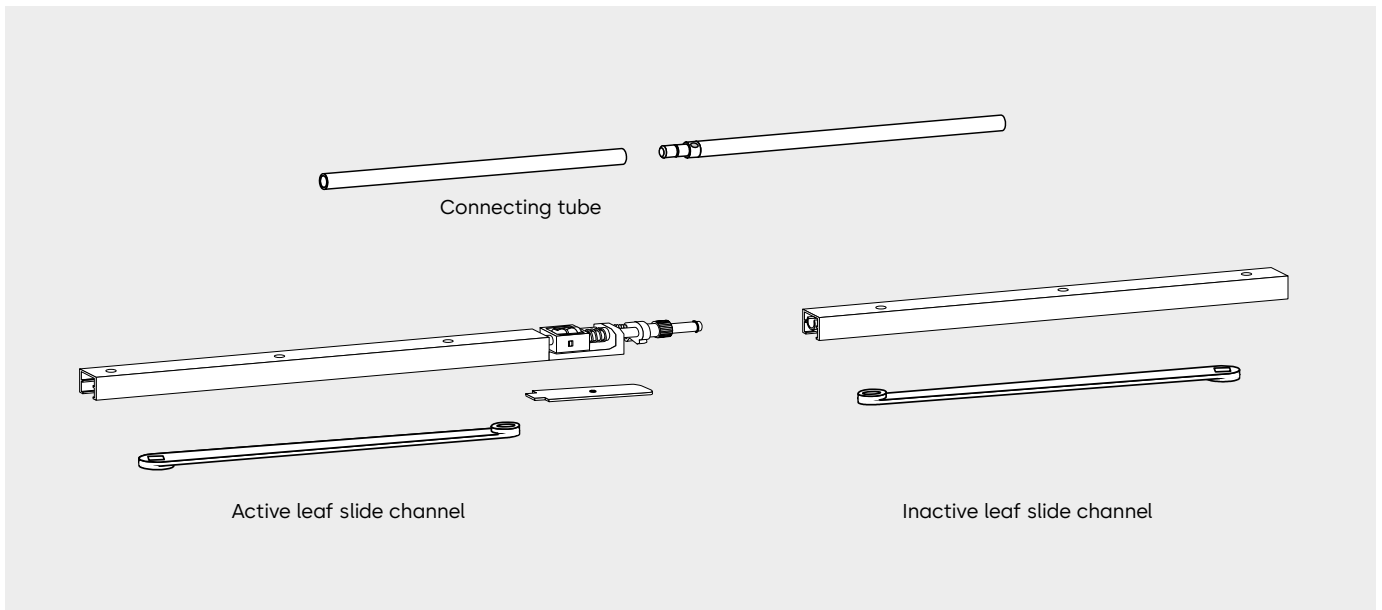

A slide channel door co-ordinator encompasses an active leaf and an inactive leaf slide channel with cushioned limit stay, a connecting tube, a cover for the co-ordinator mechanism on the active leaf slide channel, and two arms.

F Approval certification

The ITS 96 GSR has been tested to EN 1158, Door Coordinator Devices, by the State Material Testing Authority, Dortmund/Germany

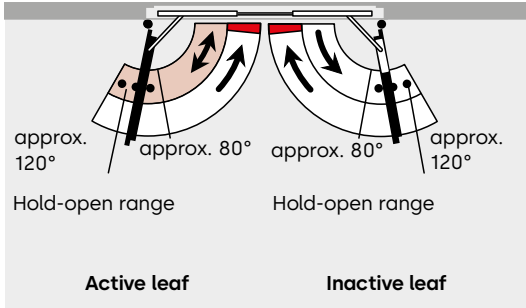

Specification text

ITS 96 FL / ITS 96 door closer (see pages 4 – 7) with G 96 GSR K8/K12 slide channel, featuring integrated mechanical door co-ordinator using a push rod clamping system with overload release which operates independently of the closer hydraulics.


Tested to EN 1158.

Approved by the Institute of Building Technology, Berlin, for general use in conjunction with fire and smoke check doors.

Make

ITS 96 FL GSR


Example application, hold-open system

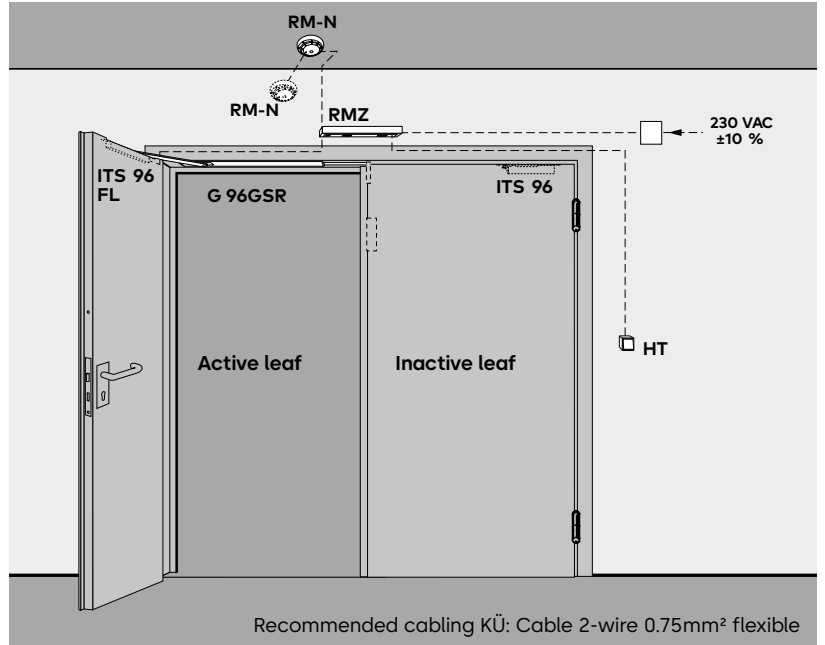

Example of connection plan RMZ with RM-N

Recommended cabling

230 V AC NYM 3 x 1,5 mm² (max.)
24 V DC J - Y (St) Y 2 x 2 x 0,6 mm² / 0,8 mm²

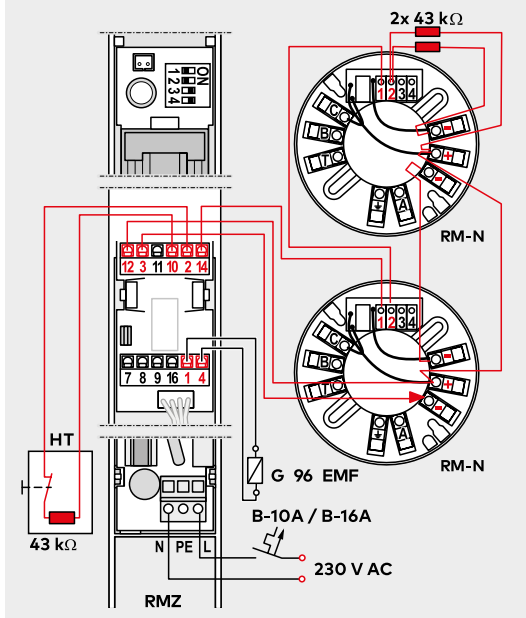


RMZ with FM AP/RM-F radio module




Recommended cabling



230 V AC NYM 3 x 1,5 mm² (max.)
24 V DC J - Y (St) Y 2 x 2 x 0,8 mm²

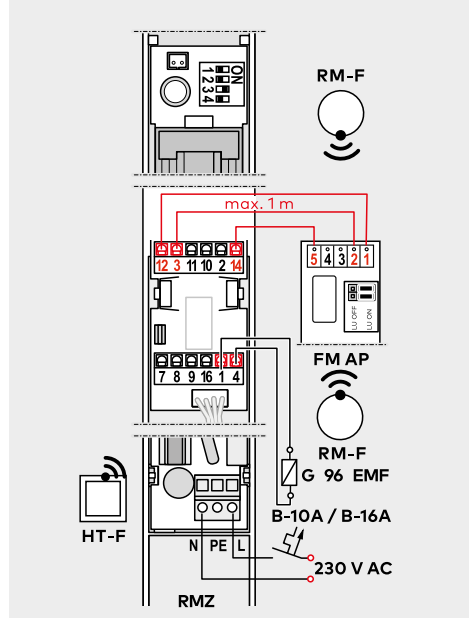



Installation in a timber door

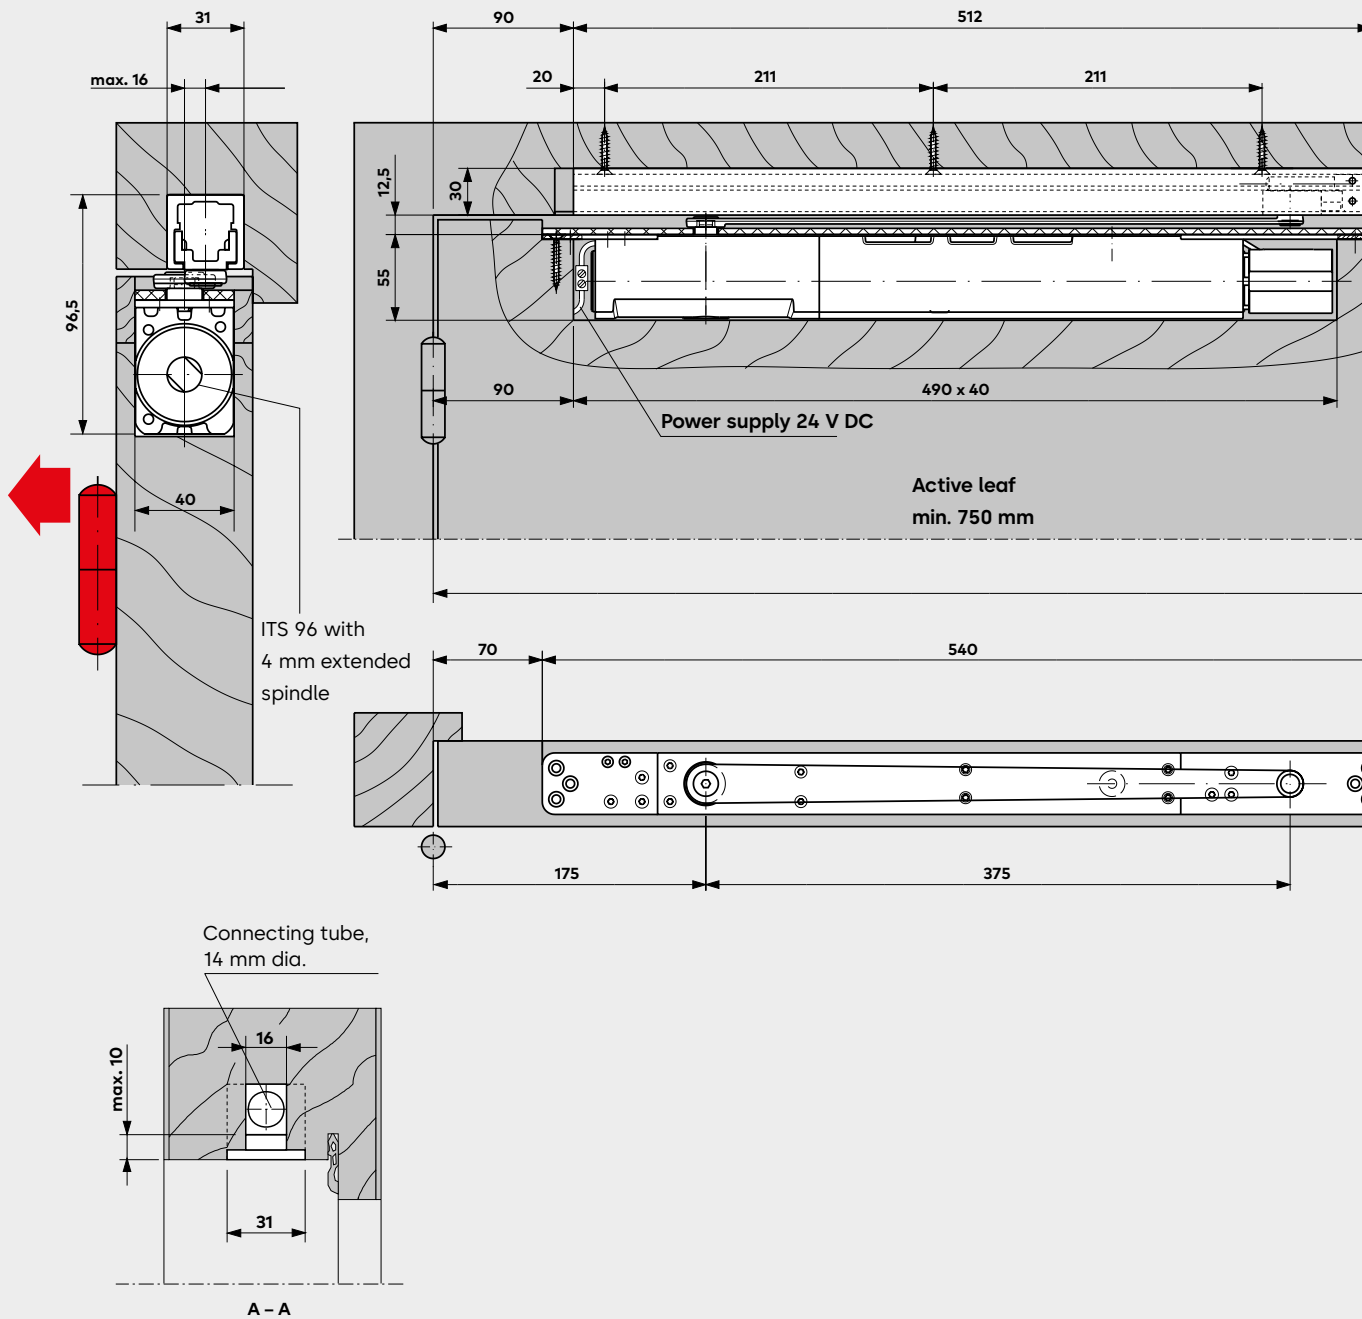

ITS 96 FL door closer at the active leaf and ITS 96 door closer at the inactive leaf with dormakaba G 96 GSR slide channel.
 Example: Anticlockwise-closing (ISO 6) active leaf; mirror image applies to clockwise-closing (ISO 5) active leaf.

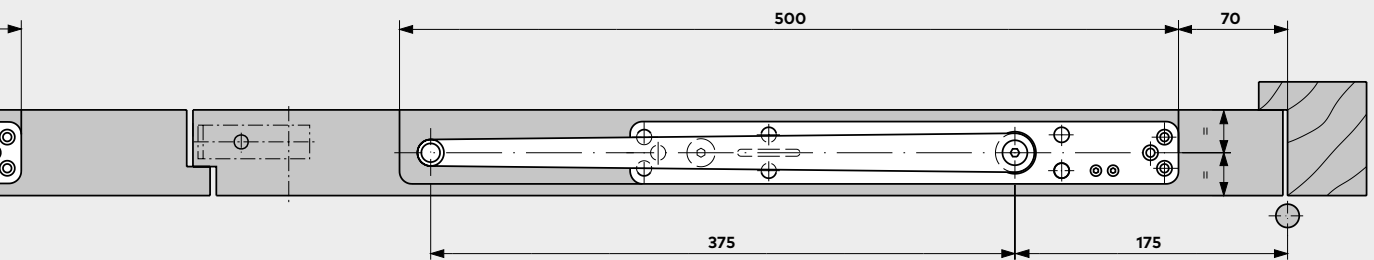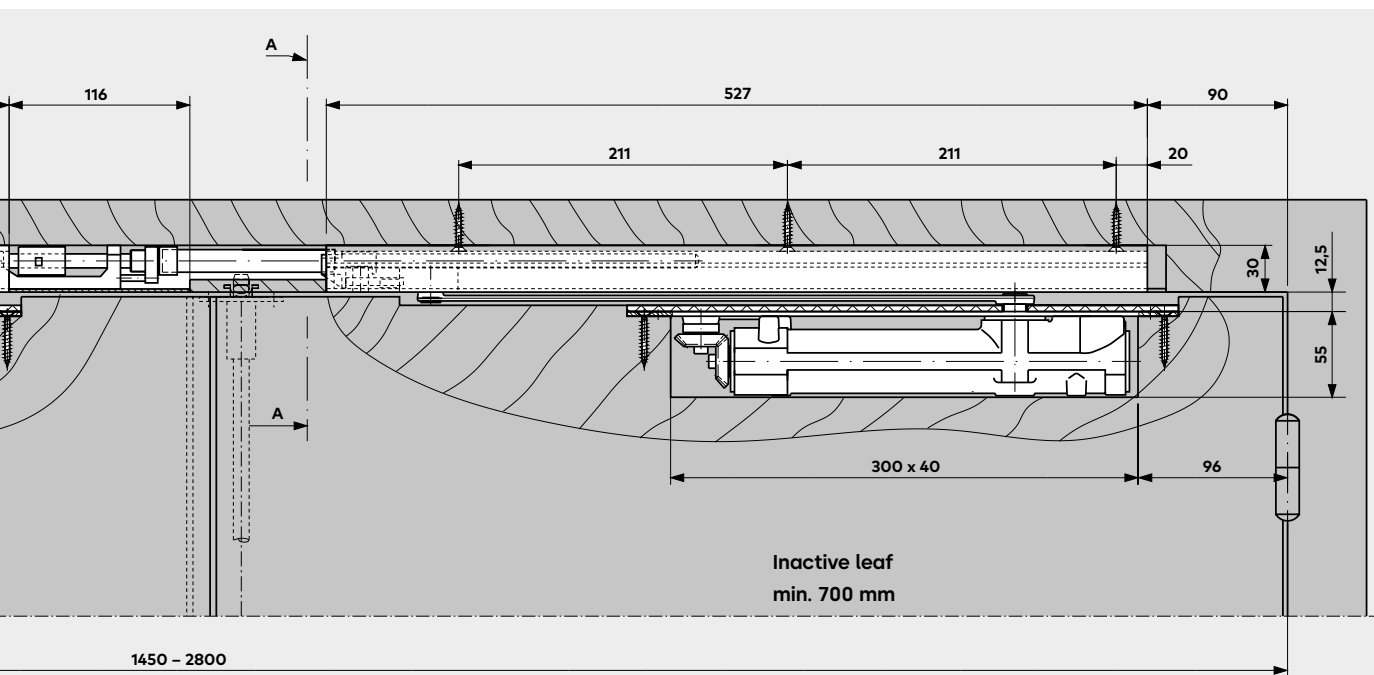


GSR door co-ordinator for **narrow inactive leaf** (inactive leaf slide channel shortened, arm 260 mm)
Inactive leaf 540 - 700 mm
Active leaf min. 750 mm

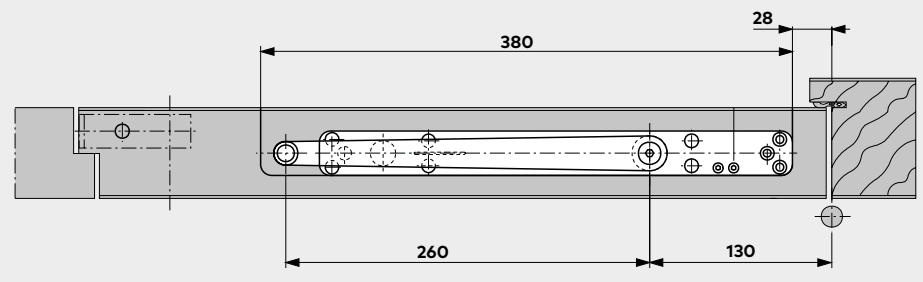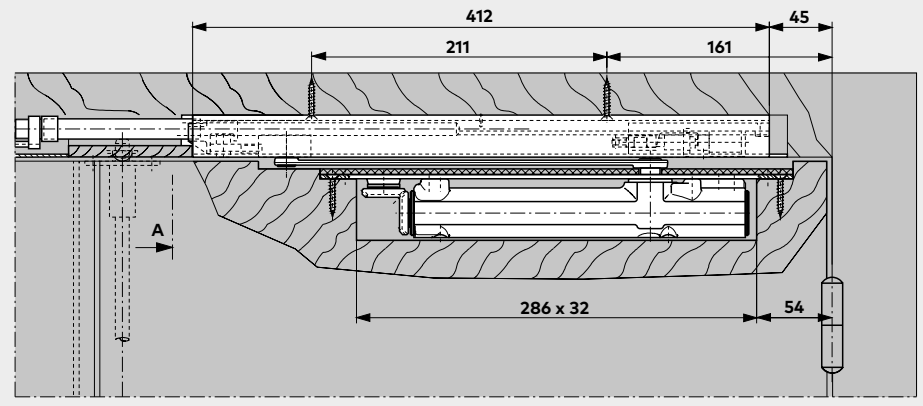




F When installed in fire and smoke check doors, ensure that the MK 397 carry bar is also fitted.

Installation in an aluminium framed door

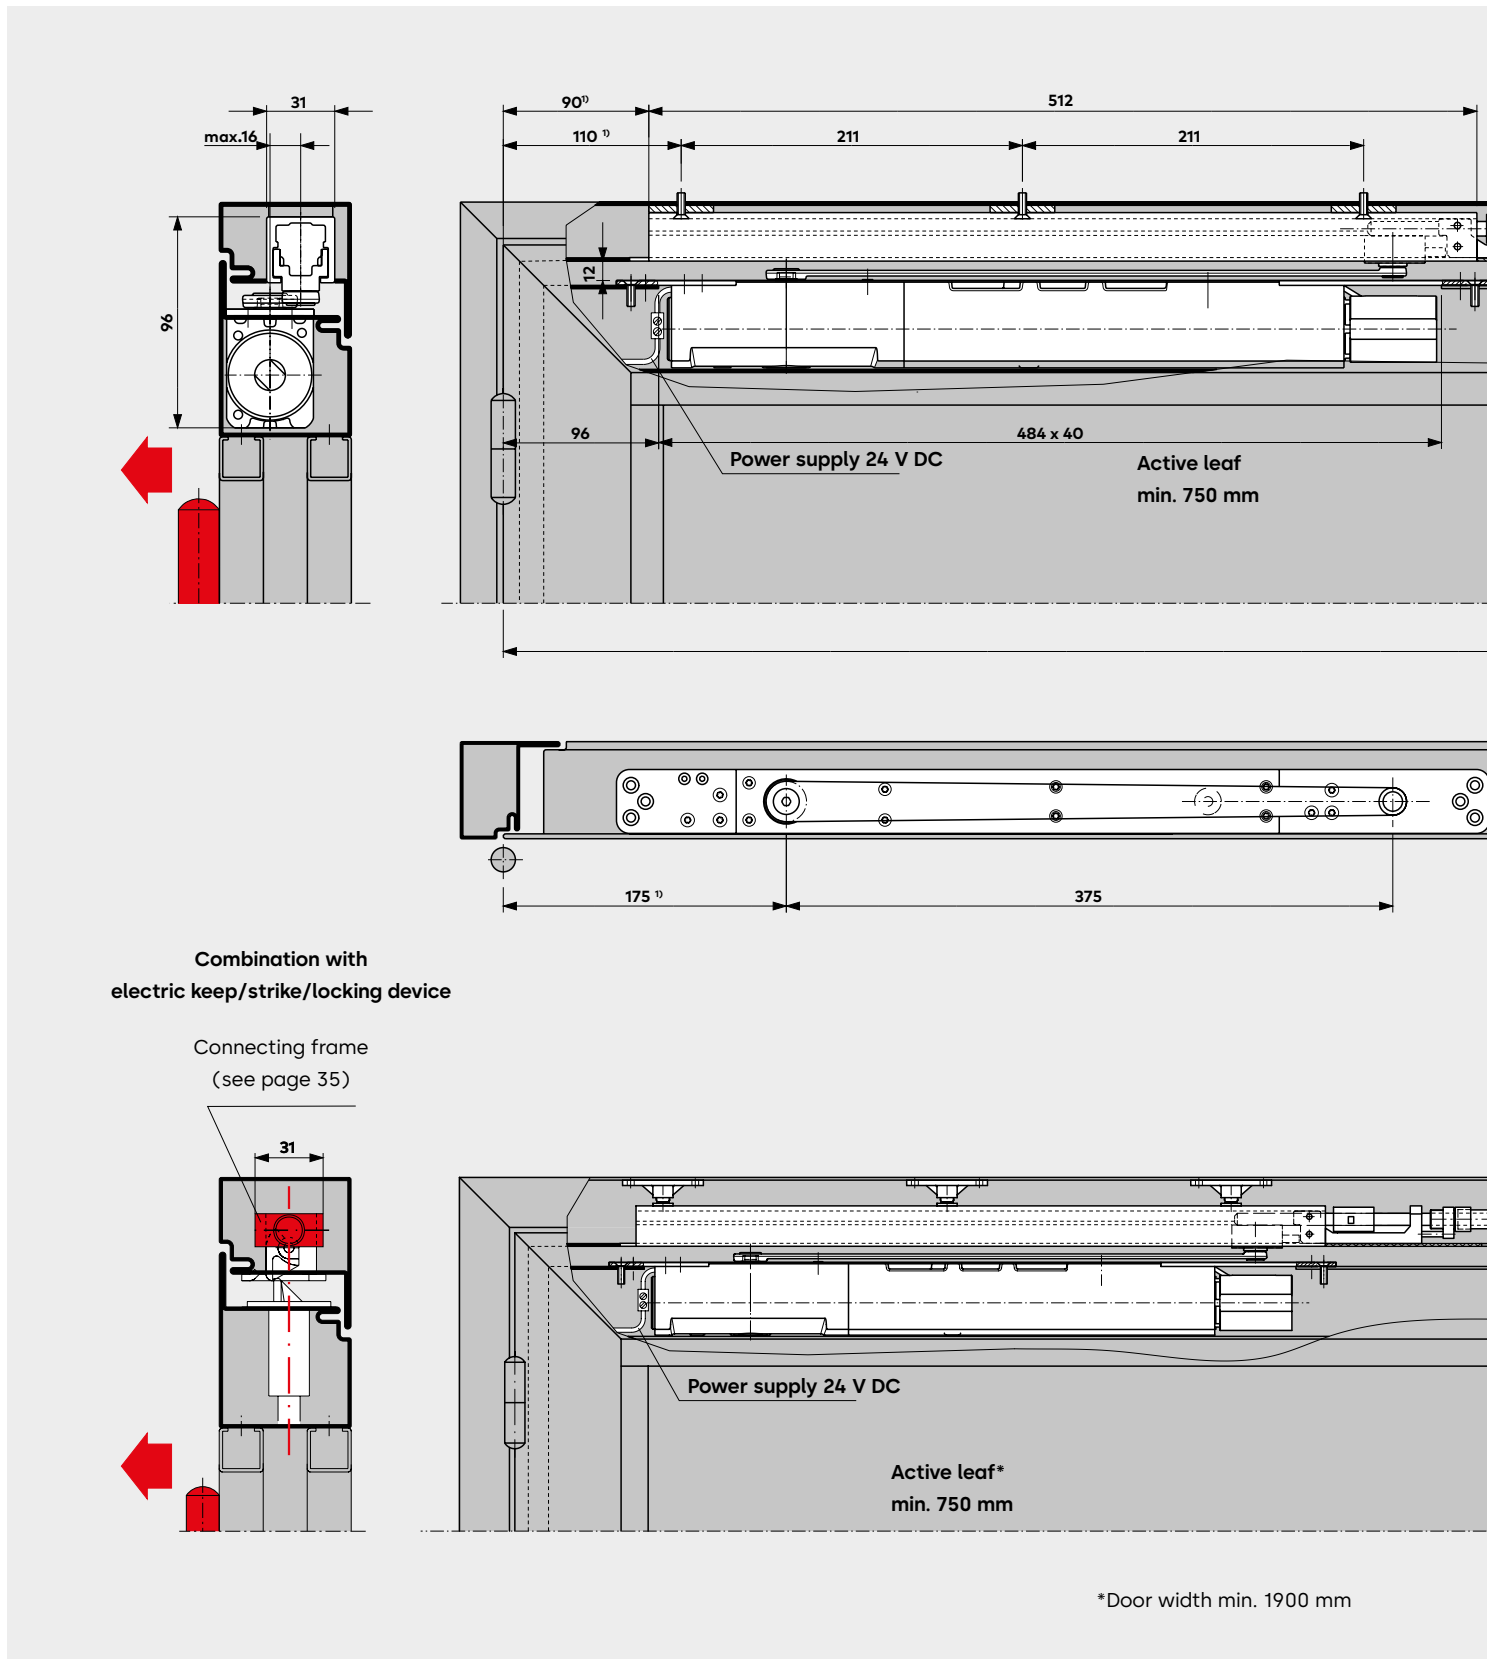

ITS 96 FL door closer at the active leaf and ITS 96 door closer at the inactive leaf with G 96 GSR slide channel.
 Example: Anticlockwise-closing (ISO 6) active leaf; mirror image applies to clockwise-closing (ISO 5) active leaf.

¹⁾ Add 25 mm for aluminium profile frames with corner-angle reinforcement.

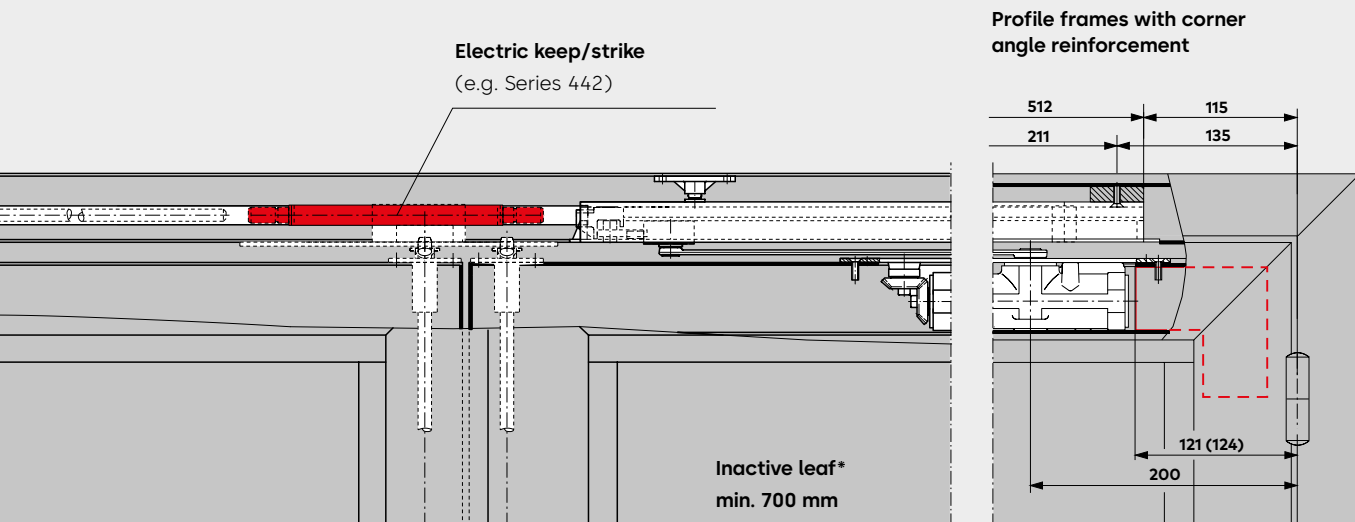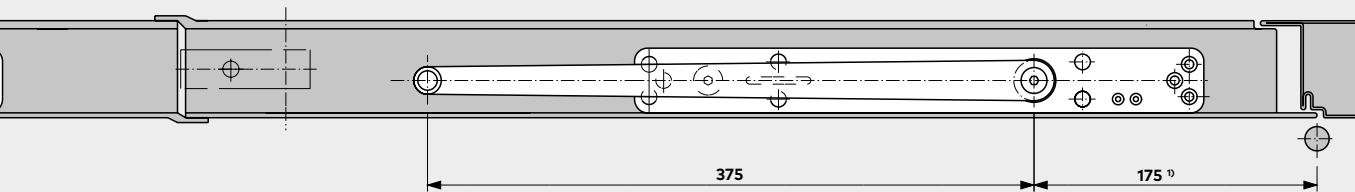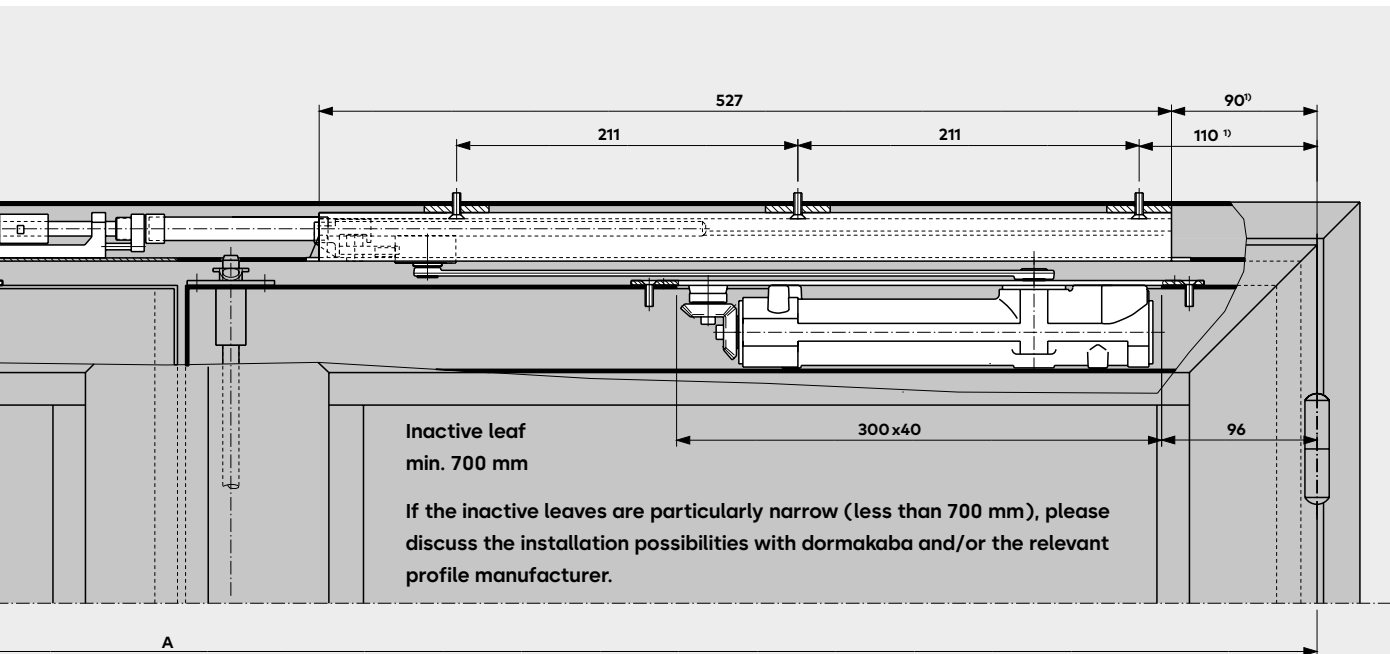

F When installed in fire and smoke check doors, ensure that the MK 397 carry bar is also fitted.

Smoke detection control panel RMZ

Smoke detector RM-N


Radio smoke detector RM-F with radio module FM AP

The RMZ in the Contur design and RM-N smoke detectors provide the ideal complement to the ITS 96 system for passive fire protection. They are designed in accordance with the latest codes issued by the German Institute for Building Technology and ensure perfect interaction between all the devices employed for holding open fire and smoke check doors – whatever the situation. As an alternative to the RM-N smoke detector, the RM-F radio smoke detectors can also be connected to the smoke detection control unit via the FM-AP radio module.

Data and features		RMZ	RM-N	FM AP	RM-F
Functions	Smoke detector	●	●	–	●
	Release device	●	–	–	–
	Power supply unit	●	–	–	–
Smoke detection	Scattered light principle (optical sensor)	●	●	–	●
Fixing	Lintel or transom -mounted	●	–	●	–
	Ceiling-mounted	–	●	–	●
Connection of other detectors		●	–	●	–
Total installed load (max.) for hold-open device and other detectors in W		9.8	–	9.8	–
Power consumption of internal detectors in W		1.2	0.65	1.2	0.65
LED indicators	Alarm	●	●	●	●
	Standby	●	–	●	●
	Maintenance due	●	–	●	●
	Contaminated	●	–	–	●
Input voltage		230 V AC ± 10 %	24 V DC +15%, -10%	18–28 V DC	–
Output voltage		24 V DC	–	–	–
Detector operating voltage		24 V DC +15%, -10%	24 V DC	18–28 V DC	3 V DC
Input current (max.) in mA		75	20	13	–
Floating (no-volt) change-over contact Safety extra low voltage (SELV)		24 V AC/DC 2 A	30 V AC/DC 1 A	24 V AC/DC 1 A	–
Reset	Automatic	●	●	●	●
	Can be changed to manual reset ¹⁾	●	–	–	–
Functional check Smoke detection		●	●	–	●
Connection terminals for external manual release		●	–	–	–
Degree of protection		IP 30	IP 43	IP 40	IP 42
Ambient temperature in °C		–20, +40	–10, +60	–30, 70	–30, 70
Weight in kg		0.25	0.15	0.065	0.168
Dimensions in mm	Length	379	∅ 100	148.2	∅ 80
	Overall depth	34		30.4	
	Height	30	44	28.6	70
Compliant with EN 54 Part 7		●	●	●	●
CE-mark for building products		●	●	●	●

● Yes – No

¹⁾ Necessary in conjunction with the ITS 96 FL free-swing door closer

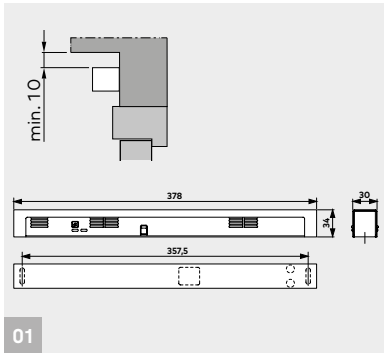

01 Smoke detection control panel RMZ


The smoke detection control panel RMZ in the Contur design provides a 24 V DC supply for all the hold-open devices connected to it. In the event of an alarm or power failure, it de-energises the devices (release function). It has an automatic reset which can be switched to manual mode if required. A floating (no-volt) change-over contact and connections for both further detectors and for an external manual release device are also provided.

F Approval certification


The smoke detection control panel RMZ in the Contur design and RM-N smoke detectors have been granted general building approval by the German Institute for Building Technology, Berlin; acceptance inspection mandatory in Germany.

Regulations/Information


The smoke detector unit has to be replaced after 8 years according to DIN 14677. Having reached the replacement time, a light-emitting diode will light continuously.

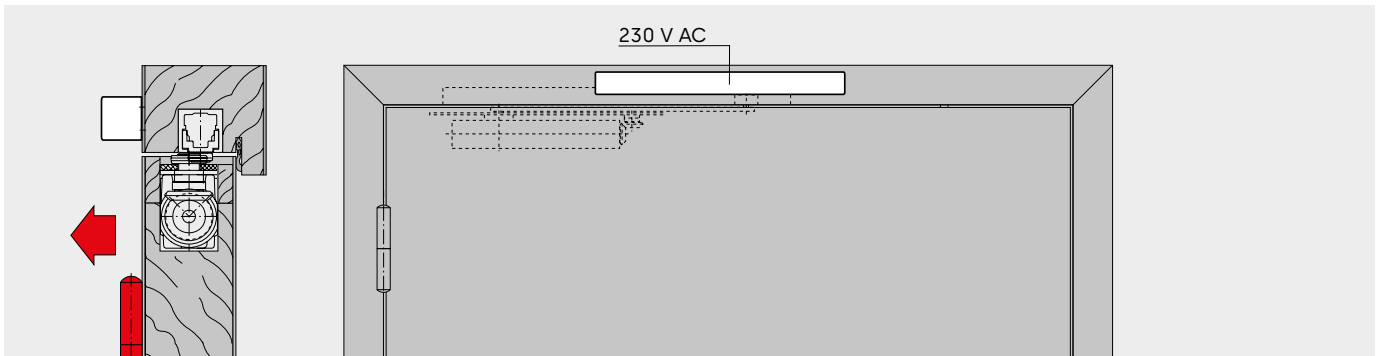


RMZ frame-mounted smoke detector on the pull side connected to an ITS 96 EMF.
Example: Anticlockwise-closing (ISO 6) door; mirror image applies to clockwise-closing (ISO 5) doors.

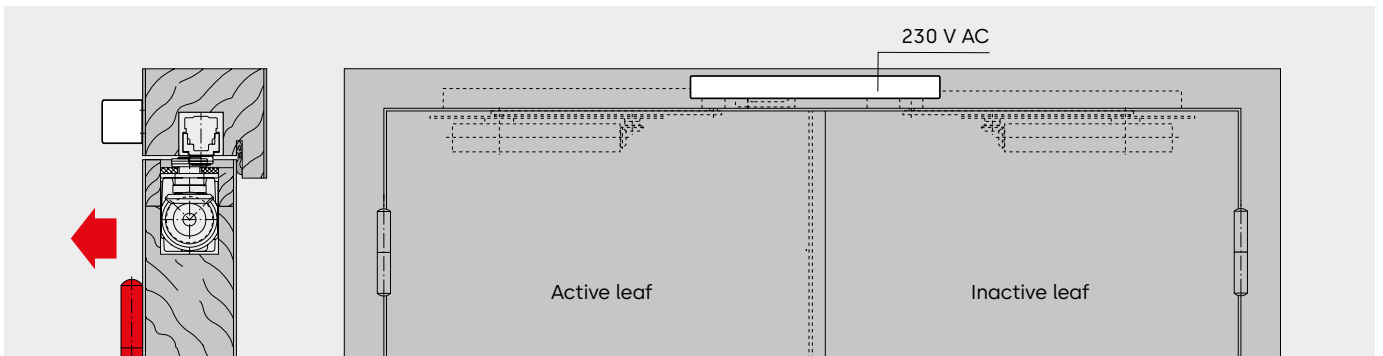

RMZ frame-mounted smoke detector on the pull side connected to an ITS 96 GSR-EMF.
Example: Anticlockwise-closing (ISO 6) active leaf; mirror image applies to clockwise-closing (ISO 5) active leaf.

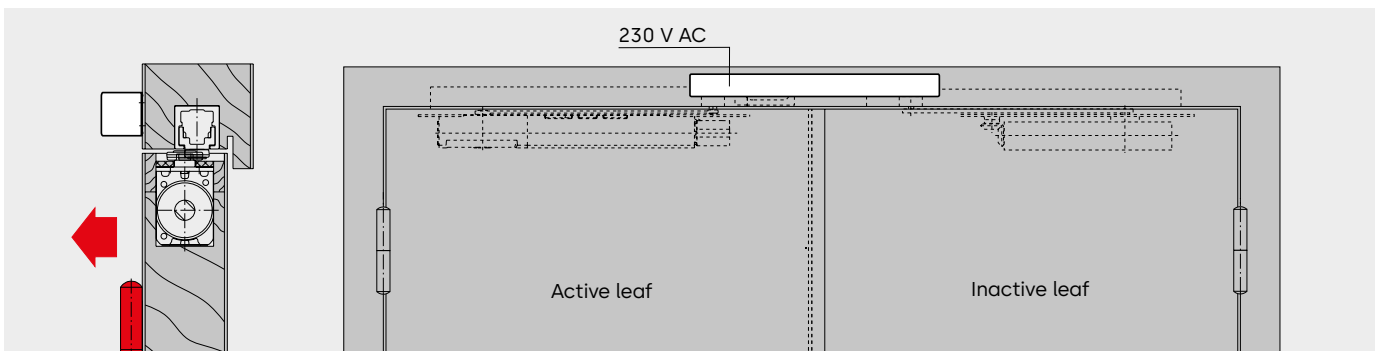


RMZ frame-mounted smoke detector on the pull side connected to an ITS 96 FL GSR.
Example: Anticlockwise-closing (ISO 6) active leaf; mirror image applies to clockwise-closing (ISO 5) active leaf.

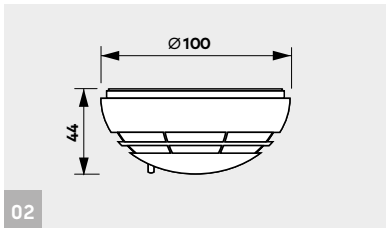

02 Smoke detector RM-N

The RM-N smoke detector ensures the early detection both of smoldering fires and open fires with smoke evolution. It can be connected to all dormakaba hold-open systems.

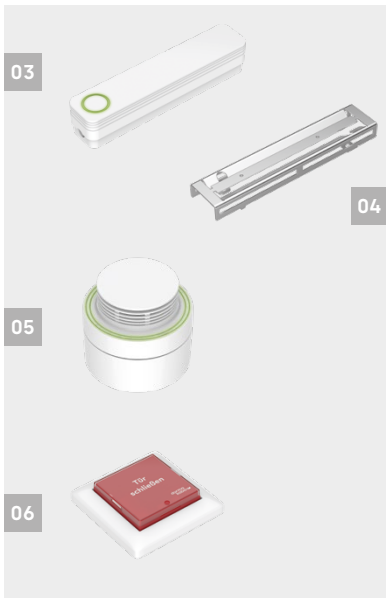

03 FM AP radio module

The FM AP radio module is connected to the smoke detection control unit and serves as a receiver for the RM-F radio smoke detectors and HT-F radio push buttons. Up to 8 radio devices can be registered. The multicolor, LED-illuminated ring indicates the operating status.

04 FM AP Console

Mounting console for the FM AP radio module

F Approval certification

RMZ in the Contur design and RM-N smoke detectors have been granted general building approval by the German Institute for Building Technology, Berlin; acceptance inspection mandatory in Germany.

05 RM-F radio smoke detector

The RM-F radio smoke detector with multicolor, LED-illuminated ring senses smoldering fires as well as open fires with smoke development. The LED-illuminated ring indicates the operating status. The integrated battery is designed for 8 years of operation and can be replaced.


06 HT-F radio push button

The HT-F radio push button adds manual switching capability to the system. A multicolor LED provides information about the operating status. The integrated battery is designed for 8 years of operation and can be replaced. The push button is supplied with a surface-mounted box, but can also be installed in a flush-mounted box with a minimum depth of 50 mm.

Example of connection plan RMZ with RM-N

Recommended cabling

230 V AC NYM 3 x 1,5 mm² (max.)
 24 V DC J - Y (St) Y 2 x 2 x 0,6 mm² / 0,8 mm²

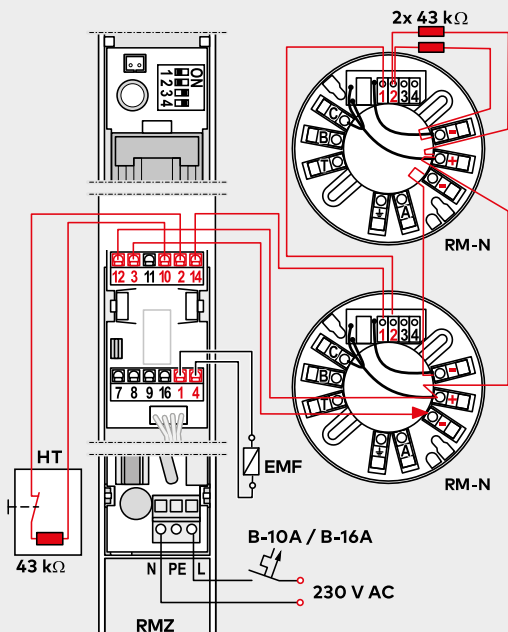


RMZ with FM AP/RM-F radio module



Recommended cabling

230 V AC NYM 3 x 1,5 mm² (max.)
 24 V DC J - Y (St) Y 2 x 2 x 0,8 mm²

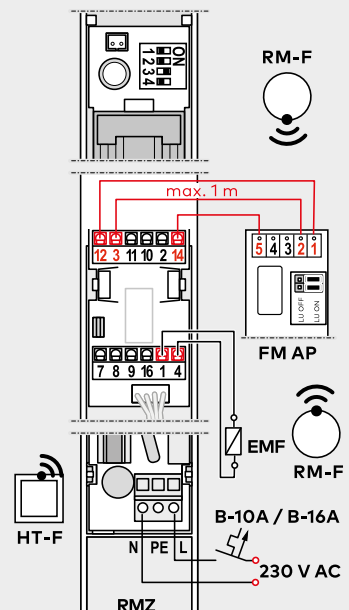

Specification texts

RMZ

Smoke detector in the Contur design, with standby and maintenance due indicators, integral power pack and optical smoke sensor for transom/lintel fixing. For release activation of dormakaba hold-open devices. A floating(no-volt) alarm contact and connections for further detectors and external manual release devices are provided. Can be switched to manual reset. One-piece cover. Overall height 30 mm. General building approval granted by DIBt, Berlin, for use in a hold-open system. Acceptance inspection of the system is mandatory in Germany.

Version

- RMZ with integrated power pack. Power supply 230 V AC, operating voltage 24 V DC
- RMZ DCW®. Smoke detector without power pack for connection to DCW® bus.
- Optional integral alarm module adding an audible signal to the visual indicator

Color

- Silver
- White (sim. to RAL 9106)
- Stainless steel "Design"
- Special colour _____ (sim. to RAL _____)

Make RMZ
RMZ DCW®

RM-N

Optical smoke detector, 24 V DC, for ceiling fixing. For use as second and third triggering detector on all dormakaba hold-open systems. With floating (no-volt) change-over contact. General building approval granted by

DIBt, Berlin and the VdS, Cologne; compliant to EN 54, Part 7. Acceptance inspection mandatory in Germany.

Color

- White, sim. to RAL 9003

Make

RM-N

FM AP

Hold-open radio system for the extension of wired hold-open systems. To be connected to the smoke detection control unit of the respective dormakaba hold-open system.

Version

- 1 FM AP radio module with 2 RM-F ceiling-mounted radio detectors
- Optionally with surface-mounted/flush-mounted HT-F AP/UP radio push button
- FM AP Console

Color

- Silver
- White (sim. to RAL 9016)
- Special color _____ (sim. to RAL _____)

RM-F

Usable as a second or third detector in conjunction with the FM AP radio module in all wired dormakaba hold-open systems.

With potential-free changeover contact. General building approval by DIBt, Berlin. Acceptance test required.

Color

- White (sim. to RAL 9016)

HT-F AP/UP


Radio push button for use on all wired dormakaba hold-open systems in conjunction with the radio module set. Radio push button for System 55 hold-open systems with surface-mounted box,

suitable for combination with flush-mounted inserts. Single-pole changeover contact, single frame, red sticker with white "Close door" lettering.


Version

- HT-F AP
- HT-F UP



Accessories

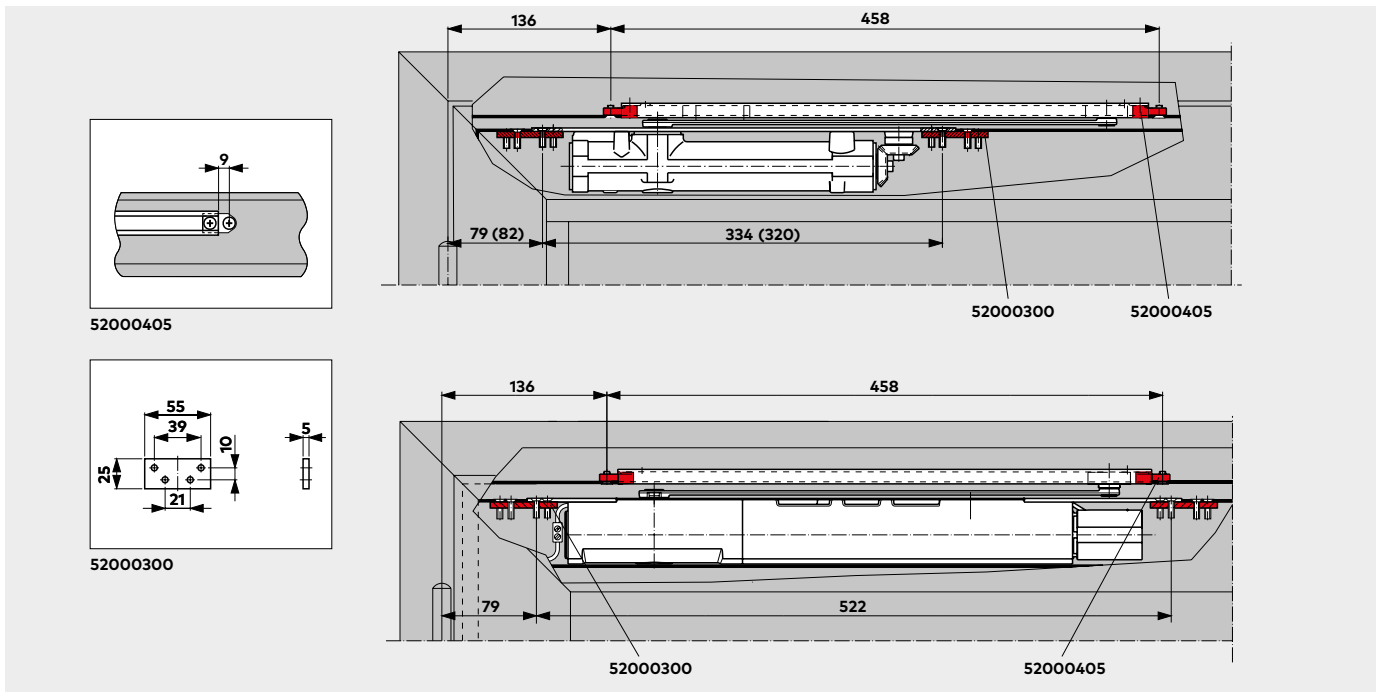

Fixings for **G 96 N20** and mounting plate for ITS 96.
 Example: Anticlockwise-closing (ISO 6) door; mirror image applies to clockwise-closing (ISO 5) doors.

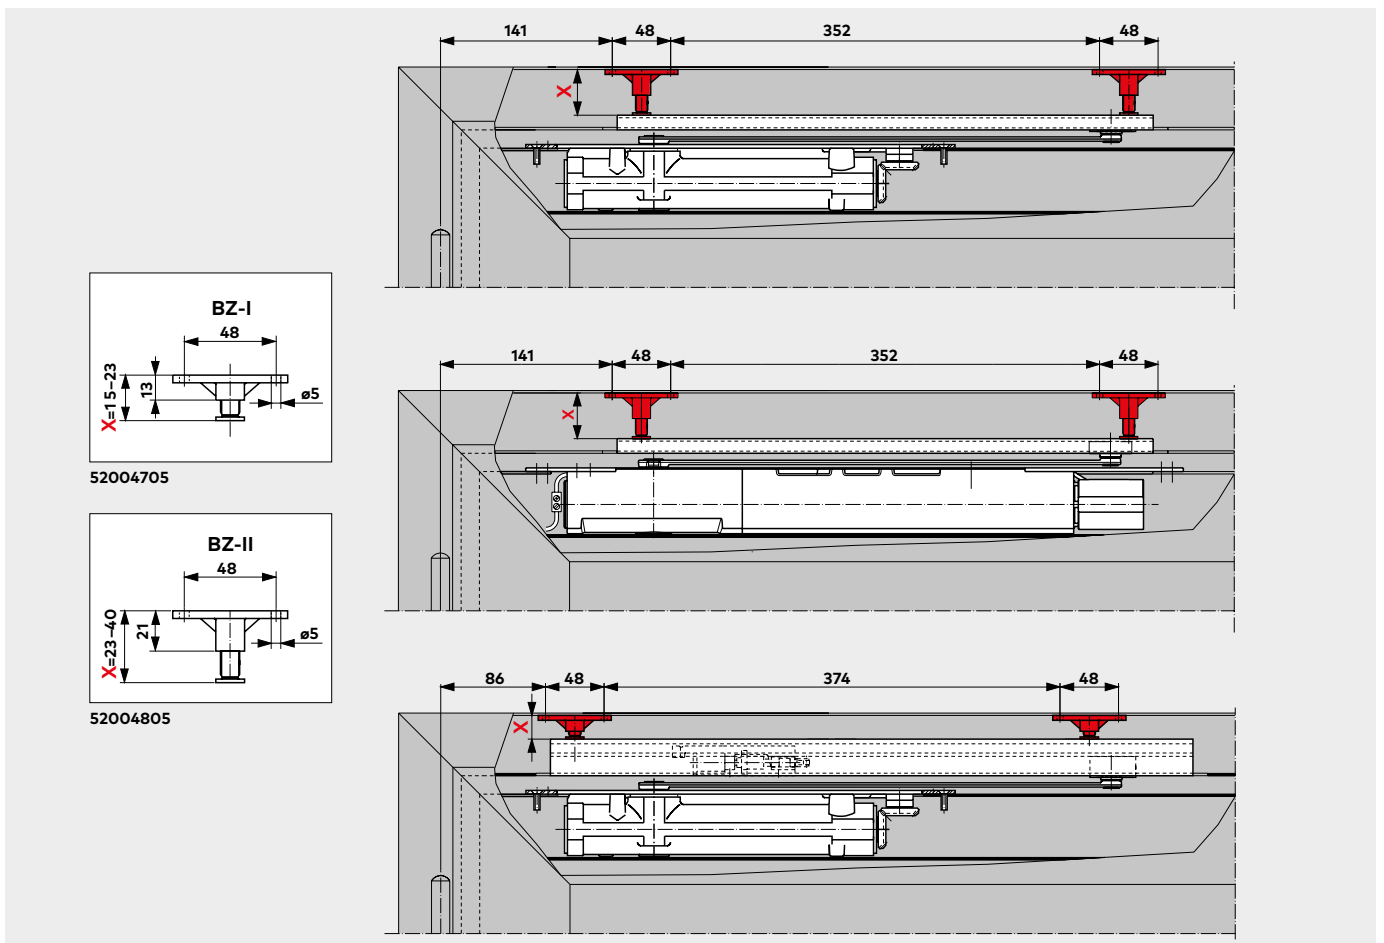

Fixings for height adjustment in relation to **G 96 N20, EMF, GSR**.
 Example: Anticlockwise-closing (ISO 6) door; mirror image applies to clockwise-closing (ISO 5) doors.

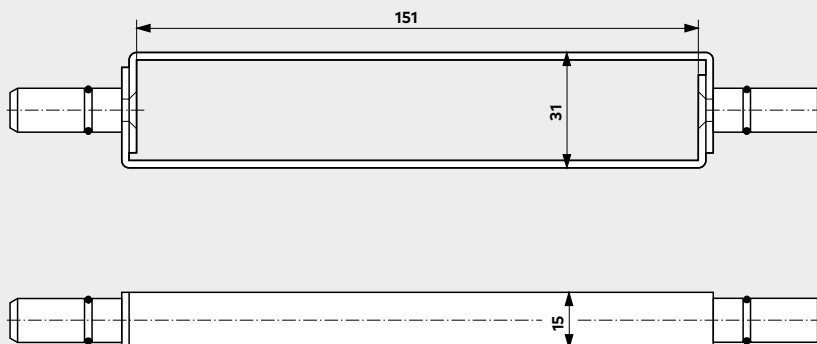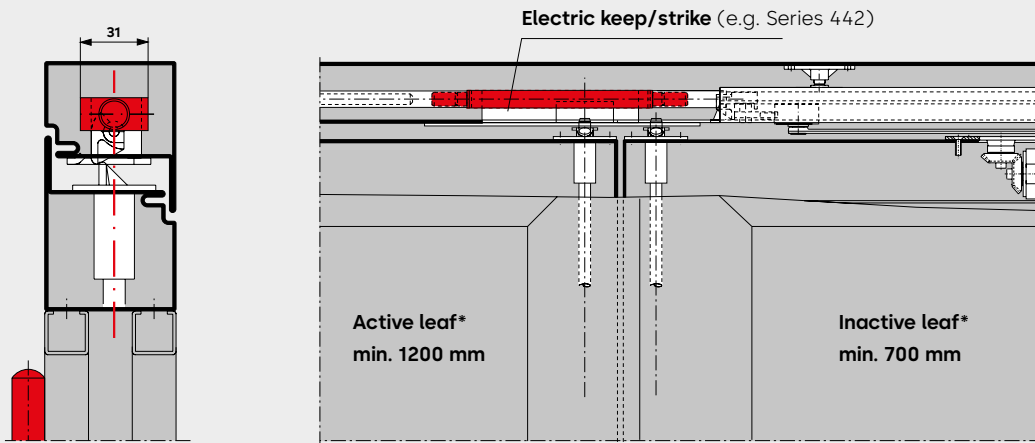

Connecting frame for **G 96 GSR** door co-ordinator for use on doors with electric keep/strike or overhead electro-mechanical locking device
 *Door width min. 1900 mm

Accessories


If the G 96 GSR door co-ordinators are required to operate independently of the ITS 96 door closers, e.g. in combination with the ED 100/ED 250 automatic swing door operator, the connection between the door coordinator and the door leaf is provided by means of GSR pivot blocks.

Specification text


Pivot bearing for closer-independent door co-ordination with G 96 GSR door co-ordinators.

Make

ITS GSR pivot block

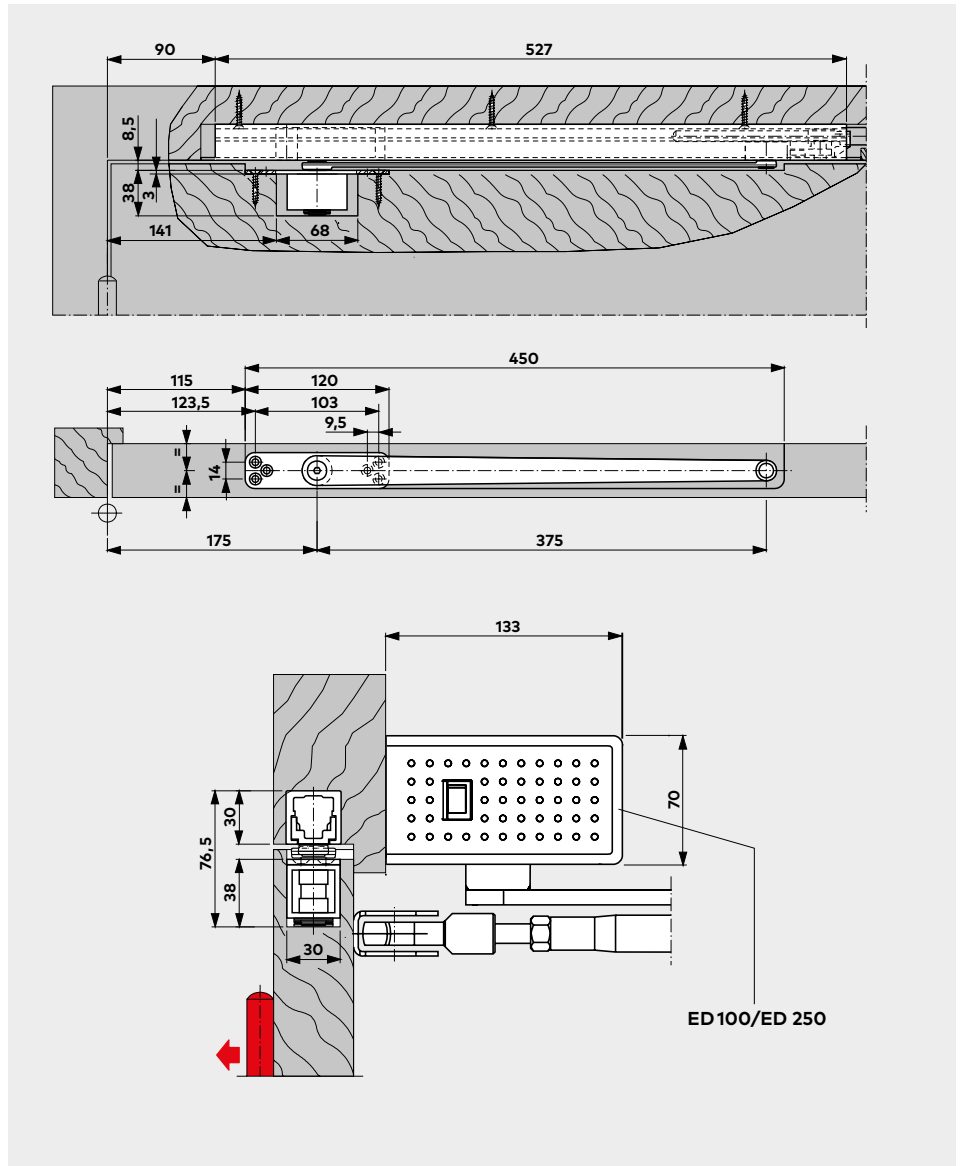

The pivot bearing used in conjunction with the G 96 N20 slide channel also acts as a **cushioned limit stay**.

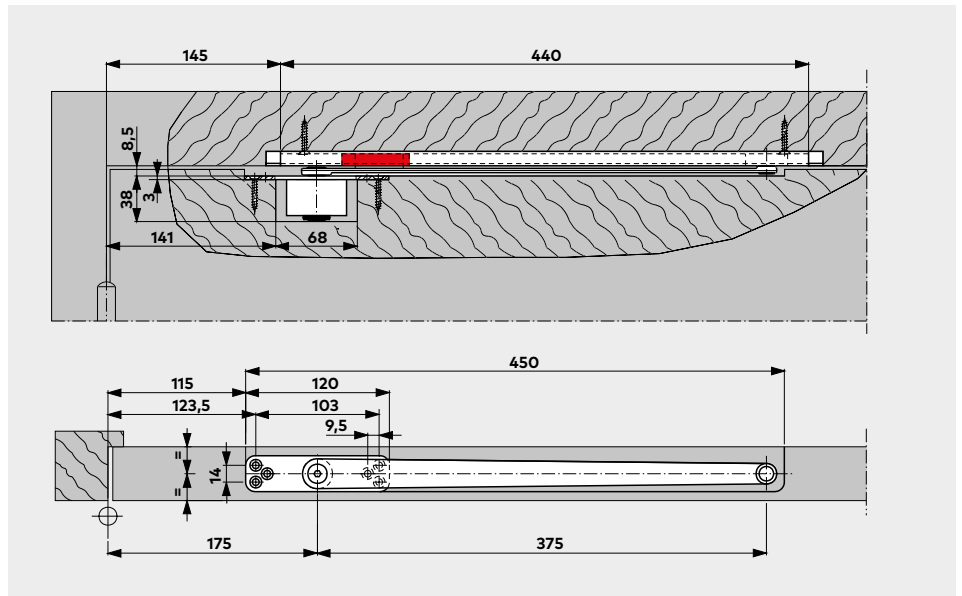

Hold-open systems regulations / information

The use of hold-open systems is subject to special regulations based on official approval requirements. These relate in particular to the final inspection (acceptance), continuous monitoring and maintenance.

The regulations and instructions provided below are intended as an aid, pursuant to statutory regulations

1. General

1.1 In the case of fire doors (and similar shutters/closures/barriers) that are held open by hold-open systems, the sweep area necessary for the closing operation must be kept constantly clear. This area must be clearly identified by lettering, floor markings or similar. Where necessary, structural measures must also be implemented to ensure that cables, leads, lines, pipes, stored/ deposited goods or components (e.g. false ceilings or other overhead items/ elements) are reliably prevented from falling into the sweep area.

2. Commissioning

2.1 In Germany and countries governed by DIN regulations: Following on-site installation of the operable hold-open system, its functional integrity and quality of installation must be confirmed by an acceptance in-spection procedure. The acceptance inspection may only be performed by skilled personnel of manufacturers of monitoring and/or hold-open devices, skilled personnel authorized by same, or skilled personnel from an accredited inspection agency.

3. Routine Inspection

3.1 The hold-open system must be kept by the operator in a constantly good operating condition, and inspected at least once a month to ensure that it is functioning properly.

that apply e.g. in Germany, to ensure that all participants are properly informed of the most important requirements that relate to the installation and operation of hold-open systems.

Further information can be found in the following documents:

1.2 Wherever possible, smoke detectors should be used for hold-open systems. For hold-open systems for fire doors in emergency escape routes, smoke detectors must be used.

1.3 Each hold-open device must also be capable of being released by hand, without adversely affecting the functional capabilities of the automatic release device. In the case of door closers with electro-magnetic hold-open, the manual release may be performed by

2.2 In Germany and countries governed by DIN regulations: Once the acceptance inspection has been successfully completed, the operator shall permanently fix on the wall, in the immediate vicinity of the door, a plate supplied by the manufacturer of the hold-open system measuring 105 mm x 52 mm and carrying the inscription

Hold-open system

Inspected by... (company logo with month and year of acceptance inspection) or equivalent

3.2 In addition, the operator is obliged at least once a year, or at shorter intervals if specified in the approval certificate, to inspect all the devices to ensure that they are operating and interacting properly and without fault, and to carry out or instigate adequate maintenance. The associated test, inspection and the maintenance work may only be performed by an expert or an appropriately trained person.

- Code of practice relating to hold-open systems issued by the German Institute for Building Technology, Berlin
- General building regulations pertaining to the approval of the hold-open system concerned
- EN 1155
- EN 14637




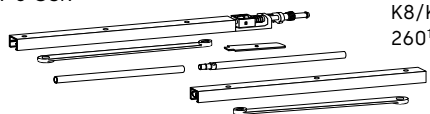
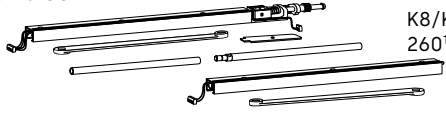

a small tug applied to the door leaf. If holding electro-magnets or free-swing door closers are used, a pushbutton must be provided to facilitate manual release.

The manual release pushbuttons employed for this purpose must be red and carry the wording "Close Door" or equivalent. The pushbutton must be located in the immediate vicinity of the door and must not be concealed by the door when this is held open.

2.3 The operator is to be provided with a certificate detailing the successful acceptance inspection; this certificate must be retained by the operator.









3.3 The scope, result and time of the periodic inspection are to be recorded. These records must be retained by the operator.

ITS 96 Range of equipment and optional accessories

					ITS 96	ITS 96 with 4 mm extended spindle	ITS 96 with 8 mm extended spindle			
					EN 2 – 4 ■ 52400150 EN 3 – 6 ■ 52250150	 EN 2 – 4 ■ 52410150 EN 3 – 6 ■ 52260150	EN 2 – 4 ■ 52420150 EN 3 – 6 ■ 52270150			
For specification text/product description, see page					6	6	6			
 G 96 N20	K8/K12	L	<input type="checkbox"/> 52003701	10	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
		R	<input type="checkbox"/> 52003801		<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
 G 96 EMF	K8/K12	L	<input type="checkbox"/> 52001501	14	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
		R	<input type="checkbox"/> 52001601		<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
 G 9 6 GSR	K8/K12 260 ¹⁾		<input type="checkbox"/> 52001801	16	<input type="checkbox"/>	2x <input checked="" type="checkbox"/>	<input type="checkbox"/>	2x <input checked="" type="checkbox"/>	<input type="checkbox"/>	2x <input checked="" type="checkbox"/>
			<input type="checkbox"/> 52004001		<input type="checkbox"/>	2x <input checked="" type="checkbox"/>	<input type="checkbox"/>	2x <input checked="" type="checkbox"/>	<input type="checkbox"/>	2x <input checked="" type="checkbox"/>
 G 96 GSR-EMF	K8/K12 260 ¹⁾		<input type="checkbox"/> 52001701	18	<input type="checkbox"/>	2x <input checked="" type="checkbox"/>	<input type="checkbox"/>	2x <input checked="" type="checkbox"/>	<input type="checkbox"/>	2x <input checked="" type="checkbox"/>
			<input type="checkbox"/> 52004201		<input type="checkbox"/>	2x <input checked="" type="checkbox"/>	<input type="checkbox"/>	2x <input checked="" type="checkbox"/>	<input type="checkbox"/>	2x <input checked="" type="checkbox"/>
 Fixing plates for ITS 96			52000300	32		△		△		△

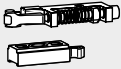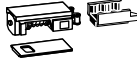
¹⁾ GSR door co-ordinator for inactive leaf of 540–700 mm (inactive leaf slide channel shortened, arm 260 mm)

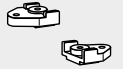²⁾ Pivot bearing with 4 mm and 8 mm extended spindle available on request


RF hold-open unit for G 96 N20	RF hold-open unit for G 96 GSR, inactive leaf	Fixing BZ I for narrowstile/ alu-framed doors	Fixing BZ II for narrowstile/ alu-framed doors	Fixings for mounting the G 96 N20 aluminium doors	Connecting frame for G 96 GSR	Pivot bearing	Carry bar MK 397
							
K8/K12 52005600	K8/K12 52003500	52004705	52004805	52000405	52004400	52003400 ²⁾	470029xx
11	-	32	32	32	33	34	-
△		△	△	△		△	
△		△	△	△		△	
		△	△				
		△	△				
	△	△	△		△	△	△
	△	△	△		△	△	△
		△	△		△		△
		△	△		△		△

Smoke detector system


RMZ
648000xx

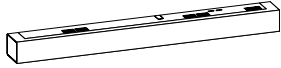


RM-N
64830900
packaging unit 2 pcs.

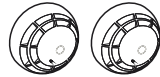


FM AP radio module
Silver (RAL 9006) 57290001
White (RAL 9016) 57290011
Special colour 57290009




RM-F radio smoke detector
57280011
packaging unit 2 pcs.



HT-F radio push button
57300011




FM AP Console
9900057005003



xx	Colour
01	Silver
11	White (RAL 9016)
09	Special colour
Also available in matching "Design" finishes	
04	Stainless steel
05	Polished brass
MK 397	
00	Galvanised
30	Special colour

* "Design" refers to the surface finish of the products

L  LH/anticlockwise closing (ISO 6)

R  RH-clockwise closing (ISO 5)

xx Colour


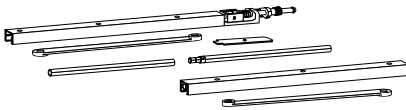

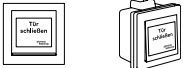
■ Closer body separate

□ Slide channel separate

△ Accessory









For specification text/product description, see page 30-32.









ITS 96 FL Range of equipment and optional accessories

				ITS 96 FL	ITS 96 FL with 4 mm extended spindle	ITS 96 FL with 8 mm extended spindle			
				EN 3 – 6 ■ 52630150	EN 3 – 6 ■ 52640150	EN 3 – 6 ■ 52650150			
				7	7	7			
For specification text/product description, see page									
G 96 N20 	K8/12	L □ 52003701	10	□	■	□	■	□	■
		R □ 52003801		□	■	□	■	□	■
G 96 GSR 	K8/K12 260 ¹⁾	□ 52001801	24	□	1x ■	□	1x ■	□	1x ■
		□ 52004001		□	1x ■	□	1x ■	□	1x ■
Fixing plates for ITS 96 / ITS 96 FL 		52000300	32		△		△		△
Manual release pushbutton 		HT-UP 19144601175 HT-AP 19144601175 +5158533332	-		△		△		△

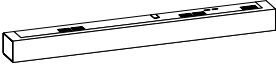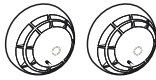Cable transition	KÜ 480	15813000
Cable spiral	KS 370	15819000
Detachable cable transition connector	LK-12	15813010

¹⁾ GSR door co-ordinator for inactive leaf of 540–700 mm (inactive leaf slide channel shortened, arm 260 mm)

ITS 96		ITS 96 with 4 mm extended spindle		ITS 96 with 8 mm extended spindle		Fixing BZ I for narrow- stile/ alu-framed doors	Fixing BZ II for narrow- stile/ alu-framed doors	Fixings for mounting the G 96 N20 aluminium doors	Connection frame für G 96 GSR	Carry bar MK 397
										
EN 2 – 4 ■ 52400150 EN 3 – 6 ■ 52250150		EN 2 – 4 ■ 52410150 EN 3 – 6 ■ 52260150		EN 2 – 4 ■ 52420150 EN 3 – 6 ■ 52270150		52004705	52004805	52000405	52004400	470029xx
	4		4		4	32	32	32	33	–
						△	△	△		
						△	△	△		
□	1x ■	□	1x ■	□	1x ■	△	△		△	△
□	1x ■	□	1x ■	□	1x ■	△	△		△	△
	△		△		△					

Smoke detector system		xx Colour	
RMZ 648000xx		01	Silver
RM-N 64830900 packaging unit 2 pcs.		11	White (RAL 9016)
FM AP radio module Silver (RAL 9006) 57290001 White (RAL 9016) 57290011 Special colour 57290009		09	Special colour
RM-F radio smoke detector 57280011 packaging unit 2 pcs.		Also available in matching "Design" finishes	
HT-F radio push button 57300011		04	Stainless steel
FM AP Console 9900057005003		05	Polished brass
		MK 397	
		00	Galvanised
		30	Special colour
* "Design" refers to the surface finish of the products			
		L	 LH/anticlockwise closing (ISO 6)
		R	 RH-clockwise closing (ISO 5)
		xx	Colour
		■	Closer body separate
		□	Slide channel separate
		△	Accessory

For specification text/product description, see page 30-32.

Space for your notes

Our Sustainability Commitment

We are committed to foster a sustainable development along our entire value chain in line with our economic, environmental and social responsibilities toward current and future generations. Sustainability at product level is an important, future-oriented approach in the field of construction. In order to give quantified disclosures of a product's environmental impact through its entire life cycle, dormakaba provides Environmental Product Declarations (EPD), based on holistic life cycle assessments.

www.dormakaba.com/sustainability



Our offering

Access Automation Solutions

Entrance Automation
Entrance Security



Access Control Solutions

Electronic Access & Data
Escape and Rescue Systems
Lodging Systems



Access Hardware Solutions

Door Closers
Architectural Hardware
Mechanical Key Systems



Services

Technical Support
Installation and commissioning
Maintenance and Repair



WN 05417451532, EN, 05/2024
Subject to technical modifications.



dormakaba.com

dormakaba
International Holding AG
Hofwissenstrasse 24
CH-8153 Rümlang
T +41 44 818 90 11
info@dormakaba.com
dormakaba.com