

RTS Series Package 29

Offset slide arm wood door and frame -
hinges/pivots

Installation instructions

08279271 – 02-2020

| EN |

dormakaba 


Table of contents

1	Installation instructions	3
1.1	Prepare frame and install closer	3
1.2	Prepare top of door	4
2	Adjustments	5
2.1	Adjust closing speeds	5
2.2	Optional 8511 applied stop (or stop by others)	5

1 Installation instructions

1.1 Prepare frame and install closer


Fig.1

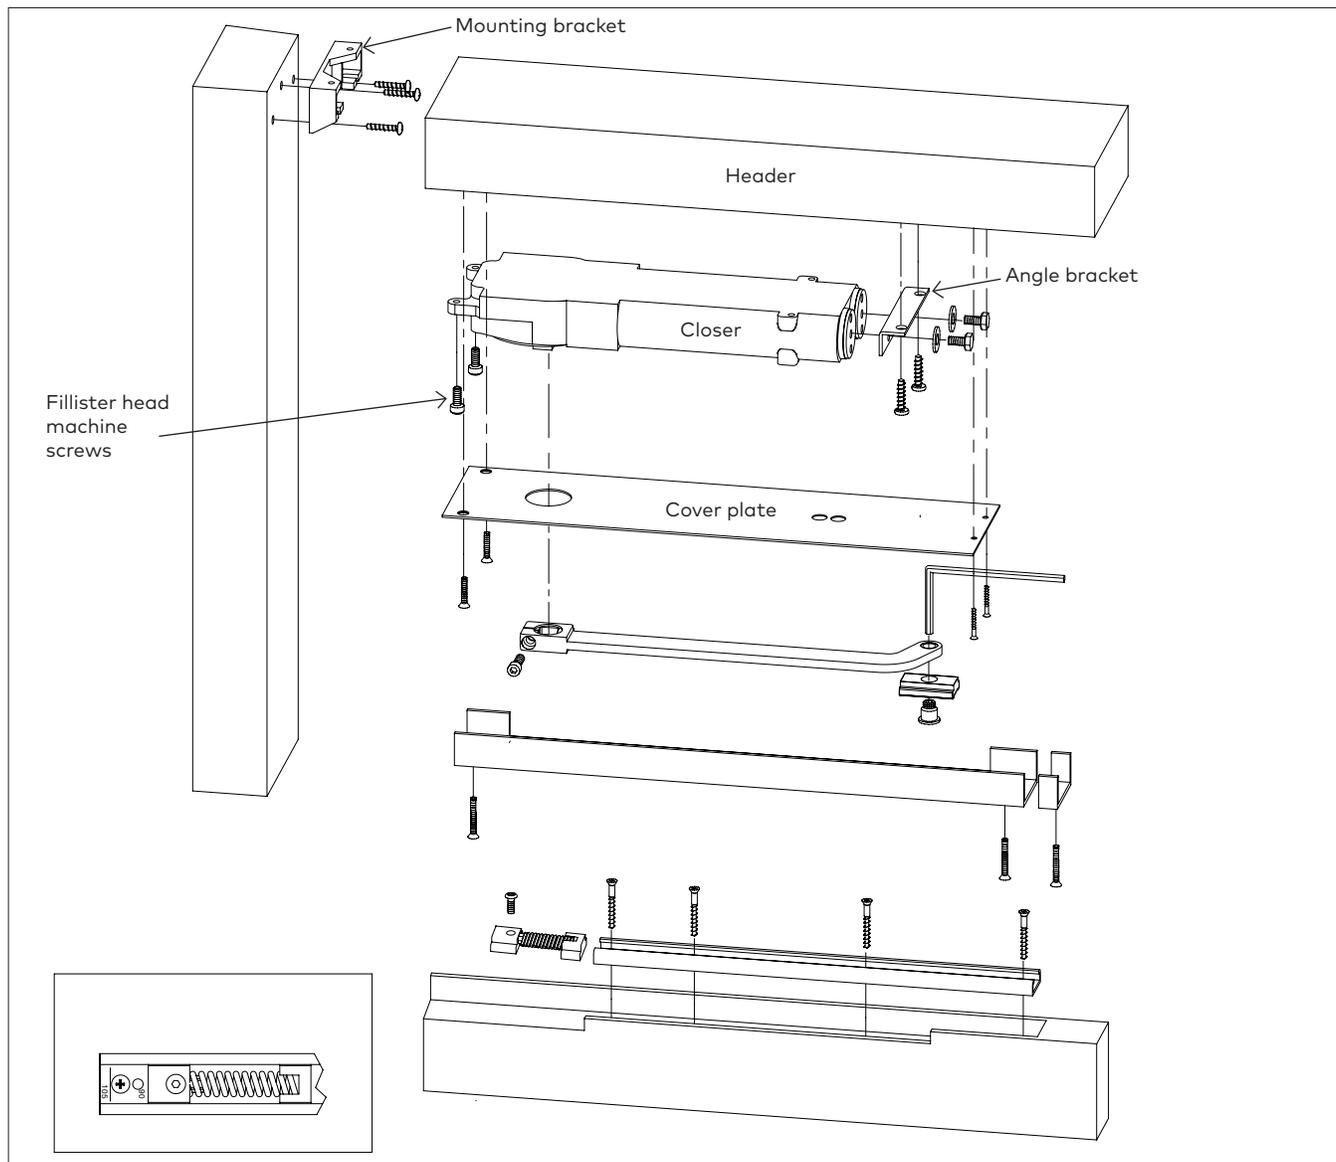

- | | |
|---|--|
| <p>1.1.1 Prepare header and side jamb according to template.</p> <p>1.1.2 Fasten mounting bracket to closer with three No. 10 pan head wood screws.</p> <p>1.1.3 Fasten angle bracket to closer with two hex head machine screws and flat washers.</p> <p>1.1.4 Install 2 fillister head machine screws into mounting tabs on closer; make approximately 3 turns.</p> | <p>1.1.5 Install closer into header by inserting mounting tabs into mounting bracket.</p> <p>1.1.6 Raise end of closer with angle bracket into position.</p> <p>1.1.7 Fasten angle bracket with the two No. 12 pan head wood screws.</p> <p>1.1.8 Install cover plate by sliding tab into frame.</p> <p>1.1.9 Fasten spindle end with two No. 8-32 flat head machine screws.</p> <p>1.1.10 Fasten opposite end to mounting bracket with two No. 6 flat head wood screws.</p> |
|---|--|

1.2 Prepare top of door

Fig.2

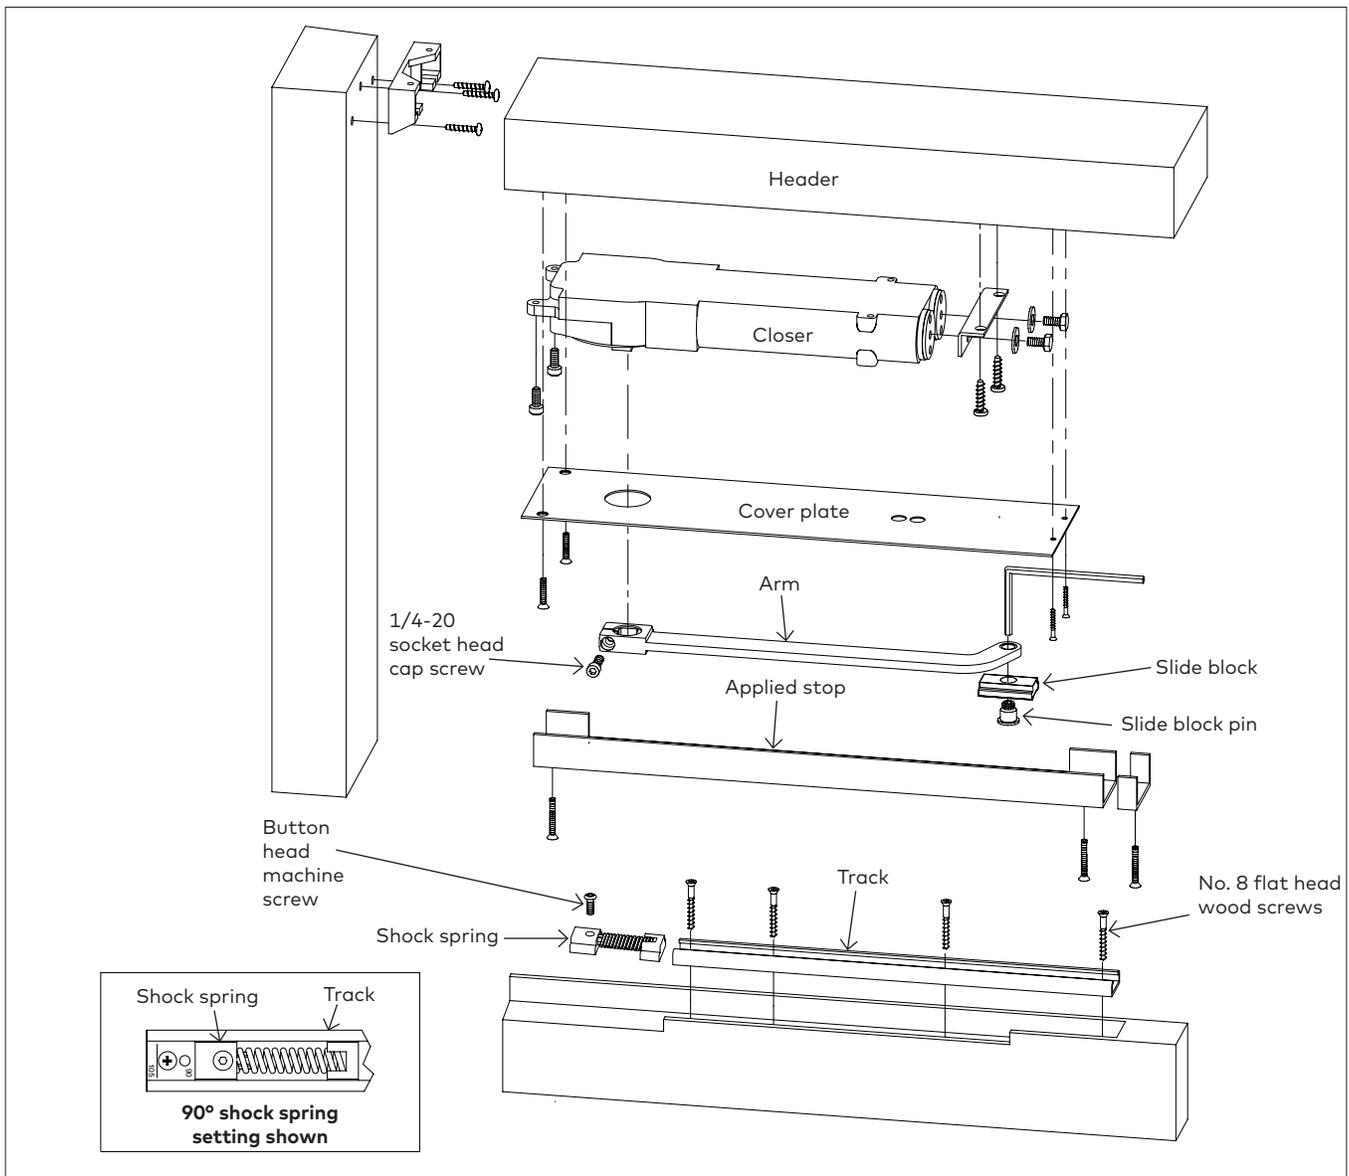


- 1.2.1 Prepare top of door according to template.
- 1.2.2 Assemble shock spring.
- 1.2.3 Slide assembled shock spring into track so end with screw faces the 90° and 105° markings on the track.
- 1.2.4 Align edge of shock spring assembly to coincide with 90° or 105° deadstop in closer.
- 1.2.5 Secure shock spring assembly to track with button head machine screw and 1/8" hex wrench.
- 1.2.6 Insert slide block pin through slide block before inserting slide block into track.
- 1.2.7 Fasten track to door with four No. 8 flat head wood screws.
- 1.2.8 Slide arm onto spindle as shown, and tighten the 1/4-20 socket head cap screw securely.
- 1.2.9 Position door at approximately 45° of opening.
- 1.2.10 Preload arm to a position where the hole in arm aligns with slide block pin.
- 1.2.11 Thread slide block pin into arm with 3/16" hex wrench.
- 1.2.12 **TIGHTEN SECURELY!**

2 Adjustments

2.1 Adjust closing speeds

Fig.3

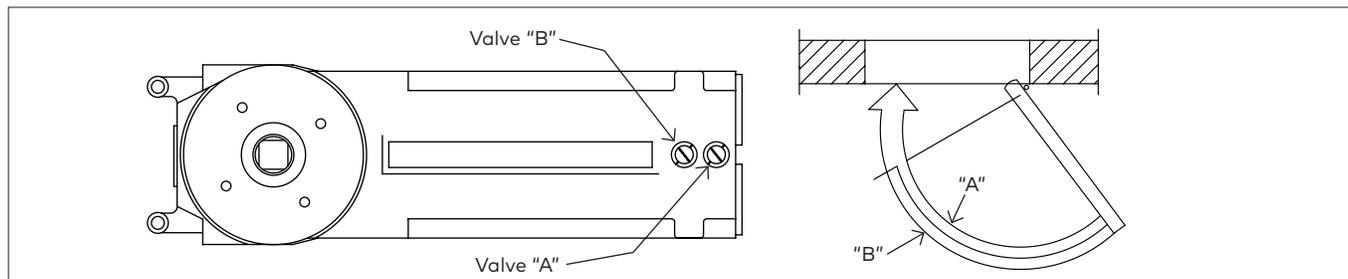

2.1.1 Valve "A" - controls closing speed from maximum opening angle to 0°.


- Clockwise - decreases closing speed
- Counter-clockwise - increases closing speed

2.1.2 Valve "B" - increased closing speed from maximum opening angle to 20°.

Counter-clockwise - increases closing speed.

2.2 Optional 8511 applied stop (or stop by others)

Fig.4

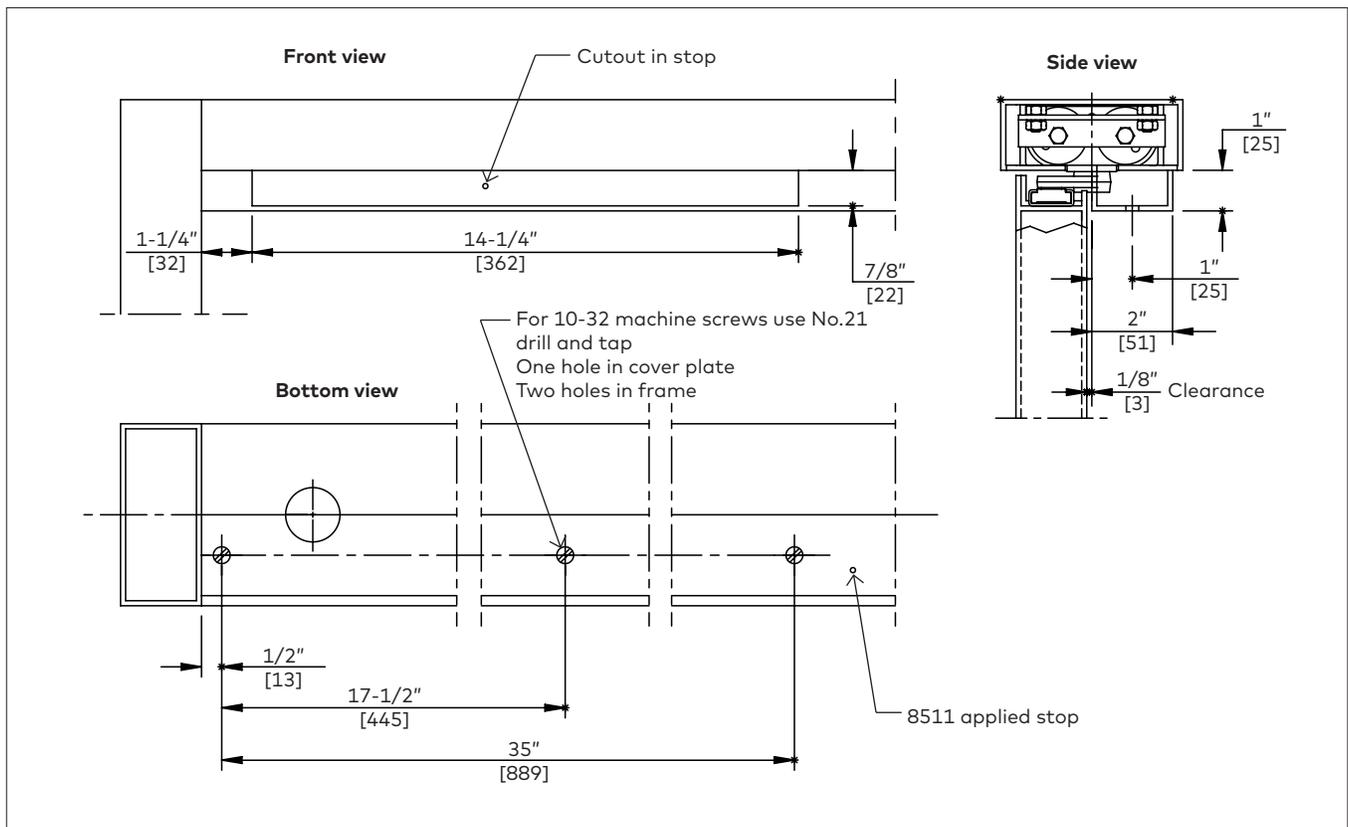

2.1.1 Prepare header according to template above.

2.1.2 Install applied stop as shown in Fig 2. with three No. 10-32 flat head machine screws.

